

FUSO V14.91 Function List

Note:

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Euro 2/3/4\Power transmission\Engine control module\Euro 2	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0098, A0099, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112, A0096, A0097, A0113, A0114, A0115, A0116,	
Euro 2/3/4\Power transmission\Engine control module\Euro 3	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0001, S0002, S0002, S0001, S0003, S0004, S0001
Euro 2/3/4\Power transmission\Engine control module\Euro 4	✓	✓	✓	✓		S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0003, S0011, S0001,
Euro 2/3/4\Power transmission\Transmission control module	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\ISS (Idling Stop and Start System)	✓	✓	✓	✓	A0570, A0110, A0571, A0572, A0573, A0574, A0575, A0576	
Euro 2/3/4\Power transmission\Integrated control	✓	✓	✓	✓	A0309, A0310, A0311, A0312, A0313, A0314	
Euro 2/3/4\Power transmission\Motor control	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\Battery control	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\BlueTec\SCR (Selective Catalytic Reduction)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\Air Suspension	✓	✓	✓	✓	A0579, A0580, A0581, A0582, A0583, A0584, A0585, A0586, A0587, A0359, A0360, A0586, A0587, A0588, A0589, A0590, A0591, A0592, A0593, A0594, A0595,	
Euro 2/3/4\Chassis\Anti-lock braking system	✓	✓	✓	✓	A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322, A0323, A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0334, A0335,	S0015
Euro 2/3/4\Chassis\EZGO (WHEEL BRAKE SPECIAL SYSTEM)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\MBECS (Motor vehicle Brake Energy Conservation System)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\Retarder	✓	✓	✓	✓	A0651	
Euro 2/3/4\Car body\Immobilizer	✓	✓	✓	✓	A0493, A0494	
Euro 2/3/4\Car body\SRS Airbag	✓	✓	✓	✓		
Euro 2/3/4\Car body\SWS (Smart Writing System)	✓	✓	✓	✓		
Euro 2/3/4\Car body\MDAS (Mitsubishi Driver's Attention monitoring System)	✓	✓	✓	✓		
Euro 2/3/4\Car body\Distance Warning	✓	✓	✓	✓		
Euro 2/3/4\Car body\MILS (Mitsubishi Intelligent Load monitoring System)	✓	✓	✓			
Euro 2/3/4\Car body\Headlamp Auto-Leveling	✓	✓	✓	✓		
Euro 5\Canter\EEC-Combustion engine Control unit	✓	✓	✓	✓	A0495, A0495, A0496, A0497, A0498, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0495, A0496, A0497, A0498, A0495, A0495, A0496, A0497, A0498,	S0016, S0017, S0018, S0019, S0020, S0021, S0022, S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0017, S0019, S0020, S0021, S0024,
Euro 5\Canter\TCM-DUONIC Control unit	✓	✓	✓	✓	A0514, A0515, A0516, A0517, A0518, A0519, A0520, A0521, A0522, A0523, A0524, A0525, A0526	S0041, S0042, S0043, S0043, S0043, S0043
Euro 5\Canter\ABS-Antilock brake system Control unit	✓	✓	✓	✓	A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322, A0323, A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0334, A0335,	S0015
Euro 5\Canter\SRS-Supplemental restraint system Control unit	✓	✓	✓			
Euro 5\Canter\ICUC-Instrument panel	✓	✓	✓	✓	A0534	S0041
Euro 5\Canter\IMMO-Immobilizer Control unit	✓	✓	✓	✓	A0535	
Euro 5\Canter\EZGO-Hill Start Assist Control unit	✓	✓	✓	✓	A0536, A0537, A0538, A0539, A0540, A0541, A0542	
Euro 5\Canter\HLAL-Control unit 'Automatic headlamp adjustment'	✓	✓	✓	✓	A0543	S0041, S0043
Euro 5\Canter\HVAC-Control and operating unit 'Automotive air conditioning'	✓			✓	A0544, A0545, A0546, A0547, A0548	
Euro 5\Canter\ISS-Automatic engine start/stop Control unit	✓	✓	✓	✓	A0549, A0550, A0551, A0552, A0553, A0554, A0555, A0556	S0044, S0042
Euro 5\Canter\SSAM-Signal Actuator Module	✓	✓	✓	✓	A0557, A0558, A0559, A0560	S0041
Euro 5\Canter\MPC-Multifunction camera	✓	✓	✓	✓		

Euro 5\Canter\RDF – Radar sensor	✓	✓	✓	✓		
Euro 5\Canter\VRDU – Driver assistance system	✓	✓	✓	✓		
Euro 5\Fighter\Power transmission\Engine control module\Euro 2	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0098, A0099, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112, A0096, A0097, A0113, A0114, A0115, A0116,	
Euro 5\Fighter\Power transmission\Engine control module\Euro 3	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0001, S0002, S0002, S0001, S0003, S0004, S0001
Euro 5\Fighter\Power transmission\Engine control module\Euro 4	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0001, S0003, S0011, S0001, S0003, S0011, S0001, S0001,
Euro 5\Fighter\Power transmission\Engine control module\Euro 5	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0001, S0003, S0011, S0001,
Euro 5\Fighter\Power transmission\Transmission control module	✓	✓	✓	✓		
Euro 5\Fighter\Power transmission\ISS (Idling Stop and Start System)	✓	✓	✓	✓	A0570, A0110, A0571, A0572, A0573, A0574, A0575, A0576	
Euro 5\Fighter\Power transmission\Integrated control	✓	✓	✓	✓	A0309, A0310, A0311, A0312, A0313, A0314	
Euro 5\Fighter\Power transmission\Motor control	✓	✓	✓	✓		
Euro 5\Fighter\Power transmission\Battery control	✓	✓	✓	✓		
Euro 5\Fighter\Power transmission\BlueTec/SCR (Selective Catalytic Reduction)	✓	✓	✓	✓		
Euro 5\Fighter\Power transmission\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0561, A0562	S0044
Euro 5\Fighter\Chassis\Anti-lock braking system	✓	✓	✓	✓	A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322, A0323, A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0334, A0335,	S0015
Euro 5\Fighter\Chassis\EZGO (WHEEL BRAKE SPECIAL SYSTEM)	✓	✓	✓	✓		
Euro 5\Fighter\Chassis\MBECS (Moter vehicle Brake Energy Conservation System)	✓	✓	✓	✓		
Euro 5\Fighter\Chassis\Retarder	✓	✓	✓	✓	A0651	
Euro 5\Fighter\Car body\Immobilizer	✓	✓	✓	✓	A0493, A0494	
Euro 5\Fighter\Car body\SRS Airbag	✓	✓	✓	✓		
Euro 5\Fighter\Car body\SWS (Smart Writing System)	✓	✓	✓	✓		
Euro 5\Fighter\Car body\Headlamp Auto-Leveling	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\CGW – Central gateway	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\ABS – Antilock brake system	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\ACM – AdBlue exhaust aftertreatment unit	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\ASAM – Advanced signal acquisition and actuation module	✓	✓	✓			
Euro 5\Fighter(19MODEL)\CDS – Central data memory	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\CTP – Common Telematics Platform	✓	✓	✓			
Euro 5\Fighter(19MODEL)\ECMD – Combustion engine Control unit	✓	✓	✓			
Euro 5\Fighter(19MODEL)\ICUC – Instrument panel	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\IMMO – Immobilizer Control unit	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\MPC – Multifunction camera	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\MS – Maintenance system	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\RDF – Radar sensor	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\SAS – Steering wheel angle sensor	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\SRRL – Short range radar Left	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\SRS – Supplemental restraint system	✓	✓	✓			

Euro 5\Fighter(19MODEL)\TCC – Truck Control Center	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\VRDU – Driver assistance system	✓	✓	✓	✓		
Euro 5\Fighter(19MODEL)\XMC – SAM with additional functions	✓	✓	✓	✓		
Euro 5\Super Great\6R10\Power transmission\MCM	✓	✓	✓			
Euro 5\Super Great\6R10\Power transmission\CPC	✓	✓	✓	✓	A0563	
Euro 5\Super Great\6R10\Power transmission\Transmission	✓	✓	✓	✓		
Euro 5\Super Great\6R10\Power transmission\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0561, A0562	S0044
Euro 5\Super Great\6R10\Chassis\ABS	✓	✓	✓	✓	A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322, A0323, A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0334, A0335,	S0015
Euro 5\Super Great\6R10\Chassis\Retarder	✓	✓	✓	✓	A0651	
Euro 5\Super Great\Other\CGW – Central gateway	✓	✓	✓	✓		
Euro 5\Super Great\Other\ACM – AdBlue exhaust aftertreatment unit	✓	✓	✓	✓		
Euro 5\Super Great\Other\APS3 – Adaptive power steering	✓	✓	✓	✓		
Euro 5\Super Great\Other\ASAM – Advanced signal acquisition and actuation module	✓	✓	✓			
Euro 5\Super Great\Other\CDS – Central data memory	✓	✓	✓	✓		
Euro 5\Super Great\Other\CLCS – Level control	✓	✓	✓	✓		
Euro 5\Super Great\Other\CPC	✓	✓	✓	✓	A0563	
Euro 5\Super Great\Other\CTP – Common Telematics Platform	✓	✓	✓			
Euro 5\Super Great\Other\DAGW – ACTIVE ATTENTION ASSIST System	✓	✓	✓	✓		
Euro 5\Super Great\Other\EAPU – Electronic Air-Processing Unit	✓	✓	✓	✓		
Euro 5\Super Great\Other\EBS – Electronic ignition lock	✓	✓	✓	✓		
Euro 5\Super Great\Other\EIS – Electronic ignition lock	✓	✓	✓	✓		
Euro 5\Super Great\Other\ICUC – Instrument panel	✓	✓	✓	✓		
Euro 5\Super Great\Other\PPC – Predictive Poewrtrain Control	✓	✓	✓	✓		
Euro 5\Super Great\Other\MCM	✓	✓	✓	✓	A0566, A0567, A0568, A0569, A0577, A0578	S0049, S0050, S0051, S0052, S0057, S0058
Euro 5\Super Great\Other\MPC – Multifunction camera	✓	✓	✓	✓		
Euro 5\Super Great\Other\MS – Maintenance system	✓	✓	✓	✓		
Euro 5\Super Great\Other\RDF – Radar sensor	✓	✓	✓	✓		
Euro 5\Super Great\Other\Retarder	✓	✓	✓	✓	A0651	
Euro 5\Super Great\Other\SAS – Steering wheel angle sensor	✓	✓	✓	✓		
Euro 5\Super Great\Other\SRRL – Short range radar Left	✓	✓	✓	✓		
Euro 5\Super Great\Other\SSAM – Single signal acquisition and actuator module	✓	✓	✓			
Euro 5\Super Great\Other\TCC – Truck Control Center	✓	✓	✓	✓		
Euro 5\Super Great\Other\Transmission	✓	✓	✓	✓		
Euro 5\Super Great\Other\TPM – Tire pressure monitor	✓	✓	✓	✓		
Euro 5\Super Great\Other\VRDU – Driver assistance system	✓	✓	✓	✓		
Euro 5\Super Great\Other\XMC – SAM with additional functions	✓	✓	✓	✓		

S0035	014 Cancellation of limitation of engine starts
S0036	015 Resetting of learned values of Combustion engine Control unit(AdBlue system Error and Scr Group Fault)
S0037	016 Injection valve (Learned value)
S0038	019 Boost pressure/Temperature sensor
S0039	010 BlueTec
S0040	015 Resetting of learned values of Combustion engine Control unit(Adblue system Error and Scr Group Fault)
S0041	Sachunmmer Mitsubishi
S0042	Coding Tool
S0043	Manual settings
S0044	Teach-in processes
S0045	000 Injection value unit pumps
S0046	001 Ignition angle
S0047	002 SCR Calibration
S0048	003 SCR Calibration 2
S0049	DPF RESET
S0050	EGR RESET
S0051	VGT RESET
S0052	NOx RESET
S0053	AdBlue system
S0054	AdBlue quality
S0055	SCR Calalytic Converter
S0056	AdBlue metering Device
S0057	VIN
S0058	High pressure line RESET
S0059	Reset of oil monitoring
S0060	Reset of fuel injector learned value
S0061	Reset of pressure limiting valve in rail learned value
S0062	Reset of rail pressure sensor learned value
S0063	Reset of lambda control tester learned value
S0064	Reset of air mass flow rate/intake air temperature sensor learned value
S0065	Reset of turbocharger learned value
S0066	Reset of EGR valve learned value
S0067	Reset of starter leatned value
S0068	Reset of AdBlue metering device value
S0069	Resetting of learned values of component' SCR catalytic converter'
S0070	Reset of DPF learned value
S0071	Reset of differential pressure sensor of DPF learned value
S0072	Reset of learned values of combustion engine control unit(Fault in AdBlue system)

Active Test Table

A0001	Fuel leak test
A0002	SGV Driving
A0003	EGR M/V - A
A0004	EGR M/V - B
A0005	VGT M/V - Boost
A0006	VGT M/V - Vent
A0007	POWERTARD M/V
A0008	EXH. BRAKE M/V
A0009	Sub Brake S/L
A0010	Cruise light
A0011	Diagnosis Lamp (R)
A0012	Diagnosis Lamp (U)
A0013	A/C SIG
A0014	Idle Up Stop Switch
A0015	Fuel Leak Check
A0016	TWV - 1# STOP
A0017	TWV - 2# STOP
A0018	TWV - 3# STOP
A0019	TWV - 4# STOP
A0020	TWV - 5# STOP
A0021	TWV - 6# STOP
A0022	Sub brake P/L
A0023	91 Silencers M / V
A0024	94 exhaust brake M / V
A0025	97 DIAG light (R)
A0026	98 DIAG light (U)
A0027	99 A / C signal
A0028	9A Idle boost cancel
A0029	9B SPV
A0030	9C TCV-OFF
A0031	9D TCV-ON
A0032	Exhaust Bypass Relay
A0033	ISS Intake Shutter
A0034	ISS Air Conditioner Fan Relay
A0035	ISS Buzzer Cut
A0036	ISS Lamp Cut
A0037	Intake Sliencer M/V
A0038	PS Cut Relay
A0039	ISS Operation P/L
A0040	idel uo CAN cel switch
A0041	Cruise Sub S/L
A0042	Cruise P/L
A0043	Cruise Retarder Switch 1
A0044	Cruise Retarder Switch 2
A0045	Cruise Retarder Switch 3
A0046	Curise Retarder Switch 4
A0047	EGR E-VRV M/V
A0048	Intake Metering M/V

A0049	Powertard M/V -R
A0050	Powertard M/V-L
A0051	Pre-Heat Lamp
A0052	HEATER RELAY
A0053	OVER HEAT BUZ
A0054	AB DIAG light (R)
A0055	AC DIAG light (U)
A0056	AD A / C signal
A0057	AE Idle boost Cancel
A0058	IDLE UP Cancel
A0059	SPV
A0060	TCV-OFF
A0061	TCV-ON
A0062	Actuation Test(Chinese mainland)
A0063	Actuation Test(Other regions)
A0064	EGR M/V - A(R)
A0065	EGR M/V - B(R)
A0066	EGR M/V - A(L)
A0067	EGR M/V - B(L)
A0068	A0 EGR M/V-A
A0069	A1 EGR M/V-B
A0070	A3 VGT M/V-Boost
A0071	A4 VGT M/V-Exhaust
A0072	A6 Power delay M/V
A0073	A7 Exhaust brake M/V
A0074	A9 ASC lights
A0075	B2 Fuel leakage detection
A0076	EGR ADVANCE
A0077	EXH BRAKE SOL
A0078	W/LAMP(AMBER)
A0079	EXH LAMP
A0080	W/LAMP(RED)
A0081	TDC CHECK
A0082	EGR M/V - C
A0083	Powertard M/V - R
A0084	Exhaust Brake M/V
A0085	Sub Brake P/L
A0086	Cruise Lamp
A0087	Air Conditioner Signal
A0088	ISS IND Lamp
A0089	ISS Evaporator Pan Relay
A0090	ISS Starter Relay(M)
A0091	ISS Starter Relay(S)
A0092	ISS H/LP Cut
A0093	ISS ENG INFO
A0094	Diagnosis Lamp(R)
A0095	Diagnosis Lamp(U)
A0096	Fuel Leaking Check
A0097	VGT Test
A0098	EGR 1
A0099	Intake Metering Valve 1
A0100	VGT M/V1
A0101	VGT M/V2
A0102	VGT M/V3
A0103	Auxiliary Brake M/V 1
A0104	Auxiliary Brake Indicator Lamp
A0105	Glow Relay Driving Relay
A0106	Glow Indicator Lamp
A0107	Starter continous Electrical Current Protection Relay
A0108	EDU Relay
A0109	MIL Lamp
A0110	Diagnosis Lamp
A0111	Air Conditioning Switch 1
A0112	Idle Up Cancele Switch
A0113	Injector Test 1
A0114	Injector Test 2
A0115	Injector Test 3
A0116	Injector Test 4
A0117	EGR 2
A0118	EGR 3
A0119	Auxiliary Brake M/V1
A0120	Sub Brake M/V2
A0121	Glow Relay Indicator Light
A0122	Injector Test 5
A0123	Injector Test 6
A0124	Supply Pump Learned Value - Initialization
A0125	W/G M/V
A0126	Starter Continous Electrical Current Protection Relay
A0127	EDU Relay
A0128	MIL lamp
A0129	Diagnostic Lamp
A0130	DPF Forced Regeneration Lamp
A0131	Powertard M/V
A0132	ISS Intake Shutter M/V
A0133	EDU relay
A0134	Idle Up Cancele Switch
A0135	EGR
A0136	Air Intake Throttle
A0137	VGT
A0138	auxiliary brake M/V 1

A0139	Relay for Glow Relay
A0140	glow indicator lamp
A0141	starter safety relay
A0142	MIL
A0143	diagnosis lamp
A0144	Injector test
A0145	Wastegate M/V
A0146	Intake metering valve 1
A0147	DPF Lamp
A0148	Exhaust Brake M/V 1 + M/V 2
A0149	Auxiliary brake M/V 2
A0150	Glow Relay Indicator Lamp
A0151	Air Conditioner Switch 1
A0152	Injector Test
A0153	Intake throttle 1
A0154	Starter Safety Relay
A0155	VGT 1
A0156	DPF Regeneration (Manual)
A0157	AC switch
A0158	GCU (GLOW PLUG)
A0159	VGT 2
A0160	VGT 3
A0161	Sub Brake M/V
A0162	Air Heater Relay Driving Relay
A0163	Air heater indicator lamp
A0164	ISS intake shutter
A0165	No. of urea remaining-warning lamp
A0166	No. of urea determination-warning lamp
A0167	SCR warning Buzzer
A0168	SCR warning lamp
A0169	DPF Indicator Lamp
A0170	01 Exhaust Flap actuator
A0171	02 VGT actuator
A0172	03 EGR valve actuator
A0173	11 Cylinder shut off
A0174	21 MIL Lamp
A0175	22 Diagnosis Lamp
A0176	23 Glow indicator Lamp
A0177	24 Auxiliary brake indicator Lamp
A0178	31 Glow plug
A0179	41 MeUn Zero delivery
A0180	42 PCV Opening
A0181	51 Urea Dosing Valve
A0182	A1 DPF Regeneration
A0183	A2 Urea leakage test
A0184	A3 Urea dosing test
A0185	A5 Emptying Urea lines
A0186	B1 VGT offset learning
A0187	EGR 1,3
A0188	Second DPF M/V
A0189	Auxiliary brake M/V 1
A0190	Diagnosis lamp
A0191	idel up Cancele switch
A0192	A1 EGR
A0193	A2 DPF Regeneration
A0194	A4 Intake throttle 1
A0195	A5 VGT
A0196	A6 Auxiliary Brake M/V 1
A0197	A7 Auxiliary Brake M/V 2
A0198	A8 Auxiliary Brake Indicator Lamp
A0199	A9 Relay for Glow Relay
A0200	AA Glow Indicator Lamp
A0201	AB Starter Safety Relay
A0202	AC EDU Relay
A0203	AD MIL Lamp
A0204	AE Diagnosis Lamp
A0205	AF DPF Indicator Lamp
A0206	B0 Air Conditioner SW
A0207	B1 Idle Up Cancel SW
A0208	B2 fuel leak check
A0209	B3 Injector Test 1
A0210	B4 Injector Test 2
A0211	B5 Injector Test 3
A0212	B6 Injector Test 4
A0213	EGR 1.3
A0214	Auxiliary Brake M/V 2
A0215	Air Conditioner Switch
A0216	Intake Throttle
A0217	Idel Up Cancel Switch
A0218	AC Auxiliary Brake M/V 1
A0219	AE Auxiliary Brake Indicator Lamp
A0220	B1 Starter Safety Relay
A0221	B3 MIL Lamp
A0222	B4 Diagnostic lights
A0223	B6 air conditioning switch 1
A0224	B9 Fuel leak inspection
A0225	BB Injector Test 1
A0226	BC Injector Test 2
A0227	BD Injector Test 3
A0228	BE Injector Test 4

A0229	BF Injector Test 5
A0230	C0 Injector Test 6
A0231	C2 Pump Adjustment Value Clear
A0232	A1 VGT M/V1
A0233	A2 VGT M/V2
A0234	A3 VGT M/V3
A0235	A5 EDU Relay
A0236	A7 Auxiliary Brake Indicator Lamp
A0237	A8 Relay for Glow Relay
A0238	A9 Glow Indicator Lamp
A0239	AA Starter Safety Relay
A0240	AB MIL Lamp
A0241	AC Diagnosis Lamp
A0242	AD Air Conditioner SW 1
A0243	AE Fuel Leak Check
A0244	AF Injector Test 1
A0245	B0 Injector Test 2
A0246	B1 Injector Test 3
A0247	B2 Injector Test 4
A0248	B3 Injector Test 5
A0249	B4 Injector Test 6
A0250	B5 Pump Adjustment Value Clear
A0251	B6 VGT adjustment
A0252	BA Refreshing mode for urea deposit
A0253	VGT M/V 1
A0254	VGT M/V 2
A0255	VGT M/V 3
A0256	DPF Lamp(Auto Reg)
A0257	Oil Level Warning Lamp
A0258	Idel Up Cance Switch
A0259	A1 EGR 1,3
A0260	A3 W/G M/V
A0261	A5 DPF Regeneration (Manual)
A0262	A7 Intake throttle 1
A0263	A8 DPF Lampy
A0264	A9 EDU Relay
A0265	AA DPF Outlet M/V
A0266	AF Relay for Glow Relay
A0267	B0 Glow Indicator Lamp
A0268	B8 Idle Up Cancel SW
A0269	AC Auxiliary Brake MA/1
A0270	DPF Regeneration Lamp
A0271	Intake throttle 1,0%
A0272	Intake throttle 1,10%
A0273	Intake throttle 1,20%
A0274	Intake throttle 1,30%
A0275	Intake throttle 1,40%
A0276	Intake throttle 1,50%
A0277	Intake throttle 1,60%
A0278	Intake throttle 1,70%
A0279	Intake throttle 1,80%
A0280	Intake throttle 1,90%
A0281	Intake throttle 1,100%
A0282	Auxiliary Barke M/V1
A0283	VGT adjustment
A0284	2nd Shift
A0285	3rd Shift
A0286	4th Shift
A0287	5th Shift
A0288	Neutral
A0289	EZGO M/V 1 ON
A0290	EZGO M/V 1 OFF
A0291	EZGO M/V 2 ON
A0292	EZGO M/V 2 OFF
A0293	EZGO Operation Lamp
A0294	EZGO W/L
A0295	Warning Buzzer
A0296	6th Shift
A0297	8th Shift
A0298	7th Shift
A0299	9th Shift
A0300	10th Shift
A0301	L/R Solenoid
A0302	U/D Solenoid
A0303	2nd Solenoid
A0304	O/D Solenoid
A0305	D/C Solenoid
A0306	ELC Solenoid
A0307	Exhaust Brake Relay
A0308	INVECS-II :Compulsory Stop
A0309	Cruise lights ON
A0310	Cruise lights OFF
A0311	Speed limit lights ON
A0312	Speed limit lights OFF
A0313	System warning light ON
A0314	System warning light OFF
A0315	01 ABS Lamp
A0316	02 ASR Lamp
A0317	03 Reducer relay
A0318	04 Outlet valve FL

A0319	05 Inlet valve FL
A0320	06 Outlet valve FR
A0321	07 FR inlet valve
A0322	08 Outlet valve RL
A0323	09 Inlet valve RL
A0324	10 Outlet valve RR
A0325	11 RR Inlet valve
A0326	12 ASR valve
A0327	16 ASR engine control
A0328	17 Rolling tester ASR inaction
A0329	21 Valve Test 1 FL
A0330	22 Valve Test 1 FR
A0331	23 Valve Test 1 RL
A0332	24 valve Test 1 RR
A0333	25 Valve test 2 FL
A0334	26 Valve test 2 FR
A0335	27 Valve test 2 RL
A0336	28 valve Test 2 RR
A0337	F CV Exhaust ON
A0338	F CV Intake ON
A0339	RL CV Exhaust ON
A0340	RL CV Intake ON
A0341	RR CV Exhaust ON
A0342	RR CV Intake ON
A0343	Warning ON
A0344	Warning OFF
A0345	Safety Relay ON
A0346	Safety Relay OFF
A0347	ASR Valve L ON
A0348	ASR Valve R ON
A0349	INA Lamp ON
A0350	INA Lamp OFF
A0351	FR Valve + Motor
A0352	FL Valve + Motor
A0353	RR Valve + Motor
A0354	RL Valve + Motor
A0355	FL Valve ON
A0356	FR Valve ON
A0357	RL Valve ON
A0358	RR Valve ON
A0359	Valve Relay ON
A0360	Valve Relay OFF
A0361	Motor Relay ON
A0362	Motor Relay OFF
A0363	ABS W/L ON
A0364	Exhaust Brake Relay ON
A0365	Exhaust Brake Relay OFF
A0366	ASR Cut Valve ON
A0367	ASR Cut Valve OFF
A0368	ASR Charge ON
A0369	ASR Charge OFF
A0370	ASR Lamp ON
A0371	ASR Motor ON
A0372	RL ASR Brake
A0373	RR ASR Brake
A0374	Before -HV ON
A0375	Rear left -HV ON
A0376	Rear right -HV ON
A0377	Front -DV ON
A0378	Rear left -DV ON
A0379	Rear right -DV ON
A0380	EXB relay ON
A0381	EXB relay OFF
A0382	Anti-lock braking system lights ON
A0383	Anti-lock braking system lights OFF
A0384	F Protection Maintain Valve ON
A0385	RL Protection Valve ON
A0386	RR Protection Valve ON
A0387	F Exhaust Valve ON
A0388	RL Exhaust Valve ON
A0389	RR Exhaust Valve ON
A0390	EXB Cut Relay ON
A0391	EXB Cut Relay OFF
A0392	ABS Warning ON
A0393	ABS Warning OFF
A0394	ASR Exhaust Valve ON
A0395	INA Lmap ON
A0396	INA Lmap OFF
A0397	Engine Control
A0398	FL Protection Maintain Valve ON
A0399	FR Protection Maintain Valve ON
A0400	RL Protection Maintain Valve ON
A0401	RR Protection Maintain Valve ON
A0402	FL Exhaust Valve ON
A0403	FR Exhaust Valve ON
A0404	Slip Detection Convert
A0405	ASR Valve ON
A0406	ASR Lamp OFF
A0407	AUS F M/V ON
A0408	AUS F M/V OFF

A0409	AUS R M/V ON
A0410	AUS R M/V OFF
A0411	PSS Over-Pressure
A0412	PSS Decompression-Pressure
A0413	AUS Lamp ON
A0414	AUS Lamp OFF
A0415	FL ABS M/V ON
A0416	FR ABS M/V ON
A0417	RL ABS M/V ON
A0418	RR ABS M/V ON
A0419	Parking Lamp ON
A0420	Parking Lamp OFF
A0421	ABS LAMP ON
A0422	ABS LAMP OFF
A0423	EZGO Lamp ON
A0424	EZGO Lamp OFF
A0425	Buzzer ON
A0426	Exhaust Brake Cut - ON
A0427	Exhaust Brake Cut - OFF
A0428	PSS/LB Over-Pressure
A0429	PSS/LB Decompression-Pressure
A0430	LB READY ON
A0431	LB READY OFF
A0432	LB HOLD ON
A0433	LB HOLD OFF
A0434	Horn ON
A0435	ABS Lamp ON
A0436	ABS Lamp OFF
A0437	Exhaust Brake Cut-ON
A0438	Exhaust Brake Cut-OFF
A0439	FL ABS MV ON
A0440	FR ABS MV ON
A0441	RL ABS MV ON
A0442	RR ABS MV ON
A0443	PARKING LAMP
A0444	EXB CUT ON
A0445	EXB CUT OFF
A0446	AUS Valve Front ON
A0447	AUS Valve Front OFF
A0448	AUS Valve Rear ON
A0449	AUS Valve Rear OFF
A0450	AUS Operation Lamp ON
A0451	AUS Operation Lamp OFF
A0452	ABS Valve FL ON
A0453	ABS Valve FR ON
A0454	ABS Valve RL ON
A0455	ABS Valve RR ON
A0456	ABS Warning Lamp ON
A0457	ABS Warning Lamp OFF
A0458	EZGO Warning Lamp ON
A0459	EZGO Warning Lamp OFF
A0460	EZGO Buzzer
A0461	Exhaust Brake Cut Relay ON
A0462	Exhaust Brake Cut Relay OFF
A0463	ASR M/V ON
A0464	ASR Engine Control
A0465	Solenoid Relay ON
A0466	Solenoid Relay OFF
A0467	FL ABS MV OFF
A0468	FR ABS MV OFF
A0469	RL ABS MV OFF
A0470	RR ABS MV OFF
A0471	AUS F MV ON
A0472	AUS F MV OFF
A0473	AUS R MV ON
A0474	AUS R MV OFF
A0475	RL ASR MV ON
A0476	RL ASR MV OFF
A0477	RR ASR MV ON
A0478	RR ASR MV OFF
A0479	Engine Control ON
A0480	Engine Control OFF
A0481	FL Protection Valve ON
A0482	FR Protection Valve ON
A0483	Front right ABS MV ON
A0484	Front left ABS MV ON
A0485	Rear right ABS MV ON
A0486	Rear left ABS MV ON
A0487	ABS motor ON
A0488	ABS warning light ON
A0489	Motor ON
A0490	Exhaust Brake Cut ON
A0491	Front Pressurization
A0492	Rear Pressurization
A0493	Internal FET action
A0494	Light action
A0495	000 Cold start
A0496	001 Pressure regulating valve in rail
A0497	002 Pressure limiting valve in rail
A0498	003 Injection valve

A0499	Boost pressure control
A0500	006 Exhaust gas recirculation actuator
A0501	007 Engine brake Solenoid valve
A0502	008 Test of AdBlue metering amount
A0503	009 AdBlue Leak tester
A0504	010 AdBlue return line
A0505	011 Regeneration of diesel particulate filter
A0506	012 Fan clutch
A0507	001 FMU(Fuel Metering device)
A0508	002 Pressure regulating values in rail
A0509	008 Test of DEF metering amount
A0510	009 DEF Leak tester
A0511	010 DEF delivery pump
A0512	010 AdBlue delivery pump
A0513	009 AdBlue leak tester
A0514	000 Shift Gear
A0515	001 Pressure line High
A0516	002 Pressure line Low
A0517	003 Oil cooler ON
A0518	004 Oil cooler OFF
A0519	005 Internal clutch plate ON
A0520	006 External clutch plate ON
A0521	007 Deactivation of shift lock
A0522	008 Electric motor Cooling Control valve ON
A0523	009 Blower motor Relays ON
A0524	010 Electric motor RUNNING(Discharging mode)
A0525	011 Electric motor RUNNING(Charging mode)
A0526	012 Turtle Warning lamp
A0527	Solenoid values
A0528	Manual bleeding
A0529	The left service barks was activated
A0530	The right service barks was activated
A0531	Calibration of component'Streeing angle sensor, ESP Sensors(Yaw rate sensor)'
A0532	Calibration of component'ESP Sensors(Yaw rate sensor)'
A0533	Calibration of component'Streeing angle sensor'
A0534	Instrument cluster
A0535	Transponder key Teach-in process
A0536	Control value"Rear axle service barke"
A0537	Control value"Front axle service barke"
A0538	Lock Barke Readiness indicator
A0539	Lock Brake Indicator lamps
A0540	Lock Brake Relays
A0541	Warning buzzer
A0542	Fanfare horns
A0543	Electric motor Automatic headlamp adjustment
A0544	Compressor
A0545	Actuator motor for fresh air/recirculated air flap
A0546	Actuator motor for blend air flap
A0547	Blower motor
A0548	Mode setting Electric motor
A0549	Control value "Rear axle service brake"
A0550	Control value "Front axle service brake"
A0551	Actuation of component load cut indicator
A0552	Actuation of component Automatic engine start/stop Indicator lamp
A0553	Actuation of component Warning lamp
A0554	Actuation of component Blower motor Relays
A0555	Actuation of component Headlamps and foglamps
A0556	Actuation of component Warning buzzer
A0557	Exterior illumination
A0558	Actuation of pump for windshield washer system 'Windshield'
A0559	Status of integrated ignition module
A0560	Air conditioning
A0561	000 SCR catalytic converter
A0562	001 Proportioning values
A0563	Actuation of digital outputs
A0564	000 Cylinder shutoff
A0565	002 Proportioning values
A0566	TC Boost Pressure Adjustment
A0567	VGT Actuator test
A0568	Control EGR valve position
A0569	DPF Regeneration
A0570	System Operation Lamp
A0571	Load Cut Relay 1
A0572	Load Cut Relay 2
A0573	Load Cut Relay 3
A0574	Intake Air Shutter Magnetic Valve
A0575	ISS Warning Buzzer
A0576	Sub Battery Relay
A0577	Desired Rail Pressure
A0578	Cylinder Cutout Test
A0579	Vehicle Height Up
A0580	Vehicle Height Down
A0581	Axle-Weight Transfer ON
A0582	Axle-Weight Transfer OFF
A0583	Safety Relay ON
A0584	Safety Relay OFF
A0585	Neutral Reset
A0586	Kneeling
A0587	Kneeling Reset
A0588	S/A SOFT

A0589	S/A MEDIUM
A0590	S/A HARD
A0591	Compressor A ON
A0592	Compressor A OFF
A0593	Compressor B ON
A0594	Compressor B OFF
A0595	Compressor C ON
A0596	Compressor C OFF
A0597	M/V Cut Relay ON
A0598	M/V Cut Relay OFF
A0599	FR Inlet M/V ON
A0600	FR Inlet M/V OFF
A0601	FR outlet M/V ON
A0602	FR outlet M/V OFF
A0603	FL Inlet M/V ON
A0604	FL Inlet M/V OFF
A0605	FL outlet M/V ON
A0606	FL outlet M/V OFF
A0607	Rear inlet M/V ON
A0608	Rear inlet M/V OFF
A0609	RR outlet M/V ON
A0610	RR outlet M/V OFF
A0611	RL outlet M/V ON
A0612	RL outlet M/V OFF
A0613	NR Valve ON
A0614	NR Valve OFF
A0615	Spring Inlet
A0616	Spring Outlet
A0617	Warning Lamp ON
A0618	Warning Lamp OFF
A0619	Vehicle Height Down
A0620	Vehicle Height Down Reset
A0621	Ferry On Board
A0622	Ferry On Board Reset
A0623	Air Cut M/V ON
A0624	Air Cut M/V OFF
A0625	Cylinder MV F ON
A0626	Cylinder MV F OFF
A0627	Cylinder MV R ON
A0628	Cylinder MV R OFF
A0629	Outlet MV F ON
A0630	Outlet MV F OFF
A0631	Outlet MV R ON
A0632	Outlet MV R OFF
A0633	Inlet MV F ON
A0634	Inlet MV F OFF
A0635	Inlet MV R ON
A0636	Inlet MV R OFF
A0637	Vehicle Height Lamp ON
A0638	Kneeling Lamp ON
A0639	Ferry Lamp ON
A0640	Malfunction Lamp F ON
A0641	Malfunction Lamp H ON
A0642	ECS Correction Soft
A0643	ECS Correction Hard
A0644	Vehicle Height Up Reset
A0645	W/P Release ON
A0646	W/P release OFF
A0647	Air Cylinder M/V ON
A0648	Air Cylinder M/V OFF
A0649	Air Cylinder Outlet ON
A0650	Air Cylinder Outlet OFF
A0651	ECU Reset
A0652	Water In Fuel
A0653	Grid Heater Lamp
A0654	High Coolant Lam
A0655	System Lamp
A0656	Oil Pressure Lamp
A0657	EGR Actuator
A0658	EGR Valve Learn
A0659	Cylinder Shut off
A0660	Exhaust
A0661	Cold start
A0662	Regeneration of diesel particulate filter
A0663	Shift Gear
A0664	Pressure line High
A0665	Pressure line Low
A0666	Oil cooler ON
A0667	Oil cooler OFF
A0668	Internal clutch plate ON
A0669	External clutch plate ON
A0670	Deactivation of shift lock
A0671	Control value'Rear axle service barke'
A0672	Control value'Front axle service barke'