



# JMC V14.01 Function list

**Note:**



Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
light truck type\Carey N800 BEV\VCU Vehicle Controller	✓	✓	✓	✓	✓	0001, 0002, 0003
light truck type\Carey N800 BEV\MCU Motor Controller	✓	✓	✓	✓		
light truck type\Carey N800 BEV\OBC car charger	✓	✓	✓	✓		
light truck type\Carey N800 BEV\BMS high voltage battery management system	✓	✓	✓	✓		0004, 0005, 0002
light truck type\Carey N800 BEV\DCDC DC-DC converter	✓	✓	✓	✓		
light truck type\Carey N800 BEV\SCU shifter	✓	✓	✓			0006, 0007, 0002
light truck type\Carey N800 BEV\BCM body controller	✓	✓	✓	✓	✓	0008, 0006, 0002
light truck type\Carey N800 BEV\ICM Combination Instrument	✓	✓	✓	✓	✓	0002, 0006, 0009
light truck type\Carey N800 BEV\ACM (air conditioning panel)	✓	✓	✓	✓		
light truck type\Carey N800 BEV\TBOX	✓	✓	✓	✓		0002, 0003
light truck type\Carey N800 BEV\GW network management controller	✓	✓	✓			
light truck type\KaiRui N800\Engine system (ECM)\N800 KR with Bosch system (4D30 IV)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\KaiRui N800\Engine system (ECM)\N800 Kai Rui with Bosch system (PUMA IV)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\KaiRui N800\Engine system (ECM)\N800 KR With Bosch system (4D30 V)	✓	✓	✓	✓	✓	0010, 0023, 0017, 0018, 0019, 0020, 0021, 0011, 0024, 0025, 0026
light truck type\KaiRui N800\Engine system (ECM)\N800 Kai Rui with Bosch system (PUMA V)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\KaiRui N800\Engine system (ECM)\Yunnei Power DEV Series China VI Diesel Engine	✓	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function list
light truck type\KaiRui N800\Anti-lock Brake System (ABS)\Asia-Pacific ABS	✓	✓	✓	✓	✓	Please refer to ABS Function list
light truck type\KaiRui N800\Anti-lock Brake System (ABS)\VIE Air Brake ABS	✓	✓	✓	✓	✓	0027, 0028, 0029
light truck type\KaiRui N800\Post-processing System (SCR)\N800 Kai Rui with Wuxi Weifu SCR system		✓	✓	✓		
light truck type\KaiRui N800\Post-processing System (SCR)\Weifu Lida NOX2.0 Post-processing (non-gas-assisted)	✓	✓	✓	✓	✓	Please refer to SCR Function list
light truck type\KaiRui N800\Post-processing System (SCR)\Weifu Lida NOX2.0 Post-processing (gas assist)	✓	✓	✓	✓	✓	Please refer to SCR Function list
light truck type\KaiRui N800\AMT gearbox (TCU)	✓	✓	✓	✓		0006
light truck type\KaiRui N800\BODY CONTROL SYSTEM\Body Control System (BCM)	✓	✓	✓	✓	✓	0008, 0030, 0006, 0002
light truck type\KaiRui N800\BODY CONTROL SYSTEM\Body Control System (BCM)-Tongzhi	✓	✓	✓	✓	✓	0031, 0032, 0008, 0002, 0033, 0006
light truck type\KaiRui N800\Combinatorial instrument\Combination instrument (IC1)	✓	✓	✓	✓	✓	0034, 0035
light truck type\KaiRui N800\Combinatorial instrument\Combination instrument (IC2)	✓	✓	✓	✓	✓	0036, 0006, 0009

light truck type\KaiRui N800\ESP-Wuhu Bethel	✓	✓	✓	✓	✓	0037, 0038, 0039, 0040, 0041, 0006
light truck type\KaiRui N800\Electronic clutch\Electronic Clutch (ICS)-Vorpo	✓	✓	✓	✓		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006
light truck type\KaiRui N800\Electronic clutch\Electronic clutch (ICS)	✓	✓	✓	✓		0002, 0050, 0051, 0052, 0053, 0054, 0006, 0042, 0044
light truck type\KaiRui N800\TBOX\TBOX-HiRain	✓	✓	✓			0002, 0055, 0056, 0006
light truck type\KaiRui N800\TBOX\Vehicle terminal (TBOX 2.0)	✓	✓	✓	✓		0002, 0055, 0056, 0006
light truck type\KaiRui N800\Jiulle airbag KD5.2 (SRS)	✓	✓	✓	✓		
light truck type\Kai Rui N800HP\Body Control Module-BCM	✓	✓	✓	✓	✓	0008, 0030, 0006, 0002
light truck type\Kai Rui N800HP\VIE Air Brake ABS	✓	✓	✓	✓	✓	Please refer to ABS Function list
light truck type\Kai Rui N800HP\Electronic clutch (ICS)	✓	✓	✓	✓		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006
light truck type\Kairui N601\Engine system (ECM)\Bosch EDC17 system_4D30 (China IV)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\Kairui N601\Engine system (ECM)\Bosch EDC17 system_PUMA (China IV)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\Kairui N601\Engine system (ECM)\Bosch EDC17C53 system_4D30 (China V)	✓	✓	✓	✓	✓	0010, 0023, 0017, 0018, 0019, 0020, 0021, 0011, 0024, 0025, 0026
light truck type\Kairui N601\Engine system (ECM)\Bosch EDC17 system _PUMA (China V)	✓	✓	✓	✓	✓	0010, 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021, 0022
light truck type\Kairui N601\Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓	Please refer to ABS Function list
light truck type\Kairui N601\Jiulle airbag KD5.2 (SRS)	✓	✓	✓	✓		
light truck type\N900 KaiWei\Engine system (ECM)\N900 Kaiwei Chaochai Engine - Dynamic Data Diagnosis				✓	✓	
light truck type\N900 KaiWei\Engine system (ECM)\N900 Kaiwei Chaochai Engine - Static Data Diagnosis	✓	✓	✓	✓		0057, 0058
light truck type\N900 KaiWei\Engine system (ECM)\N900 Kaiwei Yuchai Engine - Dynamic Data Diagnosis	✓	✓	✓	✓	✓	
light truck type\N900 KaiWei\Engine system (ECM)\N900 Kaiwei Yuchai Engine - Static Data Diagnosis	✓	✓	✓	✓		0057, 0058
light truck type\N900 KaiWei\Post-processing System (SCR)\N800 Kai Rui with Wuxi Weifu SCR system		✓	✓	✓		
light truck type\N900 KaiWei\Electronically controlled dispensing pump system	✓	✓	✓			
light truck type\Shunda N600\Engine system (ECM)	✓	✓	✓	✓	✓	0059, 0015, 0011, 0012, 0013, 0016, 0060, 0061, 0010, 0024, 0025, 0062, 0063, 0017, 0018, 0019, 0020, 0021
light truck type\Shunda N600\Electronic clutch (ICS)	✓	✓	✓	✓		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006
light truck type\Kai Yun N720\Engine system (ECM)	✓	✓	✓	✓	✓	0059, 0015, 0011, 0012, 0013, 0016, 0060, 0061, 0010, 0024, 0025, 0062, 0063, 0017, 0018, 0019, 0020, 0021
light truck type\Kai Yun N720\Anti-lock Brake System (ABS)\Asia-Pacific ABS	✓	✓	✓	✓	✓	Please refer to ABS Function list
light truck type\Kai Yun N720\Anti-lock Brake System (ABS)\VIE Air Brake ABS	✓	✓	✓	✓	✓	0027, 0028, 0029
light truck type\Kai Yun N720\Electronic clutch (ICS)	✓	✓	✓	✓		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006
light truck type\Kaiyun N710\Jiangling P1877 EDC17C81 Chian VI	✓	✓	✓	✓	✓	Please refer to BOSCH Function list
light truck type\Kaiyun N710\Engine system (ECM)	✓	✓	✓	✓	✓	0010, 0023, 0017, 0018, 0019, 0020, 0021, 0011, 0024, 0025, 0026

light truck type\Kai Yun/Shunda (old models)\493 engine (China IV)	✓	✓	✓	✓	✓	0064, 0024, 0065, 0023, 0035, 0017, 0018, 0019, 0020, 0021
light truck type\Kai Yun/Shunda (old models)\Bosch Common Rail-EDC16C39-Self-identification	✓	✓	✓	✓	✓	Please refer to BOSCH Function list
light truck type\Kai Yun/Shunda (old models)\Diesel Engine (Bosch Euro III Electronic Control System)	✓	✓	✓	✓	✓	0010, 0066, 0067
light truck type\Kai Yun/Shunda (old models)\Diesel Engine (Delphi Euro III Electronic Control) System)	✓	✓	✓	✓	✓	0010, 0022, 0068
light truck type\Kai Yun/Shunda (old models)\Electronically controlled dispensing pump system	✓	✓	✓			
light truck type\Kai Yun/Shunda (old models)\Asia-Pacific ABS	✓	✓	✓	✓	✓	Please refer to ABS Function list
light truck type\Kai Yun/Shunda (old models)\VIE Air Brake ABS	✓	✓	✓	✓	✓	0027, 0028, 0029
Pickup Truck Type\Classic domain tiger\Engine system (ECM)\Delphi Europe 4 Gasoline Engine	✓	✓	✓	✓	✓	0069, 0070, 0071, 0072
Pickup Truck Type\Classic domain tiger\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	✓	0058, 0013, 0012, 0014, 0015, 0016, 0065, 0023, 0069, 0010
Pickup Truck Type\Classic domain tiger\Engine system (ECM)\Bosch Diesel System (C63)	✓	✓	✓	✓	✓	0022, 0010, 0073, 0061
Pickup Truck Type\Classic domain tiger\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Pickup Truck Type\Classic domain tiger\Anti-lock Brake System (ABS)\ABS9	✓	✓	✓	✓	✓	Please refer to ABS Function list
Pickup Truck Type\Classic domain tiger\Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Pickup Truck Type\Classic domain tiger\Body Control System (BCM)	✓	✓	✓	✓	✓	0008, 0036, 0076, 0077, 0006
Pickup Truck Type\Classic domain tiger\Dashboard System (ICM)	✓	✓	✓	✓	✓	0078, 0079, 0080, 0069, 0081, 0082, 0083, 0084
Pickup Truck Type\Classic domain tiger\Tongzhi anti-theft system	✓	✓	✓	✓		0085, 0086, 0041
Pickup Truck Type\New domain tiger\Engine system (ECM)\Gasoline – UMC-EMS	✓	✓	✓	✓	✓	0006, 0002, 0087, 0088
Pickup Truck Type\New domain tiger\Engine system (ECM)\Diesel-Bosch-C63	✓	✓	✓	✓	✓	0022, 0010, 0025, 0026, 0073, 0061
Pickup Truck Type\New domain tiger\ZF-6-speed gearbox system (TCU)	✓	✓	✓	✓		0089, 0090, 0091
Pickup Truck Type\New domain tiger\Bosch – Body Stability Control (ESP)	✓	✓	✓	✓	✓	0092, 0093, 0094, 0095, 0096
Pickup Truck Type\New domain tiger\Continental-Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Pickup Truck Type\New domain tiger\Tongzhi – Body Controller (BCM)	✓	✓	✓	✓	✓	0008, 0036, 0076, 0077, 0006
Pickup Truck Type\New domain tiger\Visteon-Dashboard System (ICM)	✓	✓	✓	✓	✓	0078, 0079, 0080, 0069, 0081, 0082, 0083, 0084
Pickup Truck Type\New domain tiger\Visteon-Automatic Air Conditioning System (AC)	✓	✓	✓	✓		0009
Pickup Truck Type\New domain tiger\One button start control system (PEPS)\Gasoline – Lear-PEPS	✓	✓	✓	✓		0097, 0098, 0099, 0100
Pickup Truck Type\New domain tiger\One button start control system (PEPS)\Diesel-Lear-PEPS	✓	✓	✓			0097, 0098, 0100
Pickup Truck Type\New domain tiger\BorgWarner-four-wheel drive system (TCCU)	✓			✓	✓	0101, 0102, 0103
Pickup Truck Type\New domain tiger\Baolong-Tire Pressure Monitoring System (TPMS)	✓	✓	✓	✓		0104, 0105, 0106, 0107, 0108, 0109, 0110, 0111, 0112, 0006, 0009
Pickup Truck Type\New domain tiger\Electronic clutch (ICS)	✓	✓	✓	✓		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006

Pickup Truck Type\Collection Series\Engine system (ECM)\Bosch Common Rail-EDC16C39-Self-identification	√	√	√	√	√	Please refer to BOSCH Function list
Pickup Truck Type\Collection Series\Engine system (ECM)\Gasoline Engine (Delphio II Electronic Control System)		√	√	√	√	
Pickup Truck Type\Collection Series\Engine system (ECM)\Gasoline Engine (Delfoo III Electronic Control System)	√	√	√	√	√	0069, 0070, 0071, 0072
Pickup Truck Type\Collection Series\Engine system (ECM)\Diesel Engine (Bosch Euro III Electronic Control System)	√	√	√	√	√	0012, 0013, 0016, 0010, 0113
Pickup Truck Type\Collection Series\Engine system (ECM)\Bosch Diesel (Euro IV)	√	√	√	√		0069, 0010
Pickup Truck Type\Collection Series\Engine system (ECM)\493 engine (China IV)	√	√	√	√	√	0064, 0024, 0065, 0023, 0035, 0017, 0018, 0019, 0020, 0021
Pickup Truck Type\Collection Series\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	√	√	√	√	√	0069, 0072
Pickup Truck Type\Collection Series\Engine system (ECM)\Bosch D5 Project (EDC17C63)	√	√	√	√	√	0022, 0010, 0025, 0026, 0073, 0061
Pickup Truck Type\Collection Series\Anti-lock Brake System (ABS)\Asia-Pacific ABS System	√	√	√	√	√	Please refer to ABS Function list
Pickup Truck Type\Collection Series\Airbag System (SRS)\Oriental Jiu Le airbag		√	√	√		0114, 0115
Pickup Truck Type\Collection Series\Airbag System (SRS)\Oriental Joy Airbag (AB10)	√	√	√	√		0069
Pickup Truck Type\Collection series (new)\Diesel Engine Management Module (EMS)	√	√	√	√	√	0116, 0069, 0117, 0118, 0119, 0120, 0121, 0122
Pickup Truck Type\Collection series (new)\Gasoline Engine Management Module (EMS)	√	√	√	√	√	0069
Pickup Truck Type\Collection series (new)\Body Control Module (BCM)	√	√	√	√		
Pickup Truck Type\Collection series (new)\Anti-lock brake control module (ABS)	√	√	√	√		
Pickup Truck Type\Collection series (new)\Instrument (IC)	√	√	√	√		
Pickup Truck Type\Collection series (new)\Airbag Control Module (SRS)	√	√	√	√		
Pickup Truck Type\Collection series (new)\Remote control module (TBOX)	√	√	√			
Pickup Truck Type\Collection series (new)\All-wheel drive module (MT AWD)	√	√	√	√		
Pickup Truck Type\Collection series (new)\Tire Pressure Monitoring Module (TPMS)	√	√	√	√		
Pickup Truck Type\Baowei series\Engine system (ECM)\Bosch Common Rail-EDC16C39-Self-identification	√	√	√	√	√	Please refer to BOSCH Function list
Pickup Truck Type\Baowei series\Engine system (ECM)\Gasoline Engine (Delphio II Electronic Control System)		√	√	√	√	
Pickup Truck Type\Baowei series\Engine system (ECM)\Gasoline Engine (Delfoo III Electronic Control System)	√	√	√	√	√	0069, 0070, 0071, 0072
Pickup Truck Type\Baowei series\Engine system (ECM)\Diesel Engine (Bosch Euro III Electronic Control System)	√	√	√	√	√	0012, 0013, 0016, 0010, 0113
Pickup Truck Type\Baowei series\Engine system (ECM)\Bosch Diesel (Euro IV)	√	√	√	√		0069, 0010
Pickup Truck Type\Baowei series\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	√	√	√	√	√	0069, 0072
Pickup Truck Type\Baowei series\Engine system (ECM)\Bosch D5 Project (EDC17C63)	√	√	√	√	√	0022, 0010, 0025, 0026, 0073, 0061
Pickup Truck Type\Baowei series\Anti-lock Brake System (ABS)\Asia-Pacific ABS System	√	√	√	√	√	Please refer to ABS Function list
Pickup Truck Type\Baowei series\Airbag System (SRS)		√	√	√		0114, 0115

Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17C81 (China V, AdBlue) engine	√	√	√	√	√	Please refer to BOSCH Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ5D Wittur (China V) Engine	√	√	√	√	√	Please refer to SIDA Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Delphi Diesel Engine (China V)	√	√	√	√	√	Please refer to JXISUZU Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17C55 diesel system (4JB1, China IV)	√	√	√	√	√	0058, 0012, 0013, 0014, 0015, 0010, 0023, 0069
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 diesel system_Wolff (China IV)\Wolff EDC17CV54_CAN system (493 light truck)	√	√	√	√		0123, 0069, 0010
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 diesel system_Wolff (China IV)\Wolfe P1229 EDC17CV54 with EGR (K)	√	√	√	√	√	Please refer to BOSCH Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 diesel system_Wolff (China IV)\Wolfe P1229 EDC17CV54 with EGR (CAN)	√	√	√	√	√	Please refer to BOSCH Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ4E Weifu Electronic Control VP Pump System (China IV)\Weifu Electronic Control VP Pump (CAN Line)	√	√	√	√	√	Please refer to ZHENGZHOUNISSAN Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ4E Weifu Electronic Control VP Pump System (China IV)\Weifu Electronic Control VP Pump (K Line)	√	√	√	√	√	Please refer to QUANCHAI Function list
Pickup Truck Type\骐 bell (light steam) series\Engine system (ECM)\Jiangxi Isuzu Delphi Gasoline Engine (4G22B)	√	√	√	√	√	0069, 0072
Pickup Truck Type\Baodian N310 1.8GDI (gasoline direct injection)\N310 engine 1.8T system	√	√	√	√	√	0124, 0125, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147,
Pickup Truck Type\Baodian N310 1.8GDI (gasoline direct injection)\Asia-Pacific ABS System	√	√	√	√	√	Please refer to ABS Function list
Pickup Truck Type\Baodian N310 1.8GDI (gasoline direct injection)\Oriental Joy Airbag (AB10)	√	√	√	√		0069
Pickup Truck Type\Domain Tiger EV\Body Controller (BCM)	√	√	√	√	√	0008, 0006, 0162
Pickup Truck Type\Domain Tiger EV\Combination Meter (ICM)	√	√	√		√	
Pickup Truck Type\Domain Tiger EV\Vehicle Controller (VCU)	√	√	√	√	√	0041, 0163, 0006, 0164
Pickup Truck Type\Domain Tiger EV\Anti-lock Brake System (ABS)	√	√	√	√	√	0037, 0047, 0165, 0009
Pickup Truck Type\Domain Tiger EV\Air Conditioning Controller (ACM)	√	√	√	√		
Pickup Truck Type\Domain Tiger EV\Battery Pack (BMS)	√	√	√	√	√	
Pickup Truck Type\Domain Tiger EV\Voltage converter (DCDC)	√	√	√	√		
Pickup Truck Type\Domain Tiger EV\Electronic Power Steering (EPS)	√	√	√	√		0166, 0167, 0168, 0006
Pickup Truck Type\Domain Tiger EV\Motor Controller (MCU)	√	√	√	√		
Pickup Truck Type\Domain Tiger EV\Charge Controller (OBC)	√	√	√	√		0006
Pickup Truck Type\Domain Tiger EV\Shifter Module (SCU)	√	√	√			0006, 0169, 0009
Pickup Truck Type\Domain Tiger EV\Remote control equipment (TBOX)	√	√	√	√		0170, 0002, 0006
Pickup Truck Type\Domain Tiger EV\Tire Pressure Controller (TPMS)	√	√	√	√		0104, 0105, 0106, 0107, 0108, 0109, 0110, 0111, 0112, 0006, 0009
Pickup Truck Type\Domain Tiger EV\Continental-Airbag (SRS)	√	√	√	√	√	0035, 0074, 0002, 0075
Pickup Truck Type\Domain Tiger 5\Diesel-Mainland-EMS (JX4D20A5L)	√	√	√	√	√	0041, 0171, 0057, 0172, 0173, 0174, 0175, 0176
Pickup Truck Type\Domain Tiger 5\Engine System China V (EMS)	√	√	√	√	√	0116, 0069, 0177, 0178, 0117, 0118, 0119, 0120, 0121, 0122

Pickup Truck Type\Domain Tiger 5\Engine System China VI (EMS)	✓	✓	✓	✓		0116, 0179
Pickup Truck Type\Domain Tiger 5\ZF-6-speed gearbox - TCU	✓	✓	✓	✓		0089, 0090, 0091
Pickup Truck Type\Domain Tiger 5\Bosch - Body Stability Control (ESP)	✓	✓	✓	✓	✓	0092, 0093, 0094, 0095, 0096
Pickup Truck Type\Domain Tiger 5\Continental-Airbag (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Pickup Truck Type\Domain Tiger 5\Tongzhi - Body Controller - BCM	✓	✓	✓	✓	✓	0008, 0036, 0076, 0077, 0006
Pickup Truck Type\Domain Tiger 5\Visteon-Instrument-ICM	✓	✓	✓	✓	✓	0078, 0079, 0080, 0069, 0081, 0082, 0083, 0084
Pickup Truck Type\Domain Tiger 5\Visteon-Air Conditioning-AC	✓	✓	✓	✓		0009
Pickup Truck Type\Domain Tiger 5\Remote control module (TBOX)	✓	✓	✓			
Pickup Truck Type\Domain Tiger 7\Engine system (ECM)	✓	✓	✓	✓	✓	0116, 0069, 0177, 0178, 0117, 0118, 0119, 0120, 0121, 0122
Pickup Truck Type\Domain Tiger 7\Automatic Transmission Control Unit (TCU)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Body Control Module (BCM9)	✓	✓	✓	✓	✓	
Pickup Truck Type\Domain Tiger 7\Anti-lock brake control module (ABS)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Instrument (IC)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Airbag Control Module (SRS)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Remote control module (TBOX)	✓	✓	✓			
Pickup Truck Type\Domain Tiger 7\Air Conditioning Controller (AC)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Air conditioning control module (AC9)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Electronic shifter (SCU)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Electronic Stability System (ESP)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\All-wheel drive module (MT AWD)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Keyless start control module-8 speed (8AT PEPS)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Anti-theft module (IMMO)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 7\Tire Pressure Monitoring Module (TPMS)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 9\Engine System China V (EMS)	✓	✓	✓	✓	✓	0116, 0069, 0177, 0178, 0117, 0118, 0119, 0120, 0121, 0122
Pickup Truck Type\Domain Tiger 9\Engine System China VI (EMS)	✓	✓	✓	✓		0116, 0179
Pickup Truck Type\Domain Tiger 9\Automatic Transmission Control Unit (TCU)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 9\Body Control Module (BCM)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 9\Instrument (IC)	✓	✓	✓	✓		
Pickup Truck Type\Domain Tiger 9\Airbag Control Module (SRS)	✓	✓	✓	✓		

Pickup Truck Type\Domain Tiger 9\Remote control module (TBOX)	√	√	√			
Pickup Truck Type\Domain Tiger 9\Air Conditioning Controller (AC)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Electronic shifter (SCU)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Electronic Stability System (ESP)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Electric Power Steering System (EPS)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\All-wheel drive module (AWD)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\All-wheel drive module (MT AWD)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Keyless Start Control Module (PEPS)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Keyless start control module-8 speed (8AT PEPS)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Ripple Anti-Pinch Module (APM)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Mode switch (ATCM)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Combination Switch Module (SWM)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Entertainment System (MP5)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Wireless receiving module (RTM)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Seat Memory Control Module (SCM)	√	√	√			
Pickup Truck Type\Domain Tiger 9\Front View Monocular Camera (IPM)	√	√	√	√		
Pickup Truck Type\Domain Tiger 9\Radarr Control System (MRR)	√	√	√	√		
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 2 gasoline engine		√	√	√	√	
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 3 gasoline engine		√	√		√	0035, 0069
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 3 gasoline engine with EOBD	√	√	√	√	√	0069, 0070, 0071, 0072
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 3 diesel engine 3.1	√	√	√	√	√	Please refer to DELPHI Function list
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 3 Diesel Engine 3.2 upgrade version	√	√	√	√	√	Please refer to DELPHI Function list
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Delphi System\Delphi Gasoline Engine (Euro 5)	√	√	√	√	√	0069, 0072
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Ford Transit 2. 2L		√	√	√	√	
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Ford Transit 2. 4L	√	√	√	√		0180, 0181, 0182, 0183, 0184, 0185, 0186, 0187, 0188
light passenger vehicle\Transit Series\Ford Transit\Engine system (ECM)\Bosch Diesel Engine Europe 4	√	√	√	√	√	0010, 0011, 0012, 0013, 0014, 0015, 0016
light passenger vehicle\Transit Series\Ford Transit\Anti-lock Brake System (ABS)\ABS1. 0		√	√			
light passenger vehicle\Transit Series\Ford Transit\Anti-lock Brake System (ABS)\Ford Transit 2. 4L	√	√	√	√	√	Please refer to ABS Function list
light passenger vehicle\Transit Series\Ford Transit\Body Control System (BCM)	√	√	√	√		

light passenger vehicle\Transit Series\Ford Transit\Dashboard System (ICM)	√	√	√	√		
light passenger vehicle\Transit Series\Ford Transit\Reverse assist system (PDC)		√	√	√		
light passenger vehicle\Transit Series\Ford Transit\Parking System System (EPB)		√	√	√		
light passenger vehicle\Transit Series\Ford Transit\EGR system		√	√	√		
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Engine Control System	√	√	√	√	√	0116, 0189, 0190, 0191
light passenger vehicle\Transit Series\New Era Transit (2.2L)\BODY CONTROL SYSTEM	√	√	√	√		
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Anti-lock brake control system		√	√	√		0192, 0193, 0194, 0195, 0196, 0197, 0198
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Car parking aid module		√	√	√		
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Instrument control system	√	√	√	√		
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Audio Control Module (ACM)		√	√	√		
light passenger vehicle\Transit Series\New Era Transit (2.2L)\Speech Recognition Module (SRM)		√	√			
light passenger vehicle\Transit Series\New Transit (2.0L)\Engine Control System	√	√	√	√	√	0116, 0189
light passenger vehicle\Transit Series\New Transit (2.0L)\Anti-lock Brake System	√	√	√	√	√	
light passenger vehicle\Transit Series\New Transit (2.0L)\Audio control module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Body control module	√	√	√	√	√	
light passenger vehicle\Transit Series\New Transit (2.0L)\Front control display interface module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Heating ventilation and air conditioning	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Dashboard control module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Parking aid module	√	√	√	√		0199
light passenger vehicle\Transit Series\New Transit (2.0L)\Constraint control module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Remote heating and air conditioning	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Steering angle sensor module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Automotive Dynamics Module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\All-wheel drive module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Variable speed control module	√	√	√	√		0199
light passenger vehicle\Transit Series\New Transit (2.0L)\Headlight control module	√	√	√	√		
light passenger vehicle\Transit Series\New Transit (2.0L)\Accessory protocol module	√	√	√	√		
light passenger vehicle\Teshun\Engine system (ECM)\Bosch China V (EDC17C81)	√	√	√	√	√	0059, 0015, 0011, 0012, 0013, 0016, 0060, 0061, 0010, 0024, 0025, 0062, 0063, 0017, 0018, 0019, 0020, 0021
light passenger vehicle\Teshun\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	√	√	√	√	√	0069, 0072



light passenger vehicle\Teshun\Anti-lock Brake System (ABS)	√	√	√	√	√	0200
light passenger vehicle\Teshun\Airbag System (SRS)	√	√	√	√	√	0035, 0074, 0002, 0075
light passenger vehicle\Teshun\Electronic clutch (ICS)	√	√	√	√		0042, 0043, 0044, 0045, 0046, 0047, 0048, 0049, 0006
light passenger vehicle\Teshun L500EV\Battery Management System (BMS)	√	√	√	√		0201, 0002, 0006, 0169, 0009
light passenger vehicle\Teshun L500EV\Direct-to-direct converter (DCDC)	√	√	√	√		0002, 0006
light passenger vehicle\Teshun L500EV\Motor Controller (MCU)	√	√	√	√		0002, 0202, 0203, 0006, 0169
light passenger vehicle\Teshun L500EV\Charger Controller (OBC)	√	√	√	√		0002, 0006
light passenger vehicle\Teshun L500EV\Airbag Controller (SRS)	√	√	√	√	√	0204, 0205, 0002, 0206, 0006
light passenger vehicle\Teshun L500EV\Vehicle Management System (VCU)	√	√	√	√	√	0002, 0163, 0006, 0164, 0207
light passenger vehicle\Teshun L500EV\Anti-lock Brake System (ABS)	√	√	√	√	√	0002, 0006
light passenger vehicle\Teshun L500EV\Air Conditioning Controller (ACM)	√	√	√			
light passenger vehicle\Teshun L500EV\Body Controller (BCM)	√	√	√	√	√	0008, 0006, 0002, 0162, 0208
light passenger vehicle\Teshun L500EV\Telematics Box (TBOX)	√	√	√	√		0209, 0006, 0003
light passenger vehicle\Teshun L500EV\Electro-hydraulic power steering (EHPS)	√	√	√	√		
light passenger vehicle\Teshun L500EV\Shift control unit (SCU)	√	√	√		√	0002
light passenger vehicle\Teshun L500EV\Combination Meter (ICM)	√	√	√	√		
light passenger vehicle\Teshun L500EV\Rotation sensor (SAS)		√	√			0210, 0006
light passenger vehicle\Teshun China VI (N526)\Engine Control System	√	√	√	√	√	0116, 0069, 0121, 0122
light passenger vehicle\Teshun China VI (N526)\Body control module	√	√	√	√	√	
light passenger vehicle\Teshun China VI (N526)\Anti-lock brake control module	√	√	√	√		
light passenger vehicle\Teshun China VI (N526)\Instrument Control Module	√	√	√	√	√	
light passenger vehicle\Teshun China VI (N526)\Airbag control module	√	√	√	√		
light passenger vehicle\Teshun China VI (N526)\Airbag Control Module (EDR)	√	√	√	√		
light passenger vehicle\Teshun China VI (N526)\Electronic clutch	√	√	√	√		
light passenger vehicle\Teshun China VI (N526)\Remote control system	√	√	√	√		
light passenger vehicle\Teshun China VI (N526)\Tire pressure detection system	√	√	√	√		
Veyron Series\JH476 Jiangling Weilong\ECM	√	√	√	√		0211, 0212, 0213, 0214
Veyron Series\JH476 Jiangling Weilong\Body control module		√	√	√	√	
Veyron Series\JH476 Jiangling Weilong\Instrument cluster		√	√	√		

Veyron Series\JH476 Jiangling Weilong\ABS module		✓	✓	✓	✓	
Veyron Series\JH476 Jiangling Weilong\Recorder		✓	✓	✓		
Veyron Series\JH476 Jiangling Weilong\Vehicle T_Box		✓	✓	✓		
Veyron Series\JH476 Jiangling Weilong\Tire pressure module		✓	✓	✓		
Veyron Series\JH625 Veyron HV5\ECM	✓	✓	✓	✓		0211, 0212, 0213, 0214
Veyron Series\JH625 Veyron HV5\Body control module		✓	✓	✓	✓	
Veyron Series\JH625 Veyron HV5\Instrument cluster	✓	✓	✓	✓	✓	
Veyron Series\JH625 Veyron HV5\ABS module		✓	✓	✓	✓	
Veyron Series\JH625 Veyron HV5\Recorder		✓	✓	✓		
Veyron Series\JH625 Veyron HV5\MP5	✓	✓	✓	✓	✓	
Veyron Series\JH625 Veyron HV5\Vehicle T_Box		✓	✓	✓		
Veyron Series\JH625 Veyron HV5\Tire pressure module	✓	✓	✓	✓		
Veyron Series\JH625 Veyron HV5\Anti-fatigue controller	✓	✓	✓			
Veyron Series\JH625 Veyron HV5\Automatic air conditioning	✓	✓	✓			
Veyron Series\JH625 Veyron HV5\Camera	✓	✓	✓	✓		
Yu Sheng Series\New Yu Sheng (S350)\Engine system (ECM)\Gasoline - UMC-EMS	✓	✓	✓	✓	✓	0006, 0002, 0087, 0088
Yu Sheng Series\New Yu Sheng (S350)\Engine system (ECM)\Diesel-Continent-EMS	✓	✓	✓	✓	✓	0041, 0171, 0057, 0172, 0173, 0174, 0175, 0176
Yu Sheng Series\New Yu Sheng (S350)\Automatic Transmission System (AT)\ZF-6-speed gearbox - TCU	✓	✓	✓	✓		0089, 0090, 0091
Yu Sheng Series\New Yu Sheng (S350)\Electronic Stability System (ESP)\Bosch - Body Stabilization System - ESP	✓	✓	✓	✓	✓	0092, 0093, 0094, 0095, 0096
Yu Sheng Series\New Yu Sheng (S350)\Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Yu Sheng Series\New Yu Sheng (S350)\Body Control System (BCM)\Tongzhi - Body Controller - BCM	✓	✓	✓	✓	✓	0008, 0036, 0076, 0077, 0006
Yu Sheng Series\New Yu Sheng (S350)\Dashboard System (ICM)\Visteon-Instrument-ICM	✓	✓	✓	✓	✓	0078, 0079, 0080, 0069, 0081, 0082, 0083, 0084
Yu Sheng Series\New Yu Sheng (S350)\One button start control system (PEPS)\Gasoline - Lear-PEPS	✓	✓	✓	✓		0097, 0098, 0099, 0100
Yu Sheng Series\New Yu Sheng (S350)\One button start control system (PEPS)\Diesel-Lear-PEPS	✓	✓	✓	✓		0097, 0098, 0099, 0100
Yu Sheng Series\New Yu Sheng (S350)\Automatic air conditioning system (AC)\Visteon-Air Conditioning-AC	✓	✓	✓	✓		0009
Yu Sheng Series\New Yu Sheng (S350)\Borg Warner-four-wheel drive system - TCCU	✓			✓	✓	0101, 0102, 0103
Yu Sheng Series\New Yu Sheng (S350)\Vision Imaging System (AVM)\Huichuang-360° viewing image -AVM	✓	✓	✓	✓		0006, 0215, 0216, 0217, 0218
Yu Sheng Series\New Yu Sheng (S350)\Vision Imaging System (AVM)\Huichuang-360° viewing image-AVM (endsa)						0215, 0217, 0218
Yu Sheng Series\New Yu Sheng (S350)\Oriental Jiule - anti-pinch system - APM	✓	✓	✓	✓	✓	0219, 0220, 0221, 0222

Yu Sheng Series\New YuSheng – automatic gear (S350 )\Engine system (ECM)\Bosch-Diesel EDC17 (China IV)	✓	✓	✓	✓	✓	0065, 0023, 0069, 0223, 0010, 0011, 0012, 0013, 0014, 0015, 0016, 0025, 0026
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Transmission system (AT)\ZF gearbox	✓	✓	✓	✓		0089, 0090, 0091
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Actuator System (TCCM)\BorgWarner transfer case	✓			✓	✓	0101, 0102, 0103
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Electronic Stability System (ESP)\Bosch – Body Stabilization System – ESP	✓	✓	✓	✓	✓	0092, 0093, 0094, 0095, 0096
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Gateway System (GW)	✓	✓	✓	✓		0224, 0225, 0226, 0227
Yu Sheng Series\New YuSheng – automatic gear (S350 )\One button start control system (PEPS)	✓	✓	✓			0097, 0098, 0100
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Body Control System (BCM)	✓	✓	✓	✓	✓	
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Dashboard System (ICM)	✓	✓	✓	✓	✓	0078, 0079, 0080, 0069, 0081, 0082, 0083, 0084
Yu Sheng Series\New YuSheng – automatic gear (S350 )\Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Yu Sheng Series\New YuSheng – manual gear (S350)\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	✓	0058, 0013, 0012, 0014, 0015, 0016, 0065, 0023, 0069, 0010
Yu Sheng Series\New YuSheng – manual gear (S350)\Engine system (ECM)\Delphi Gasoline Engine	✓	✓	✓	✓	✓	0069, 0072
Yu Sheng Series\New YuSheng – manual gear (S350)\Anti-lock Brake System (ABS)	✓	✓	✓	✓	✓	Please refer to ABS Function list
Yu Sheng Series\New YuSheng – manual gear (S350)\Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Yu Sheng Series\New YuSheng – manual gear (S350)\Anti-theft system (IMMO)	✓	✓	✓	✓		0228, 0229, 0230, 0231, 0232, 0233
Yu Sheng Series\Yu sheng(manual gear)\Engine system (ECM)\Delphi Europe 4 Gasoline Engine	✓	✓	✓	✓	✓	0069, 0070, 0071, 0072
Yu Sheng Series\Yu sheng(manual gear)\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	✓	0058, 0013, 0012, 0014, 0015, 0016, 0065, 0023, 0069, 0010
Yu Sheng Series\Yu sheng(manual gear)\Engine system (ECM)\Bosch Diesel System (C63)	✓	✓	✓	✓	✓	0022, 0010, 0073, 0061
Yu Sheng Series\Yu sheng(manual gear)\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Yu Sheng Series\Yu sheng(manual gear)\Anti-lock Brake System (ABS)\ABS9	✓	✓	✓	✓	✓	Please refer to ABS Function list
Yu Sheng Series\Yu sheng(manual gear)\Airbag System (SRS)	✓	✓	✓	✓	✓	0035, 0074, 0002, 0075
Yu Sheng Series\Yu Sheng (S330)\Engine system (ECM)	✓	✓	✓	✓	✓	0124, 0125, 0126, 0132, 0234, 0134, 0235, 0236, 0237, 0238, 0139, 0140, 0142, 0145, 0146, 0147, 0239, 0151, 0152, 0153, 0240, 0156, 0157, 0158,
Yu Sheng Series\Yu Sheng (S330)\Automatic Transmission System (AT)	✓	✓	✓	✓		0006
Yu Sheng Series\Yu Sheng (S330)\Electronic Stability System (ESP)	✓	✓	✓	✓	✓	0037, 0047, 0165, 0241, 0242, 0243, 0244, 0006
Yu Sheng Series\Yu Sheng (S330)\Electric Power Steering System (EPS)	✓	✓	✓	✓		0166, 0006
Yu Sheng Series\Yu Sheng (S330)\Airbag System (SRS)	✓	✓	✓		✓	0041
Yu Sheng Series\Yu Sheng (S330)\Body Control System (BCM)	✓	✓	✓	✓	✓	0008, 0006
Yu Sheng Series\Yu Sheng (S330)\Dashboard System (ICM)	✓	✓	✓		✓	0006
Yu Sheng Series\Yu Sheng (S330)\One button start control system (PEPS)						
Yu Sheng Series\Yu Sheng (S330)\Automatic air conditioning system (AC)	✓	✓	✓	✓		0009

Yu Sheng Series\Yu Sheng (S330)\Vision Imaging System (AVM)\Huichuang-360° viewing image -AVM	√	√	√	√		0006, 0215, 0216, 0217, 0218
Yu Sheng Series\Yu Sheng (S330)\Vision Imaging System (AVM)\Huichuang-360° viewing image-AVM (endsa)						0215, 0217, 0218
Yu Sheng Series\Yu Sheng (S330)\Huichuang-engine anti-theft locking system-IMMO	√	√	√	√		0086, 0245, 0246, 0041
Yu Sheng Series\Yu Sheng (S330)\Baolong-Tire Pressure Monitoring System-TPMS	√	√	√	√		0104, 0105, 0106, 0107, 0108, 0109, 0110, 0111, 0112, 0006, 0009
Yu Sheng Series\Yu Sheng (S330)\Huayang-Multimedia (high) - MP5	√	√	√	√	√	0006, 0169
Yu Sheng Series\New Yusheng (S356)\Engine System China V (EMS)	√	√	√	√	√	0116, 0069, 0177, 0178, 0117, 0118, 0119, 0120, 0121, 0122
Yu Sheng Series\New Yusheng (S356)\Engine System China VI (EMS)	√	√	√	√		0116, 0179
Yu Sheng Series\New Yusheng (S356)\Body Control Module (BCM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Automatic Transmission Control Unit (TCU)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Air Conditioning Controller (AC)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Remote control module (TBOX)	√	√	√			
Yu Sheng Series\New Yusheng (S356)\Electronic Stability System (ESP)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Instrument (IC)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Airbag Control Module (SRS)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Ripple Anti-Pinch Module (APM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Mode switch (ATCM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\All-wheel drive module (AWD)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Entertainment System (MP5)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Parking Assist System (PAM)	√	√	√			
Yu Sheng Series\New Yusheng (S356)\Keyless Start Control Module (PEPS)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Wireless receiving module (RTM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Seat Memory Control Module (SCM)	√	√	√			
Yu Sheng Series\New Yusheng (S356)\Electronic shifter (SCU)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Electric Power Steering System (EPS)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Front View Monocular Camera (IPM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Radar Control System (MRR)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Combination Switch Module (SWM)	√	√	√	√		
Yu Sheng Series\New Yusheng (S356)\Blind Spot Monitoring System (BSD)	√	√	√	√		
Landwind Series\X8 Series\Engine\Bosch Common Rail System (VM2. 5T)	√	√	√	√	√	0024, 0180

Landwind Series\X8 Series\Engine\Bosch EDC16C39 (VM2. 0T)	√	√	√	√		
Landwind Series\X8 Series\Anti-lock braking system\Delphi ABS		√	√	√	√	
Landwind Series\X8 Series\Anti-lock braking system\Mando ABS	√	√	√	√	√	
Landwind Series\X8 Series\Airbag\Jinheng Airbag system	√	√	√	√		
Landwind Series\X8 Series\Airbag\Oriental Jiu Le Airbag System	√	√	√	√		
Landwind Series\X8 Series\Anti-theft system\Shanghai Industrial Traffic Anti-theft	√	√	√	√		0024, 0097, 0247, 0248, 0249, 0250, 0251
Landwind Series\X8 Series\Anti-theft system\Delphi Anti-Theft System	√	√	√	√	√	Please refer to IMMOBILIZER Function list
Landwind Series\X6 Series\Engine\Bosch Common Rail System (VM2. 5T)	√	√	√	√	√	0024, 0180
Landwind Series\X6 Series\Engine\4JB1 Common Rail Engine	√	√	√	√	√	0058, 0012, 0013, 0014, 0015, 0010, 0023, 0069
Landwind Series\X6 Series\Engine\JE493 Common Rail Engine	√	√	√	√	√	0024, 0180
Landwind Series\X6 Series\Engine\Bosch EDC16C39	√	√	√	√		
Landwind Series\X6 Series\ABS\Delphi ABS		√	√	√	√	
Landwind Series\X6 Series\ABS\Mando ABS						
Landwind Series\X6 Series\Anti-theft system\Shanghai Industrial Traffic Anti-theft	√	√	√	√		0024, 0097, 0247, 0248, 0249, 0250, 0251
Landwind Series\X9 Series\Engine\Bosch Common Rail System (VM2. 5T)	√	√	√	√	√	0024, 0180
Landwind Series\X9 Series\Engine\JE493 Common Rail Engine	√	√	√	√	√	0024, 0180
Landwind Series\X9 Series\ABS\Delphi ABS		√	√	√	√	
Landwind Series\X9 Series\ABS\Mando ABS	√	√	√	√	√	
Landwind Series\X9 Series\Anti-theft system\Shanghai Industrial Traffic Anti-theft	√	√	√	√		0024, 0097, 0247, 0248, 0249, 0250, 0251
Landwind Series\X5 series\Engine Management System\Delphi MT80	√	√	√	√	√	0069, 0252, 0103, 0072
Landwind Series\X5 series\Engine Management System\EObd emission diagnosis	√	√	√	√		
Landwind Series\X5 series\ABS(ESC)	√	√	√	√	√	0161, 0253, 0254
Landwind Series\X5 series\Jiangling Landwind Instrument System	√	√	√	√	√	0255, 0256
Landwind Series\X5 series\Airbag	√	√	√	√	√	0161, 0257, 0258
Landwind Series\X5 series\Anti-theft system	√	√	√	√	√	Please refer to IMMOBILIZER Function list
Landwind Series\X5 series\Intelligent four-wheel drive control system	√	√	√	√		
Landwind Series\Land Style\Engine\Jiangling Landwind ME797 EFI system		√	√	√	√	
Landwind Series\Land Style\Engine\CV9_OBD		√	√	√		
Landwind Series\Land Style\Transmission	√	√	√	√		

Landwind Series\Land Style\Airbag		✓	✓	✓		
Landwind Series\Land Style\Anti-Theft	✓	✓	✓	✓		0024, 0097, 0247, 0248, 0249, 0250, 0251
Landwind Series\Lu Feng Fenghua\Jiangling Landwind ME797 EFI system		✓	✓	✓	✓	
Landwind Series\Lu Feng Fenghua\Airbag\Airbag 1		✓	✓	✓	✓	
Landwind Series\Lu Feng Fenghua\Airbag\Airbag 2	✓	✓	✓	✓		
Landwind Series\Lu Feng Fenghua\Airbag\Autoliv Airbag	✓	✓	✓	✓	✓	
Landwind Series\Lu Feng Fenghua\Anti-Theft	✓	✓	✓	✓		0024, 0097, 0247, 0248, 0249, 0250, 0251
Road Shaker (2. 2L)	✓	✓	✓	✓	✓	0116, 0189, 0190, 0191
Puma series\Engine (PCM)		✓	✓	✓		
Puma series\Body System\Gauges		✓	✓			
Puma series\Body System\Body module		✓	✓	✓		
Puma series\Anti-lock brakes		✓	✓	✓		
Puma series\Electrical System\Charging system		✓	✓	✓		
Puma series\Electrical System\Parking help		✓	✓	✓		
Puma series\Module\ABS		✓	✓	✓		
Puma series\Module\BCM VII		✓	✓	✓		
Puma series\Module\PCM		✓	✓	✓		

Special Function Table	
0001	Self-learning of brake pedal position
0002	Write VIN
0003	TBOX configuration
0004	Forced to turn on the equalization diagnostic command
0005	Insulation sampling
0006	Hardware Reset
0007	Gear indicator LED
0008	Remote learning
0009	Software reset
0010	Nozzle data
0011	Start fault information test
0012	Compression Test
0013	Accelerated testing
0014	Jet off test
0015	Engine speed comparison
0016	High-pressure test
0017	PTO mode 0 engine speed adjustment value
0018	PTO mode 1 engine speed adjustment value
0019	PTO mode 2 engine speed adjustment value
0020	PTO mode 3 engine speed adjustment value
0021	Vehicle configuration options
0022	Flash VIN
0023	Clear ZFC learning value
0024	Read/Write VIN
0025	Temporary forbidden function / engine plant configuration
0026	Cannot be cleared Fault clear function off (automaker selection)
0027	Input ECU number
0028	Input VIN
0029	Enter model code

0030	Erase all remotes
0031	Reading configuration information
0032	Reversing radar configuration
0033	Write product serial number
0034	Engine type configuration
0035	ECU reset
0036	Read vehicle configuration information
0037	ABS test
0038	ESC test
0039	ESC calibration
0040	Wheel speed sensor test
0041	Write VIN Code
0042	Model read
0043	Read gear value
0044	Model write
0045	Manual learning of gears
0046	System Test
0047	Artificial exhaust
0048	Gear value adjustment
0049	Crawl value adjustment
0050	Write car manufacturer part number
0051	Write system supplier identification number
0052	Write the ECU hardware version number of the system supplier
0053	Write the ECU software version number of the system supplier
0054	Write JMC part number
0055	Write hardware version number
0056	Write the serial number of the electronic control unit
0057	Cylinder Cutout Test
0058	Startup fault information
0059	Broken cylinder (injection off) test
0060	Post-treatment AdBlue system test
0061	Particle trap DPF value forced regeneration
0062	Unclearable fault clearing function / OEM configuration
0063	DPF reset (don't replace ECU)
0064	Read and write injector data
0065	EGR zero trigger learning
0066	The read data models
0067	Write model data
0068	Leak test
0069	Brushing and writing VIN code
0070	Flashing the service station code or diagnostic serial number
0071	Program Flash Date
0072	Learn tooth News
0073	Particle trap DPF reset
0074	Write Offline Lock Code
0075	Write Programming Date
0076	Write vehicle configuration information
0077	Write vehicle VIN code
0078	Flash the vehicle manufacturer part number
0079	Flash system supplier ID
0080	Flash ECU serial number
0081	Flash ECU hardware number
0082	Flash ECU hardware version number
0083	Flash ECU software number
0084	Flash ECU software version number
0085	After-sales query of the number of keys
0086	Matching key
0087	Write programmed date
0088	Write the repair shop code
0089	Self-learning value reset
0090	Flash the vehicle manufacturer part number
0091	Flash the vehicle manufacturer ECU hardware number
0092	Flash the vehicle VIN
0093	Steering angle sensor calibration
0094	Yaw acceleration sensor calibration
0095	Modify fill status
0096	Modify the offline test status
0097	Key match
0098	Replace ESCL
0099	Replace EMS
0100	Replace PEPS
0101	Flash the vehicle VIN code
0102	Flash programming location

0103	Flash write programming date
0104	Left front tire ID learning
0105	Right front tire ID learning
0106	Left rear tire ID learning
0107	Right rear tire ID learning
0108	All tire ID learning
0109	Tire standard pressure value configuration
0110	Rear tire standard pressure value configuration
0111	Front high pressure alarm compensation value configuration
0112	Rear high pressure alarm compensation value configuration
0113	Read and write vehicle data
0114	Modify ECU VIN code
0115	Modify last service date
0116	DPF regeneration
0117	Replace ECU or replace NSC
0118	EGR valve reset self-learning
0119	TVA valve reset self-learning
0120	VGT valve reset self-learning
0121	SCR
0122	Read and write all IQA
0123	Read and write CAL ID
0124	Reset all self-learning values
0125	Parallel test
0126	Air conditioner compressor relay self test
0127	IVVT outlet/inlet solenoid valve 1 self-check
0128	Cylinder #1 self-check
0129	cylinder #2 self-test
0130	cylinder #3 Self-test
0131	Cylinder #4 self-test
0132	Air flow valve self test
0133	Variable intake manifold switch self test
0134	Turbocharger Self Test
0135	Injector #1 self-check
0136	Injector #2 self-test
0137	injector #3 self-test
0138	Injector #4 Self-test
0139	Electronic throttle position
0140	Driver request
0141	Catalytic efficiency diagnostics
0142	Idle speed control
0143	Starter relay 1
0144	Starter relay 2
0145	engine first start
0146	Electronic cooling fan PWM1
0147	Electronic cooling fan PWM2
0148	Canister purge solenoid valve self-test
0149	Fuel pump relay
0150	Fuel pump PWM
0151	Flow control valve
0152	Vacuum pump
0153	Cooling water pump 1
0154	Cooling water pump 2
0155	IVVT out/intake solenoid valve 2 self-test
0156	Rear oxygen heater 1
0157	Front oxygen heater 1
0158	after the oxygen heater 2
0159	Front Oxygen Heater 2
0160	Reset starter cycle counter
0161	VIN Write
0162	Write product serial number
0163	Self-learning of brake pedal stroke
0164	Write TBOX configuration code
0165	Write data
0166	Steering angle calibration
0167	Read offline configuration
0168	Write down the line configuration
0169	On-off key reset
0170	T500-66° TBOX configuration
0171	Write IQA
0172	After-sale mandatory DPF regeneration
0173	Garage MFMA
0174	Change the oil
0175	EFP actuator test



0176	Update DPF
0177	Induce system restart count reset
0178	Trigger NSC desulfurization
0179	DPF reset
0180	Reading and writing injector code
0181	reset diesel particulate filter pressure value sense value learning value
0182	reset diesel particulate filter learning value
0183	Reset fuel moisture warning indicator
0184	Reset exhaust gas temperature value
0185	Reset fuel pressure reducing valve open counter learning value
0186	Reset fuel pressure reducing valve open duration learning value
0187	Fuel injection pump learning
0188	Diesel particulate filter Static regeneration
0189	write injector code
0190	Three-speed control
0191	Description of engine oil return to zero
0192	IVC sensor initialization
0193	Configure the steering sensor
0194	Reset pressure sensor bias
0195	Calibrate the longitudinal acceleration sensor
0196	Enable/disable ramp start assist
0197	ABS filling
0198	Variable and VIN data learning program
0199	Module programming
0200	Exhaust function
0201	ECU serial number
0202	ECU variable code
0203	ECU serial number
0204	Read OEM configuration
0205	OEM configuration
0206	Offline configuration
0207	Acu configuration
0208	Rear radar function information
0209	Battery pack type
0210	Real vehicle calibration
0211	Oil change warning reset
0212	Injector switch detection
0213	Engine brake test
0214	AdBlue injection test
0215	Automatic stitching
0216	Manual stitching
0217	stitching projection matrix backup
0218	stitching end
0219	Read configuration information
0220	Write Incoming configuration information
0221	Anti-pinch self-learning
0222	Anti-pinch erasure
0223	Flash CALID
0224	Configuring power transmitting method
0225	Configure integrated vehicle power control
0226	Configure drive shaft
0227	Download vehicle configuration from the instrument
0228	After-sale replacement IMMO
0229	After-sale replacement ECM
0230	Simultaneous replacement of IMMO and ECM after sale
0231	After-sale replacement key
0232	Reset ECM
0233	Reset IMMO
0234	Variable intake manifold switch self-test
0235	Injector 1# self-check
0236	Injector 2# self-test
0237	Injector 3# self-test
0238	Injector 4# self-test
0239	Charcoal purging solenoid valve self-test
0240	IVVT outlet/intake solenoid valve 2 self-test
0241	Rate sensor calibration
0242	Tightening or releasing the caliper
0243	Complete release of the caliper
0244	Initialize installation
0245	Match EMS
0246	Match IMMO
0247	Delete key
0248	Replacement engine (ECM)

0249	Replace the anti-theft device (IMMO)
0250	Replacement of the complete set
0251	Reset alarm (IMMO)
0252	Flashing the repair station code
0253	Write calibration information
0254	Fill exhaust
0255	Configure by model
0256	Configure according to the vehicle configuration list
0257	Write the repair date
0258	Lock ACU