

ZF V12.10 Function List							
<b>Note:</b>							
✓	Functions marked with ✓ is fully supported.						
System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func	
Freedomline	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008		
SureShift	✓	✓	✓	✓	A0009, A0010, A0011, A0012, A0013, A0014	S0001, S0002, S0003, S0004, S0005	
AS Tronic\Tronic 1	✓	✓	✓				
AS Tronic\Tronic 2	✓	✓	✓				
AS Tronic\Tronic Lite-Communication K-Line(MAN)	✓	✓	✓	✓			
AS Tronic\Tronic Lite-Communication CAN	✓	✓	✓	✓			
AS Tronic\Tronic Lite-Communication Nissan(CAN)	✓	✓	✓	✓			
AS Tronic\Tronic Mid	✓	✓	✓				
AVS	✓	✓	✓				
EcoLife	✓	✓	✓	✓			
ZF Ecomat\Ecomat 1	✓	✓	✓				
ZF Ecomat\Ecomat 2	✓	✓	✓	✓	A0015		
ZF Ecomat\HP 260 CAN Converter	✓	✓	✓				
Intarder\Intarder-Est 32	✓	✓	✓				
Intarder\Intarder-Est 42	✓	✓	✓				
Intarder\Iveco-Est 52	✓	✓	✓	✓			
Intarder\Iveco-Est 54	✓	✓	✓				
Intarder\Iveco-Intarder KWP	✓	✓	✓	✓			
Intarder\Daf-Est 52		✓	✓				
Intarder\Daf-Est 54	✓	✓	✓				
WSK\WSK EST41/61-WSK	✓	✓	✓				
WSK\WSK EST41/61-WSK Daimler Chrysler	✓	✓	✓				
WSK\WSK MAN		✓	✓	✓			
WSK\Man-WSK TC2	✓	✓	✓	✓			
AVE130	✓	✓	✓				
Iveco-Eurotronic 2	✓	✓	✓	✓			
4BP-230	✓	✓	✓	✓			
ASTRONIC ZF	✓	✓	✓	✓	A0016, A0017, A0018		

Special Function Table	
S0001	Change the transaxle speed ratio
S0002	Active engine braking
S0003	Reset shift counter to 0
S0004	Read parameters
S0005	Setting parameters

Active Test Table
-------------------

A0001	Splitter Solenoid Y2
A0002	Splitter Solenoid Y3
A0003	Select Solenoid Y4
A0004	Select Solenoid Y5
A0005	Engagement Solenoid Y6
A0006	Engagement Solenoid Y7
A0007	Low Range Solenoid Y8
A0008	Low Range Solenoid Y9
A0009	X-Y unit fork joint solenoid valve #1
A0010	X-Y unit fork joint solenoid valve #2
A0011	Track selection valve #1
A0012	Track selection valve #2
A0013	Low-position solenoid valve
A0014	High-position solenoid valve
A0015	Output test
A0016	Gearshift valves
A0017	Clutch valves
A0018	Engine connection