



QINGLING V12.84 Function list

Note:

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Qingling China VI\Heavy truck China VI (6U&6W) Bosch MD1CE108	✓	✓	✓	✓	✓	Please refer to BOSCH Function list
Qingling China VI\Medium and heavy truck China VI (4H) Bosch MD1CC878	✓	✓	✓	✓	✓	Please refer to BOSCH Function list
Qingling China VI\Light truck China VI (4K) Bosch EDC17C81	✓	✓	✓	✓	✓	Please refer to BOSCH Function list
Qingling China VI\Delphi Common Rail System DCM7.1 (Qingling Isuzu 4KH1CT6 Country 6)	✓	✓	✓	✓	✓	Please refer to DELPHI Function list
Qingling China VI\Delphi Common Rail System (Jiangxi Isuzu JE493ZLQ6E Country 6)	✓	✓	✓	✓	✓	Please refer to DELPHI Function list
Qingling 100P\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
Qingling 100P\Engine System\4JB1-TCT/TC1 China III	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Engine System\4JB1CN China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Engine System\4JJ1-TC_ Common Rail engine (CAN China IV/V)	✓	✓	✓	✓	✓	0005, 0006, 0007, 0008, 0009, 0010
Qingling 100P\Engine System\4KH1CN5HD China V	✓	✓	✓	✓	✓	Please refer to DELPHI Function list
Qingling 100P\Engine System\4KH1CN5LS China V	✓	✓	✓	✓	✓	Please refer to SCR Function list
Qingling 100P\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 100P\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling 100P\Immobilizer	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Engine System\4KH1-TC China III	✓	✓	✓	✓	✓	0011, 0012
Qingling 600P\Engine System\4KH1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Engine System\4KH1-TCG4 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Engine System\4KH1CN5HD China V	✓	✓	✓	✓	✓	Please refer to DELPHI Function list
Qingling 600P\Engine System\4KH1CN5HS China V	✓	✓	✓	✓	✓	Please refer to SCR Function list
Qingling 600P\Engine System\4KH1-TCG51 China V	✓	✓	✓	✓	✓	Please refer to SCR Function list
Qingling 600P\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

Qingling 600P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 600P\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling 600P\Immobilizer	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Engine System\4HK1-TC China III	✓	✓	✓	✓	✓	0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021
Qingling 700P\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Engine System\4KH1-TCG4 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Engine System\4HK1- TC51 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Engine System\4HV1 CNG engine (Kline China III)	✓	✓	✓	✓	✓	0022, 0023, 0024, 0025
Qingling 700P\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling 700P\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling 700P\Airbag	✓	✓	✓	✓		
Qingling 700P\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling 700P\Immobilizer	✓	✓	✓			
Qingling 700P\Monitor	✓	✓	✓			
Qingling 700P\Smoother (MZW)	✓	✓	✓			
Qingling 700P\Speedometer control device (independent)	✓			✓		
Qingling 700P\Speedometer control device (internal speedometer)	✓			✓		
Qingling K600\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
Qingling K600\Engine System\4KH1-TCG4 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Engine System\4KH1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Engine System\4KH1-TC51 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

Qingling K600\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling K600\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling K600\Airbag	✓	✓	✓	✓		
Qingling K600\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling K600\Immobilizer	✓	✓	✓			
Qingling K600\Monitor	✓	✓	✓			
Qingling K600\Smoother (MZW)	✓	✓	✓			
Qingling K600\Speedometer control device (independent)	✓			✓		
Qingling K600\Speedometer control device (internal speedometer)	✓			✓		
Qingling VC46\Engine System\6HK1-TCNG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Engine System\6UZ1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Engine System\6HK1-TCH China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling VC46\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling VC46\Airbag	✓	✓	✓	✓		
Qingling VC46\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC46\Immobilizer	✓	✓	✓			
Qingling VC46\Monitor	✓	✓	✓			
Qingling VC46\Smoother (MZW)	✓	✓	✓			
Qingling VC46\Speedometer control device (independent)	✓			✓		
Qingling VC46\Speedometer control device (internal speedometer)	✓			✓		
Qingling VC46\Allision 4430 (Gen 5)	✓	✓	✓		✓	
Qingling VC61\Engine System\6WG1_TC_ Common Rail Engine (China III)	✓	✓	✓	✓	✓	0026, 0027, 0028, 0029, 0030, 0031, 0004, 0032
Qingling VC61\Engine System\6WG1-TCG51 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

Qingling VC61\Engine System\6UZ1-TCG50 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling VC61\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling VC61\Airbag	✓	✓	✓	✓		
Qingling VC61\CAN Converter (FMS)	✓	✓	✓	✓		
Qingling VC61\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling VC61\Immobilizer	✓	✓	✓			
Qingling VC61\Monitor	✓	✓	✓			
Qingling VC61\Smoother (MZW)	✓	✓	✓			
Qingling VC61\Speedometer control device (independent)	✓			✓		
Qingling VC61\Speedometer control device (internal speedometer)	✓			✓		
Qingling VC61\Allision 4430 (Gen 5)	✓	✓	✓		✓	
Qingling VC61\Gauges	✓					
Qingling KV100\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
Qingling KV100\Engine System\4KH1CN5LS China V	✓	✓	✓	✓	✓	Please refer to SCR Function list
Qingling KV100\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV100\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV100\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV100\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV100\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling KV100\Immobilizer	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV600\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
Qingling KV600\Engine System\4KH1CN5HD China V	✓	✓	✓	✓	✓	Please refer to DELPHI Function list
Qingling KV600\Engine System\4KH1CN5HS China V	✓	✓	✓	✓	✓	Please refer to SCR Function list
Qingling KV600\Engine System\4KH1-TCG51 China V	✓	✓	✓	✓	✓	Please refer to SCR Function list

Qingling KV600\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV600\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV600\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV600\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling KV600\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling KV600\Immobilizer	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
Qingling FTR\Engine System\4HK1-TC China III	✓	✓	✓	✓	✓	0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021
Qingling FTR\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling FTR\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling FTR\Airbag	✓	✓	✓	✓		
Qingling FTR\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FTR\Immobilizer	✓	✓	✓			
Qingling FTR\Monitor	✓	✓	✓			
Qingling FTR\Smoother (MZW)	✓	✓	✓			
Qingling FTR\Speedometer control device (independent)	✓			✓		
Qingling FTR\Speedometer control device (internal speedometer)	✓			✓		
Qingling FVZ\Engine System\6HK1-TCS China III	✓	✓	✓	✓	✓	0014, 0015, 0016, 0017, 0033, 0034, 0035, 0036
Qingling FVZ\Engine System\6HK1-TC China III	✓	✓	✓	✓	✓	0014, 0015, 0016, 0017, 0033, 0034, 0035, 0036
Qingling FVZ\Engine System\6HK1-TCH China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVZ\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVZ\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

Qingling FVZ\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVZ\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVZ\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling FVZ\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling FVZ\Airbag	✓	✓	✓	✓		
Qingling FVZ\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVZ\Immobilizer	✓	✓	✓			
Qingling FVZ\Monitor	✓	✓	✓			
Qingling FVZ\Smoother (MZW)	✓	✓	✓			
Qingling FVZ\Speedometer control device (independent)	✓			✓		
Qingling FVZ\Speedometer control device (internal speedometer)	✓			✓		
Qingling FVR\Engine System\6HK1-TC China III	✓	✓	✓	✓	✓	0014, 0015, 0016, 0017, 0033, 0034, 0035, 0036
Qingling FVR\Engine System\6HK1-TCN China III	✓	✓	✓	✓	✓	0014, 0015, 0016, 0017, 0033, 0034, 0035, 0036
Qingling FVR\Engine System\6HK1-TCN China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling FVR\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling FVR\Airbag	✓	✓	✓	✓		
Qingling FVR\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling FVR\Immobilizer	✓	✓	✓			
Qingling FVR\Monitor	✓	✓	✓			
Qingling FVR\Smoother (MZW)	✓	✓	✓			
Qingling FVR\Speedometer control device (independent)	✓			✓		
Qingling FVR\Speedometer control device (internal speedometer)	✓			✓		
Qingling Giant Coffee\Engine System\6UZ1-TCG50 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Engine System\6UZ1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

Qingling Giant Coffee\Engine System\6UZ1_TC engine	✓	✓	✓	✓	✓	0037, 0038, 0039, 0040, 0026, 0027, 0028, 0029, 0030, 0031, 0041, 0042, 0032
Qingling Giant Coffee\Engine System\6WG1_TC_ Common Rail Engine (China III)	✓	✓	✓	✓	✓	0026, 0027, 0028, 0029, 0030, 0031, 0004, 0032
Qingling Giant Coffee\Engine System\6WG1-TCG51 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Engine System\6WG1-TCG52 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling Giant Coffee\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
Qingling Giant Coffee\Airbag	✓	✓	✓	✓		
Qingling Giant Coffee\CAN Converter (FMS)	✓	✓	✓	✓		
Qingling Giant Coffee\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
Qingling Giant Coffee\Immobilizer	✓	✓	✓			
Qingling Giant Coffee\Monitor	✓	✓	✓			
Qingling Giant Coffee\Smoother (MZW)	✓	✓	✓			
Qingling Giant Coffee\Speedometer control device (independent)	✓			✓		
Qingling Giant Coffee\Speedometer control device (internal speedometer)	✓			✓		
Qingling Giant Coffee\Allision 4430(Gen 5)	✓	✓	✓		✓	
Qingling Giant Coffee\Gauges	✓					
NLR/NMR models\Engine System\Engine 4HK1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
NLR/NMR models\Engine System\4HK1-TC China III	✓	✓	✓	✓	✓	0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021
NLR/NMR models\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Engine System\4HK1/4JJ1 C Rail_Euro3(700P)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list

NLR/NMR models\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
NLR/NMR models\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
NLR/NMR models\Airbag	✓	✓	✓	✓		
NLR/NMR models\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
NLR/NMR models\Immobilizer	✓	✓	✓			
NLR/NMR models\Monitor	✓	✓	✓			
NLR/NMR models\Smoother (MZW)	✓	✓	✓			
NLR/NMR models\Speedometer control device (independent)	✓			✓		
NLR/NMR models\Speedometer control device (internal speedometer)	✓			✓		
ELF models\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	✓	0001, 0002, 0003, 0004
ELF models\Engine System\4HK1-TC China III	✓	✓	✓	✓	✓	0013, 0014, 0015, 0016, 0017, 0018, 0019, 0020, 0021
ELF models\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Transmission system\4HK1-TC gearbox system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Transmission system\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
ELF models\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	✓	Please refer to ABS Function list
ELF models\Airbag	✓	✓	✓	✓		
ELF models\AdBlue SCR system	✓	✓	✓	✓	✓	Please refer to ISUZU Function list
ELF models\Immobilizer	✓	✓	✓			
ELF models\Monitor	✓	✓	✓			
ELF models\Smoother (MZW)	✓	✓	✓			
ELF models\Speedometer control device (independent)	✓			✓		
ELF models\Speedometer control device (internal speedometer)	✓			✓		

Special Function Table

0001	Idle speed adjustment
0002	Initial capacity
0003	Restricted capacity
0004	Exhaust gas recirculation

0005	Mode 1
0006	Fuel Pump Initialization
0007	DPD automatic regeneration
0008	Diesel particulate trap normal regeneration control
0009	Diesel particulate trap slow regeneration control
0010	Diesel Particle Trap Status Reset
0011	Read and write VIN
0012	Lock ECU
0013	Reading injector data
0014	Fuel injector code #1
0015	Injector code #2
0016	Injector code #3
0017	Fuel injector code #4
0018	Diesel particulate trap forced Regeneration
0019	Diesel particulate trap regeneration data reset
0020	air flow correction data service mode
0021	Clear learned fuel pump data
0022	Clear injector learning value
0023	Clear gasoline ratio limit value
0024	Clear throttle idle speed learning value
0025	Clear closed loop throttle learning value
0026	1-cylinder injector code reading and writing
0027	2-cylinder injector code reading and writing
0028	3-cylinder injector code reading and writing
0029	4-cylinder injector code reading and writing
0030	5-cylinder injection Mouth code reading and writing
0031	6-cylinder injector code reading and writing
0032	Turbocharger control
0033	Injection nozzle coding #5
0034	Injection nozzle coding #6
0035	4-cylinder
0036	Cylinder6
0037	Injector Kill
0038	Main injection timing
0039	Front injection timing
0040	Fuel injection valve forced drive
0041	Reset fuel pump calibration
0042	Exhaust Gas Recirculation Control Valve