

VOITH V12.24 Function List						
Note:						
✓	Functions marked with ✓ is fully supported.					
System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Auto Search	✓	✓	✓			
DIWA. 3	✓	✓	✓	✓	A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112,	S0001, S0002, S0008, S0009, S0006, S0007, S0019, S0020, S0012, S0013, S0014, S0015, S0016, S0017, S0018, S0004, S0030, S0031, S0032, S0033, S0005,
DIWA. 5	✓	✓	✓	✓	A0018, A0057, A0058, A0059, A0060, A0061, A0062, A0063, A0064, A0065, A0066, A0067, A0068, A0069, A0070, A0071, A0072, A0001, A0002, A0003, A0004,	S0001, S0003, S0009, S0010, S0011, S0012, S0013
DIWA. 6	✓	✓	✓	✓	A0015, A0010, A0130, A0131, A0132, A0133, A0134, A0135, A0136, A0011, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0144, A0098,	S0031, S0032, S0033, S0004, S0006, S0007, S0008, S0009, S0010, S0011, S0001, S0012, S0013, S0005, S0003, S0030
E300. 1	✓	✓	✓	✓	A0010, A0011, A0012, A0013, A0014, A0130, A0131, A0132, A0133, A0134, A0135, A0136, A0497, A0010, A0011, A0012	S0001, S0003, S0004, S0007, S0015, S0017, S0001

Special Function Table	
S0001	Oil change support

Active Test Table	
A0001	Clutch engage (ek)
A0002	Clutch blockage (dk)
A0003	Overdrive clutch (sk)
A0004	Quick reverse gear (rbk)
A0005	Turbine brake (tb)
A0006	Brake impulsor (pb)
A0007	Retarder valve (wp)
A0008	Retarder pressure stabilizer (wr)
A0009	Slow reverse gear (rbg)
A0010	Clock solenoid valve with~2HZ
A0011	Control solenoid vale
A0012	Reset and deleting functions
A0013	Retarder
A0014	Gear Engagement
A0015	Automatic Neutral At Standstill
A0016	Engine Output Signals
A0017	Lamps
A0018	Relays
A0019	Solenoid Valves