

NEWHOLLAND CE V13.1 Function List						
Note:						
√	Functions marked with √ is fully supported.					
System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
New Holland CE (Light)\Wheel Loaders (Models W110C, W130C, W170C) (Tier 4B)\ECM Engine Control Module				√		
New Holland CE (Light)\Wheel Loaders (Models W110C, W130C, W170C) (Tier 4B)\AIC Instrument Cluster Unit	√	√	√			
New Holland CE (Light)\Wheel Loaders (Models W110C, W130C, W170C) (Tier 2 / Tier 3 / Tier 4A)\ECM Engine Control Module				√		
New Holland CE (Light)\Wheel Loaders (Models W110C, W130C, W170C) (Tier 2 / Tier 3 / Tier 4A)\AIC Instrument Cluster Unit	√	√	√			
Engine Type\Tier 3 NEF(EDC7UC31)	√	√	√	√	Please refer to CASE Function List	
Engine Type\Tier 4 F5C(EDC17C49)	√	√	√	√	Please refer to CASE Function List	
Engine Type\MS6.2	√	√	√	√		
Engine Type\Tier 3 NEF(EDC16C39)	√	√	√	√	Please refer to CASE Function List	