

# JAC V13.64 Function List

**Note:**

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB3-2E Engine BOSCH MD1CC878_P1968 (China VI)	✓	✓	✓	✓	A0076, A0077, A0217, A0080, A0218, A0082, A0219, A0064, A0220, A0221, A0222, A0223, A0224, A0225, A0226, A0227, A0228	S0031, S0032, S0033, S0034, S0035, S0036, S0037, S0038, S0039, S0040, S0041, S0042, S0043, S0044, S0045, S0046, S0047, S0048, S0049, S0050, S0051,
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB2-2E Engine Bosch MD1CS089_P2031 (China VI 2.0L)	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DE1-1D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (SCR)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DE1-1D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (DPF)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (SCR)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (DPF)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB2-1D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (SCR)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB2-1D Diesel Engine (Bosch System China V)\JAC-Bosch EDC17C81 (DPF)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB Diesel Engine (Delphi System China V)	✓	✓	✓	✓	Please refer to DELPHI Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine I2V K line	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine _K Line	✓	✓	✓	✓		S0030, S0027
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine _CAN Line	✓	✓	✓	✓		S0030
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC P1211 EDC17CV54 EGR\JAC P1211_EDC17CV54 EGR_CAN	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC P1211 EDC17CV54 EGR\JAC P1211_EDC17CV54 EGR_K	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC HFC4DA1-2C Engine\HFC4DA1-2C 24V K	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC HFC4DA1-2C Engine\HFC4DA1-2C 24V CAN	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2C Diesel Engine (Bosch System China IV)\JAC - Bosch EDC17C63 Economic Version	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-1C Diesel Engine (China IV)	✓	✓	✓	✓		S0030
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4GA1-C Gasoline Engine (China IV)	✓	✓	✓	✓	A0229, A0230, A0231, A0232, A0233, A0234, A0235, A0236, A0237, A0238, A0239, A0240, A0241, A0242	S0059, S0060, S0061, S0062
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2B/2C (Bosch Diesel EDC16C39 China I1I)\JAC EDC16C39 System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-2B/2C (Bosch Diesel EDC16C39 China I1I)\Ruifeng EDC16C39 System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB1-2B/2C (Bosch Diesel EDC16C39 China I1I)\JAC EDC16C39 System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DB1-2B/2C (Bosch Diesel EDC16C39 China I1I)\Ruifeng EDC16C39 System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC GreenJet Engine\HFC4DA1-1B VE pump (China I1I)		✓	✓			
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Bosch Automatic Identification	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China I1I\JND 12V China I1I Bosch Diesel Engine System	✓	✓	✓	✓	A0060, A0061, A0062, A0063, A0064, A0065, A0066, A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074	S0022, S0023, S0024
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China I1I\JND 2.8L China I1I Electronic Control VE System		✓	✓			
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 2.8L China IV 24V Bosch System CAN	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 2.8L China IV Electronic Control VE System	✓	✓	✓	✓	A0137, A0138, A0139, A0140, A0141	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 2.8L China IV Economic Common Rail System K	✓	✓	✓	✓	A0075, A0076, A0077, A0078, A0079, A0080, A0081, A0082, A0083, A0084, A0064, A0085, A0086, A0087, A0088, A0089, A0090, A0091, A0092, A0093	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 2.8L China IV Economic Common Rail System CAN	✓	✓	✓	✓	A0097, A0100, A0101, A0102, A0103, A0109, A0088, A0089, A0076, A0094, A0099, A0110, A0111	S0027
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 2.8L China IV Economic Common Rail System CAN Pickup	✓	✓	✓	✓	A0076, A0094, A0099, A0110, A0111, A0097, A0100, A0101, A0102, A0103, A0084, A0088, A0136	S0028, S0027
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 3.2L China IV Continental Electronic Diesel Engine System CAN	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND 3.2L China IV Continental Electronic System CAN	✓	✓	✓	✓	A0069, A0123, A0124, A0125, A0126, A0127, A0128, A0129, A0130, A0110, A0131, A0132, A0133, A0134, A0135, A0107	S0026
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China IV\JND412D165-42 4.8L EDC7UC31 (P1090_V52) (China IV)	✓	✓	✓	✓	A0069, A0094, A0095, A0096, A0076, A0097, A0098, A0064	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China V\JND 2.8L China V Bosch System CAN	✓	✓	✓	✓	A0083, A0099, A0112, A0113, A0114, A0097, A0100, A0101, A0102, A0103, A0084, A0088, A0089, A0115, A0107, A0081, A0116, A0117, A0118, A0119, A0120,	S0027
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China V\JND 3.2L China V Continental Electronic System CAN	✓	✓	✓	✓	A0069, A0123, A0124, A0125, A0126, A0127, A0128, A0129, A0130, A0110, A0131, A0132, A0133, A0134, A0135, A0107	S0026
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China V\JND 4.8L China V Bosch Diesel Engine System	✓	✓	✓	✓	A0069, A0094, A0095, A0099, A0097, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108	S0025, S0026
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China V\JND412D165-42 4.8L EDC17CV44 (P1664V100) (China V)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\China V\JND412D165-42 4.8L EDC17CV44 (P1664V200) (China V)	✓	✓	✓	✓	Please refer to BOSCH Function List	

JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Exhaust Aftertreatment System\Tenneco 1.2 Exhaust Aftertreatment (JAC JND4.8L Engine)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Exhaust Aftertreatment System\Tenneco 7.1 Exhaust Aftertreatment (JAC JND3.2L Engine)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Exhaust Aftertreatment System\Tenneco 7.1 Exhaust Aftertreatment (JAC JND4.8L Engine - 250CAN)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Exhaust Aftertreatment System\Tenneco 7.1 Exhaust Aftertreatment (JAC JND4.8L Engine - 500CAN)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Navistar Engine\Exhaust Aftertreatment System\Tenneco Exhaust Aftertreatment (JAC JND J1939 6, 14)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Chaocai Engine\HPC4DF2-2C Engine (EDC17C55)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Chaocai Engine\HPC4DF3-2C Engine (EDC17C55)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Chaocai Engine\HPC4DF1-2D1 Engine (EDC17CV54)\Chaocai P880 EDC17CV54 with EGR (CAN)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\JAC Chaocai Engine\HPC4DF1-2D1 Engine (EDC17CV54)\Chaocai P880 EDC17CV54 with EGR(K)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Shuailing\Engine Management System (EMS)\Cummins Engine	✓	✓	✓	✓	Please refer to CUMMINS Function List	
JAC Shuailing\Engine Management System (EMS)\Yunnei Power Engine	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function List	
JAC Shuailing\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Shuailing\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Shuailing\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Shuailing\Engine Management System (EMS)\Yangchai engine	✓	✓	✓	✓	Please refer to YANGCHAI Function List	
JAC Shuailing\Engine Management System (EMS)\Xichai Engine	✓	✓	✓	✓	Please refer to XICHAI Function List	
JAC Shuailing\Engine Management System (EMS)\Chaocai Engine	✓	✓	✓	✓	Please refer to CHAOCAL Function List	
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ465 (Vagon)	✓	✓	✓	✓	A0270, A0271, A0256, A0272, A0273, A0274, A0275, A0276, A0257, A0277, A0278, A0279, A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288,	S0072, S0073, S0030, S0074, S0075
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ474 (UAES)	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0292, A0248, A0250	
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ465/LJ469 Dual Fuel (AECS_FC12)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253	S0025
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ469Q_IAEB (AECS_FC11)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253	S0025
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ469 (WHL D_LEC4A)	✓	✓	✓	✓		S0025
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ469 (China VI)	✓	✓	✓	✓	A0267, A0256, A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320,	S0002, S0109
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ4A15Q6 (AECS_FC34)	✓	✓	✓	✓	A0270, A0427, A0428, A0429, A0060, A0430, A0305, A0263, A0431, A0432, A0433	S0025, S0137, S0003
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ4A15Q6 (AECS_FC34 OBD)	✓	✓	✓	✓		
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ4A18 (AECS_FC12F)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253	S0025
JAC Shuailing\Engine Management System (EMS)\Liuji Power Engine\LJ4A15 (AECS_FC12E)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253, A0425, A0426	S0025
JAC Shuailing\Engine Management System (EMS)\Sida Power	✓	✓	✓	✓	Please refer to SIDA Function List	
JAC Shuailing\Engine Management System (EMS)\Great Wall 491QE Engine\UMC M7 Engine System - 2C	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0248, A0249, A0250, A0251, A0252, A0253	
JAC Shuailing\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Shuailing\Exhaust Aftertreatment System (SCR)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Shuailing\Body Control Module (BCM)\Body Control System (N Series/K6)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Shuailing\Body Control Module (BCM)\Body Control System (X200 type)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012	S0002, S0003, S0004, S0005, S0006
JAC Shuailing\Body Control Module (BCM)\Body Control System (T6 type)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023, A0024, A0025, A0026, A0027, A0028, A0029	S0002, S0003, S0004, S0007, S0008
JAC Shuailing\Body Control Module (BCM)\Body Control System (T8 type)	✓	✓	✓	✓	A0020, A0018, A0017, A0030, A0028, A0027, A0026, A0031, A0032, A0033, A0034, A0035, A0036, A0037, A0038, A0039, A0015, A0040, A0016, A0014, A0041	S0002, S0003, S0004, S0009, S0008
JAC Shuailing\Body Control Module (BCM)\Softec BCM\Softec BCM (ISO11898)	✓	✓	✓	✓	A0001, A0382, A0383, A0004, A0384, A0033, A0385, A0386, A0009, A0010, A0011, A0387, A0388, A0389	S0132, S0133, S0025, S0134, S0003, S0004
JAC Shuailing\Body Control Module (BCM)\Softec BCM\Softec BCM (J1939)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0390, A0051, A0052, A0053, A0054, A0055, A0391, A0392, A0393, A0388, A0394	S0025, S0135, S0136
JAC Shuailing\Body Control Module (BCM)\Tri-Ring BCM\Tri-Ring BCM (ISO11898)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0390, A0051, A0052, A0053, A0054, A0055, A0391, A0392, A0393, A0395, A0396, A0388, A0394	S0025, S0135, S0136
JAC Shuailing\Supplemental Restraint System (SRS)\Bosch Airbag	✓	✓	✓	✓		S0017, S0018, S0019, S0020
JAC Shuailing\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Shuailing\Supplemental Restraint System (SRS)\LE17F-ABM	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Shuailing\Supplemental Restraint System (SRS)\Suzhou Taihang Changqing Airbag (X200/T6/T8)	✓	✓	✓	✓		S0017, S0076, S0019
JAC Shuailing\Supplemental Restraint System (SRS)\East Joy Long Airbag System (K)	✓	✓	✓	✓		

JAC Shuailing\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN)	✓	✓	✓	✓		
JAC Shuailing\Anti-theft System (IMMO)\UAES - Anti-theft Controller (X200 type/T6 type)	✓	✓	✓	✓		S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071
JAC Shuailing\Instrument Control Module (ICM)\N721 Tongda Meter	✓	✓	✓	✓	A0186, A0187, A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0200, A0199, A0200, A0201, A0202, A0203, A0204, A0205,	S0015
JAC Shuailing\Instrument Control Module (ICM)\LE17F_ICM	✓	✓	✓	✓	A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Shuailing\Instrument Control Module (ICM)\Instrument Panel Module (X200 type/T6 type)	✓	✓	✓		A0192, A0174, A0215, A0179, A0198, A0202, A0203, A0206, A0207, A0208, A0209, A0211, A0026, A0213, A0214, A0185	S0002, S0003, S0004
JAC Shuailing\Instrument Control Module (ICM)\Instrument Panel Module (T8 type)	✓	✓	✓		A0192, A0174, A0216, A0179, A0198, A0202, A0203, A0207, A0208, A0026, A0213, A0214, A0185	S0002, S0003, S0004
JAC Shuailing\Automatic Emergency Call System (eCall)\ERA-GLONASS	✓	✓	✓		A0059	S0021
JAC Shuailing\Anti-pinch Module (APM)\LE17F_APM		✓	✓			S0001
JAC Shuailing\Lane Departure Warning System (LDWS)\LE17F_LDWS	✓	✓	✓			
JAC Shuailing\Electronic Stability Control (ESC)\LE17F_ESP	✓	✓	✓	✓	A0142, A0143	S0029
JAC Shuailing\Electronic Stability Control (ESC)\Electronic Stability Program (T6 type)	✓	✓	✓	✓		S0002, S0003, S0004, S0104, S0105, S0106, S0107, S0108
JAC Shuailing\Electronic Stability Control (ESC)\Electronic Stability Program (T8 type)	✓	✓	✓	✓		S0002, S0003, S0004, S0104, S0105, S0106, S0107, S0108
JAC Shuailing\Tire Pressure Monitoring System (TPMS)\BSAE - Tire Pressure Monitoring System (X200 type)	✓	✓	✓	✓		S0002, S0003, S0004
JAC Shuailing\Tire Pressure Monitoring System (TPMS)\Tire Pressure Monitoring System (T6 type)	✓	✓	✓	✓		S0002, S0003, S0004, S0079, S0080, S0081, S0082
JAC Shuailing\Tire Pressure Monitoring System (TPMS)\Tire Pressure Monitoring System (T8 type)	✓	✓	✓	✓		S0002, S0003, S0004
JAC Shuailing\Electric Power Steering (EPS)\Hangzhou Shibao W6001 (K) (X200 type)	✓	✓	✓	✓		
JAC Shuailing\Electric Power Steering (EPS)\Hangzhou Shibao W6030 (CAN)	✓	✓	✓	✓		S0128, S0129, S0025, S0130, S0131, S0003
JAC Shuailing\Passive Entry Passive Start (PEPS)\Passive Entry And Start System (T6 type/T8 type)	✓	✓	✓	✓		S0002, S0003, S0004, S0083, S0084, S0085, S0086, S0087, S0088, S0089, S0090, S0091, S0092, S0093, S0094, S0095, S0096, S0097, S0098, S0099, S0100,
JAC Shuailing\Electronic Steering Column Lock (ESCL)\Electronic Steering Column Lock (T6 type)	✓	✓	✓	✓	A0295, A0296, A0297, A0298	S0002, S0003, S0004, S0103
JAC Shuailing\Electronic Steering Column Lock (ESCL)\Electronic Steering Column Lock (T8 type)	✓	✓	✓	✓	A0295, A0296, A0297, A0298	S0002, S0003, S0004, S0103
JAC Shuailing\All-wheel Drive (AWD)\Borgwarner ESOF Time-sharing Four-wheel Drive (Borgwarner ESOF (Electronic Shift)) (T6 type)	✓	✓	✓	✓	A0299, A0300, A0301	
JAC Shuailing\All-wheel Drive (AWD)\Borgwarner ESOF Time-sharing Four-wheel Drive (Borgwarner ESOF (Electronic Shift)) (T8 type)	✓	✓	✓	✓	A0299, A0300, A0301	
JAC Shuailing\Anti-pinch Module (APM)\Anti-pinch Module (T8 type)	✓	✓	✓	✓		
JAC Shuailing\Gateway (GW)\Gateway (T8 type)	✓	✓	✓			S0002, S0003, S0004
JAC Shuailing\Panoramic Video Surveillance System (AVM)\360-degree Panoramic Parking System (T8 type)	✓	✓	✓		A0333	S0002, S0003, S0004, S0110, S0111, S0112, S0113
JAC Shuailing\In-vehicle Infotainment System (IVI)\Audio-visual Entertainment System (MP5) (T8 type)	✓	✓	✓	✓	A0334, A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0342, A0343, A0344, A0345	S0002, S0003, S0004
JAC Shuailing\Vehicle Information Interaction System (VII)\Vehicle Remote Control Terminal (TBOX) (T8 type)	✓	✓	✓	✓		S0002, S0003, S0004, S0114, S0115
JAC Junling\Engine Management System (EMS)\JAC GreenJet Engine	✓	✓	✓			
JAC Junling\Engine Management System (EMS)\JAC Navistar Engine	✓	✓	✓			
JAC Junling\Engine Management System (EMS)\JAC Chaochai Engine	✓	✓	✓			
JAC Junling\Engine Management System (EMS)\Cummins Engine	✓	✓	✓	✓	Please refer to CUMMINS Function List	
JAC Junling\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Junling\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Junling\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Junling\Engine Management System (EMS)\Yangchai engine	✓	✓	✓	✓	Please refer to YANGCHAI Function List	
JAC Junling\Engine Management System (EMS)\Xichai Engine	✓	✓	✓	✓	Please refer to XICHAI Function List	
JAC Junling\Engine Management System (EMS)\Chaochai Engine	✓	✓	✓	✓	Please refer to CHAOCHAI Function List	
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ465 (Vagon)	✓	✓	✓	✓	A0270, A0271, A0256, A0272, A0273, A0274, A0275, A0276, A0257, A0277, A0278, A0279, A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288,	S0072, S0073, S0030, S0074, S0075
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ474 (UAES)	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0292, A0248, A0250	
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ469 (WHL D)	✓	✓	✓	✓		S0025
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ465 (AECS)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253	S0025
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ469 (AECS)	✓	✓	✓	✓	A0254, A0255, A0256, A0257, A0258, A0259, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0253	S0025
JAC Junling\Engine Management System (EMS)\Liuji Power Engine\ LJ469 (China VI)	✓	✓	✓	✓	A0267, A0256, A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320,	S0002, S0109

JAC Junling\Engine Management System (EMS)\Sida Power	✓	✓	✓	✓	Please refer to SIDA Function List	
JAC Junling\Engine Management System (EMS)\Great Wall 491QE Engine\UMC M7 Engine System - 2C	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0248, A0249, A0250, A0251, A0252, A0253	
JAC Junling\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Junling\Exhaust Aftertreatment System (SCR)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Junling\Body Control Module (BCM)\Body Control System (N Series/K6)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Junling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Junling\Supplemental Restraint System (SRS)\LE17F_ABM	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Junling\Supplemental Restraint System (SRS)\Bosch Airbag	✓	✓	✓	✓		S0017, S0018, S0019, S0020
JAC Junling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (K)	✓	✓	✓	✓		
JAC Junling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN)	✓	✓	✓	✓		
JAC Junling\Anti-theft System (IMMO)\IMMO (UAES - Immobilizer)	✓	✓	✓	✓		S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071
JAC Junling\Instrument Control Module (ICM)\N721 Tongda Meter	✓	✓	✓	✓	A0186, A0187, A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0020, A0199, A0200, A0201, A0202, A0203, A0204, A0205, A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Junling\Instrument Control Module (ICM)\LE17F_ICM	✓	✓	✓	✓	A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Junling\Automatic Emergency Call System (eCall)\ERA-GLONASS	✓	✓	✓		A0059	S0021
JAC Junling\Anti-pinch Module (APM)\LE17F_APM		✓	✓			S0001
JAC Junling\Lane Departure Warning System (LDWS)\LE17F_LDWS	✓	✓	✓			
JAC Kangling\Engine Management System (EMS)\JAC GreenJet Engine	✓	✓	✓			
JAC Kangling\Engine Management System (EMS)\JAC Navistar Engine	✓	✓	✓			
JAC Kangling\Engine Management System (EMS)\JAC Chaocai Engine	✓	✓	✓			
JAC Kangling\Engine Management System (EMS)\Yunnei Power Engine	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function List	
JAC Kangling\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Kangling\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Kangling\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Kangling\Engine Management System (EMS)\Yangchai engine	✓	✓	✓	✓	Please refer to YANGCHAI Function List	
JAC Kangling\Engine Management System (EMS)\Xichai Engine	✓	✓	✓	✓	Please refer to XICHAI Function List	
JAC Kangling\Engine Management System (EMS)\Chaocai Engine	✓	✓	✓	✓	Please refer to CHAOCCHAI Function List	
JAC Kangling\Engine Management System (EMS)\Liuiji Power Engine	✓	✓	✓			
JAC Kangling\Engine Management System (EMS)\Sida Power	✓	✓	✓	✓	Please refer to SIDA Function List	
JAC Kangling\Engine Management System (EMS)\Great Wall 491QE Engine\UMC M7 Engine System - 2C	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0248, A0249, A0250, A0251, A0252, A0253	
JAC Kangling\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Kangling\Exhaust Aftertreatment System (SCR)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Kangling\Body Control Module (BCM)\Body Control System (N Series/K6)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Kangling\Supplemental Restraint System (SRS)\Bosch Airbag	✓	✓	✓	✓		S0017, S0018, S0019, S0020
JAC Kangling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Kangling\Supplemental Restraint System (SRS)\LE17F_ABM	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Kangling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (K)	✓	✓	✓	✓		
JAC Kangling\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN)	✓	✓	✓	✓		
JAC Kangling\Anti-theft System (IMMO)\IMMO (UAES - Immobilizer)	✓	✓	✓	✓		S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071
JAC Kangling\Instrument Control Module (ICM)\N721 Tongda Meter	✓	✓	✓	✓	A0186, A0187, A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0020, A0199, A0200, A0201, A0202, A0203, A0204, A0205, A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Kangling\Instrument Control Module (ICM)\LE17F_ICM	✓	✓	✓	✓	A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Kangling\Automatic Emergency Call System (eCall)\ERA-GLONASS	✓	✓	✓		A0059	S0021
JAC Kangling\Anti-pinch Module (APM)\LE17F_APM		✓	✓			S0001
JAC Kangling\Lane Departure Warning System (LDWS)\LE17F_LDWS	✓	✓	✓			

JAC Ruifeng\Engine Management System (EMS)\JAC GreenJet Engine	✓	✓	✓			
JAC Ruifeng\Engine Management System (EMS)\JAC Navistar Engine	✓	✓	✓			
JAC Ruifeng\Engine Management System (EMS)\JAC Chaochai Engine	✓	✓	✓			
JAC Ruifeng\Engine Management System (EMS)\Cummins Engine	✓	✓	✓	✓	Please refer to CUMMINS Function List	
JAC Ruifeng\Engine Management System (EMS)\Yunnei Power Engine	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function List	
JAC Ruifeng\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Yangchai engine	✓	✓	✓	✓	Please refer to YANGCHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Xichai Engine	✓	✓	✓	✓	Please refer to XICHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Chaochai Engine	✓	✓	✓	✓	Please refer to CHAOCHAI Function List	
JAC Ruifeng\Engine Management System (EMS)\Liuji Power Engine	✓	✓	✓			
JAC Ruifeng\Engine Management System (EMS)\Sida Power	✓	✓	✓	✓	Please refer to SIDA Function List	
JAC Ruifeng\Engine Management System (EMS)\Great Wall 491QE Engine\UMC M7 Engine System - 2C	✓	✓	✓	✓	A0243, A0244, A0245, A0246, A0247, A0234, A0248, A0249, A0250, A0251, A0252, A0253	
JAC Ruifeng\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Ruifeng\Exhaust Aftertreatment System (SCR)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Ruifeng\Body Control Module (BCM)\Body Control System (N Series/K6)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Ruifeng\Supplemental Restraint System (SRS)\Bosch Airbag	✓	✓	✓	✓		S0017, S0018, S0019, S0020
JAC Ruifeng\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Ruifeng\Supplemental Restraint System (SRS)\LE1TF-ABM	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Ruifeng\Supplemental Restraint System (SRS)\East Joy Long Airbag System (K)	✓	✓	✓	✓		
JAC Ruifeng\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN)	✓	✓	✓	✓		
JAC Ruifeng\Anti-theft System (IMMO)\IMMO (UAES - Immobilizer)	✓	✓	✓	✓		S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071
JAC Xingrui\Engine Management System (EMS)\EMS Bosch Diesel 1.9T (P1673 DPF Program)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\EMS Bosch Diesel 2.7T (P1466 SCR Solution)	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1-2B2 (Bosch Diesel EDC16C39 China I11)\JAC Bosch Common Rail System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1-2B2 (Bosch Diesel EDC16C39 China I11)\Ruifeng Bosch Common Rail System	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine 12V K line	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine K Line	✓	✓	✓	✓		S0030, S0027
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C53\HFC4DA1-2C Engine CAN Line	✓	✓	✓	✓		S0030
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC P1211 EDC17CV54 EGR\JAC P1211_EDC17CV54 EGR_CAN	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC P1211 EDC17CV54 EGR\JAC P1211_EDC17CV54 EGR_K	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC HFC4DA1-2C Engine\HFC4DA1-2C 24V K	✓	✓	✓	✓		
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC-Bosch EDC17C54\JAC HFC4DA1-2C Engine\HFC4DA1-2C 24V CAN	✓	✓	✓	✓		
JAC Xingrui\Engine Management System (EMS)\HFC4DA1/B1-2C Diesel Engine (Bosch System China IV)\JAC - Bosch EDC17C63 Economic Version	✓	✓	✓	✓	Please refer to BOSCH Function List	
JAC Xingrui\Anti-lock Braking System (ABS)\Bosch ABS8.0	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Xingrui\Supplemental Restraint System (SRS)\Jinheng airbag system	✓	✓	✓	✓	Please refer to FOTON Function List	
JAC Xingrui\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Xingrui\Supplemental Restraint System (SRS)\LE1TF-ABM	✓	✓	✓	✓	A0293, A0294	S0002, S0077, S0078
JAC Xingrui\Supplemental Restraint System (SRS)\East Joy Long Airbag System (K)	✓	✓	✓	✓		
JAC Xingrui\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN)	✓	✓	✓	✓		
JAC Gallop\Engine Management System (EMS)\JAC GreenJet Engine	✓	✓	✓			
JAC Gallop\Engine Management System (EMS)\JAC Navistar Engine	✓	✓	✓			

JAC Gallop\Engine Management System (EMS)\Cummins Engine	✓	✓	✓	✓	Please refer to CUMMINS Function List	
JAC Gallop\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Gallop\Engine Management System (EMS)\Xichai Engine	✓	✓	✓	✓	Please refer to XICHAI Function List	
JAC Gallop\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Gallop\Engine Management System (EMS)\Chaochai Engine	✓	✓	✓	✓	Please refer to CHAOCHAI Function List	
JAC Gallop\Engine Management System (EMS)\SINOTRUK Engine	✓	✓	✓	✓	Please refer to SINOTRUCK Function List	
JAC Gallop\Engine Management System (EMS)\Shangchai Engine	✓	✓	✓	✓	Please refer to SHANGCHAI Function List	
JAC Gallop\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Gallop\Engine Management System (EMS)\Hino Engine\Hino P11C (China IV CAN line)	✓	✓	✓	✓	Please refer to GUANGQIHINO Function List	
JAC Gallop\Engine Management System (EMS)\Hino Engine\Hino P11C (China III K line)	✓	✓	✓	✓	Please refer to GUANGQIHINO Function List	
JAC Gallop\Engine Management System (EMS)\Nanchong Engine\SY-KERNEL Natural Gas System	✓	✓	✓	✓	Please refer to NATURALGASENGINE Function List	
JAC Gallop\Engine Management System (EMS)\Nanchong Engine\Nanchong Natural Gas Engine (CAN)	✓	✓	✓	✓	Please refer to NATURALGASENGINE Function List	
JAC Gallop\Anti-lock Braking System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Gallop\Exhaust Aftertreatment System (SCR)	✓	✓	✓	✓	Please refer to SCR Function List	
JAC Gallop\Electronically Controlled Air Suspension (ECAS)\ECAS_WABCO	✓	✓	✓	✓		S0116, S0117, S0118, S0119
JAC Gallop\Electronically Controlled Air Suspension (ECAS)\ECAS_SORL	✓	✓	✓	✓		S0120, S0121
JAC Gallop\Body Control Module (BCM)\Body Control System (K6)	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Gallop\Instrument Control Module (ICM)\Combination Meter (ICM)	✓	✓	✓	✓	A0127, A0126, A0346, A0347, A0348, A0349, A0350, A0351, A0352, A0353, A0354, A0355, A0356, A0357, A0358, A0359, A0080, A0360, A0361, A0362, A0363,	S0002, S0004, S0122, S0003
JAC Gallop\Retarder Control System (RCS)\RCS_ZF	✓	✓	✓	✓		
JAC Gallop\Retarder Control System (RCS)\RCS_FAST	✓	✓	✓	✓		
JAC Gallop\Transmission Control Unit (TCU)\Fast AMT	✓	✓	✓	✓		S0015
JAC Gallop\Transmission Control Unit (TCU)\TCU_ZF	✓	✓	✓	✓		S0123, S0124, S0125, S0126
JAC Gallop\Transmission Control Unit (TCU)\TCU_Endurant	✓	✓	✓			
JAC Gallop\Electronic Brake System (EBS)\EBS_WABCO	✓	✓	✓	✓		
JAC Gallop\Automatic Emergency Braking System (AEBS)\AEBS_OGP_WABCO	✓	✓	✓	✓		S0127
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\JAC GreenJet Engine	✓	✓	✓			
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\JAC Navistar Engine	✓	✓	✓			
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Cummins Engine	✓	✓	✓	✓	Please refer to CUMMINS Function List	
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Yuchai Engine	✓	✓	✓	✓	Please refer to YUCHAI Function List	
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Weichai Engine	✓	✓	✓	✓	Please refer to WEICHAI Function List	
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Chaochai Engine	✓	✓	✓	✓	Please refer to CHAOCHAI Function List	
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Quanchai engine	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
JAC Light Truck (Export)\N Series\Engine Management System (EMS)\Yunnei Power Engine	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Kormee ABS (Pneumatic Brake)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Kormee ABS (Hydraulic Brake)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Asia Pacific ABS (K) (LE460)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\WABCO ABS_K12 version	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\WABCO ABS(K) (JAC)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\WABCO ABS(CAN) (JAC)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Bosch ABS 8.0 (K)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Knorr ABS (JAC)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Bosch ABS 9.0 (K)	✓	✓	✓	✓	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\YOUFIN ABS (K)	✓	✓	✓	✓	Please refer to ABS Function List	

JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\VIE ABS (K)	√	√	√	√	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Trinova ABS (DFAC Xiaobawang)	√	√	√	√	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Anti-lock Braking System (ABS)\Other ABS	√	√	√	√	Please refer to ABS Function List	
JAC Light Truck (Export)\N Series\Instrument Control Module (ICM)\N721 Instrument	√	√	√	√	A0186, A0187, A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0020, A0199, A0200, A0201, A0202, A0203, A0204, A0205, A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164,	S0015
JAC Light Truck (Export)\N Series\Instrument Control Module (ICM)\LE17F_ICM	√	√	√	√		S0015
JAC Light Truck (Export)\N Series\Instrument Control Module (ICM)\Instrument Panel Module (T8 type)	√	√	√		A0192, A0174, A0216, A0179, A0198, A0202, A0203, A0207, A0208, A0026, A0213, A0214, A0185	S0002, S0003, S0004
JAC Light Truck (Export)\N Series\Instrument Control Module (ICM)\XTD Instrument	√	√	√	√	A0186, A0187, A0397, A0189, A0398, A0399, A0400, A0401, A0402, A0020, A0027, A0026, A0013, A0403, A0149, A0211, A0404, A0405, A0406, A0407, A0408,	
JAC Light Truck (Export)\N Series\Body Control Module (BCM)\Body Control System (N Series/K6)	√	√	√	√	A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057, A0058	S0002, S0010, S0011, S0012, S0013, S0014, S0015, S0016
JAC Light Truck (Export)\N Series\Anti-theft System (IMMO)\IMMO (UAES – Immobilizer)	√	√	√	√		S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071
JAC Light Truck (Export)\N Series\Electronic Stability Control (ESC)\LE17F_ESP	√	√	√	√	A0142, A0143	S0029
JAC Light Truck (Export)\N Series\Electronic Stability Control (ESC)\Electronic Stability Program (T8 type)	√	√	√	√		S0002, S0003, S0004, S0104, S0105, S0106, S0107, S0108
JAC Light Truck (Export)\N Series\Supplemental Restraint System (SRS)\East Joy Long Airbag System (CAN) (L900/N Series)	√	√	√	√	A0293, A0294	S0002, S0077, S0078
JAC Light Truck (Export)\N Series\Supplemental Restraint System (SRS)\LE17F_ABM	√	√	√	√	A0293, A0294	S0002, S0077, S0078

Special Function Table	
S0001	Anti-pinch function self-learning
S0002	Read and write vehicle identification code (VIN code)
S0003	Read and write ECU installation date
S0004	Read and write vehicle feature codes
S0005	Remote key matching
S0006	Delete key match
S0007	Remote control key matching
S0008	Delete remote control key
S0009	Remote control key (only applicable to models without PEPS (keyless entry one-button start unit) system vehicle type)
S0010	Reset the number of engine ignitions
S0011	BCM runtime reset
S0012	Read and write BCM factory configuration data
S0013	Key adaptation
S0014	Key deletion
S0015	ECU reset
S0016	Key switch reset
S0017	Read and write vehicle production date
S0018	Read and write last ECU inspection date
S0019	Read and write vehicle chassis number
S0020	Software reset
S0021	Data flash
S0022	High-pressure Test
S0023	Accelerated Testing
S0024	Compression Test
S0025	Read and Write Vehicle Identification Number (VIN)
S0026	Read and write injector code (IQA)
S0027	Read and write injector data
S0028	Cylinder cut off Test
S0029	ESP calibration function
S0030	Read/Write VIN
S0031	DPF value reduction
S0032	DPF regeneration request
S0033	DPF Manual Regeneration
S0034	DPF forced regeneration
S0035	DPF Simulates Soot Write
S0036	Aftertreatment AdBlue system test
S0037	Emptying test
S0038	Pressure build test
S0039	Leak test
S0040	Small injection volume
S0041	Medium injection volume
S0042	Large injection volume
S0043	Atomization test
S0044	AdBlue pressure pipe heating test
S0045	AdBlue suction pipe heating test
S0046	AdBlue supply pipe heating test
S0047	AdBlue box heating test
S0048	Urea Pump Motor Actuator Test
S0049	SCR Upstream Temperature Sensor Test
S0050	AdBlue injection valve test
S0051	High Voltage Side Cut-Off Test
S0052	Urea metering valve test
S0053	AdBlue return pipe heating test
S0054	Read and write calibration identification code (CALID)
S0055	Reading and writing of the injector code (QR code)
S0056	Cut off cylinder (injection off) test
S0057	Engine speed comparison test
S0058	Start fault information test
S0059	Tooth learning
S0060	Idle catalytic converter diagnosis
S0061	Oxidation Sensor Feedback rationality diagnosis
S0062	DTC diagnosis test
S0063	Matching the entire system
S0064	Replace the engine ECU
S0065	Replace the anti-theft controller module
S0066	Number of matched keys
S0067	Add key
S0068	Delete key
S0069	Key detect
S0070	Reset engine ECU
S0071	Reset anti-theft controller
S0072	Read and write calibration identification code (CALID)

S0073	read and write calibration program date
S0074	Read and write test serial number
S0075	Read and write program date
S0076	Read and write the date the vehicle was last repaired
S0077	Read and write repair date
S0078	Lock the airbag controller module ACU
S0079	Write ID of front left tire pressure sensor
S0080	Write ID of front right tire pressure sensor
S0081	Write ID of left rear tire pressure sensor
S0082	Right rear tire pressure sensor ID writing
S0083	Write security code
S0084	A full set of new system matching (including new keys, new engine management system (EMS) and new keyless entry and start system (PEPS))
S0085	Replacing the keyless entry start system (PEPS)
S0086	Replace the keyless entry start system (PEPS) (learn the security key (SK) from the engine management system (EMS))
S0087	Replace engine control unit
S0088	Replace the engine management system (EMS) (learn the security key (SK) from the keyless entry start system (PEPS))
S0089	Reset the keyless entry start system (PEPS)
S0090	Reset engine control unit
S0091	Add new key
S0092	Add old key
S0093	Delete the matched key
S0094	Read engine control unit status
S0095	Read current key status
S0096	Teaching Electronic Steering Column Lock (ESCL) Password
S0097	Erase the electronic steering column lock (ESCL) password
S0098	Electronic steering column lock (ESCL) fault code upload
S0099	Clear the electronic steering column lock (ESCL) fault code
S0100	The electronic steering column lock (ESCL) restores the initial value
S0101	Electronic steering column lock (ESCL) tracking data upload
S0102	The keyless entry system (PEPS) restores the initial value
S0103	Electric steering column lock (electronic steering column lock) learning
S0104	Write filling status
S0105	Manual exhaust
S0106	Yaw Rate sensor calibration
S0107	Steering wheel angle sensor calibration
S0108	Write variable configuration word
S0109	Write the date when the vehicle was offline
S0110	Automatic calibration of panoramic video surveillance system (AVM)
S0111	Manual calibration of panoramic video surveillance system (AVM)
S0112	Activate the panoramic surveillance video system (AVM)
S0113	Body color configuration
S0114	BCM (Body Control System) Learning Key
S0115	BCM (Body Control System) Teaching Key
S0116	Height sensor calibration (method 1)
S0117	Pressure sensor calibration (method 1)
S0118	Height sensor calibration (method 2)
S0119	Pressure sensor calibration (method 2)
S0120	height Sensor calibration
S0121	Pressure sensor calibration
S0122	Read and write PPK value
S0123	Clutch semi-combine learning
S0124	Clutch characteristic curve calibration
S0125	Ramp sensor calibration
S0126	Roll radius calibration
S0127	OGP activation calibration
S0128	Corner zero calibration
S0129	Read and write vehicle name
S0130	Read and write service point or diagnostic instrument number
S0131	Read and write flash or configuration date
S0132	Read and write JAC spare part numbers
S0133	Read and write ECU serial number
S0134	Read and write system name or engine type
S0135	Read and write BCM key data (reserved)
S0136	Read and write BCM factory configuration data
S0137	Read and write ECU programming date

Active Test Table

A0001	Rear defrost relay
A0002	Electric window relay
A0003	Start to soften the relay
A0004	Warning light relay
A0005	Door unlock relay
A0006	Keyhole light
A0007	Buzzer drive relay
A0008	Door lock relay
A0009	Rear Fog Lamp Relay
A0010	Daytime running light relay
A0011	Position light relay
A0012	Ceiling Light
A0013	Front Fog Lamp
A0014	Alarm horn
A0015	Wiper high speed control
A0016	Inhibit start
A0017	Low Beam Light
A0018	Low speed wiper control
A0019	Lock Out
A0020	High Beam Light
A0021	Keyhole insert lighting
A0022	Danger warning lights
A0023	Electric window power control
A0024	Unlock
A0025	Daytime running light (drl)
A0026	Rear Fog Light
A0027	Position lights
A0028	Rear defrost
A0029	Indoor control lights
A0030	Front Fog Lamp Relay
A0031	Right daytime running light
A0032	Electric window
A0033	Keyhole illumination
A0034	Rearview mirror folded open
A0035	Rearview mirror folded closed
A0036	Rear-view mirror heating
A0037	Left daytime running light
A0038	Left turn signal



A0040	LDW (Lane Departure System) indicator
A0041	Unlock
A0042	Wiper switch input/output control
A0043	Interior lamp input/output control
A0044	Backlight input and output control
A0045	Headlight input and output control
A0046	High beam input and output control
A0047	Low beam input and output control
A0048	Front fog light input and output control
A0049	Rear fog light input and output control
A0050	ISS Relay Control
A0051	Blower Relay Control
A0052	Compressor Relay Control
A0053	Unlock Relay Control
A0054	Latch Relay Control
A0055	Turn Signal Relay Control
A0056	Deicing device relay control
A0057	Left door light control
A0058	Right door light control
A0059	Turn on the device to flip the initial angle recognition
A0060	A/C Compressor
A0061	Time calibration correction
A0062	Lights Signal Test
A0063	Odometer lamp test
A0064	System light test
A0065	External detector test
A0066	Cylinder close test
A0067	Exhaust light valve test
A0068	Time Calibration Correction Released
A0069	Engine speed test
A0070	Lighting control test
A0071	Front-supply pump test
A0072	Relieve pressure waveform correction
A0073	Common Rail pressure test
A0074	EGR coolant output control
A0075	Air conditioning compressor test
A0076	Turbocharger testing
A0077	EGR valve test
A0078	Prohibit power-up time correction
A0079	Activated power up time correction
A0080	Preheat indicator light test
A0081	Glow plug control test
A0082	OBD lamp test
A0083	MeUn test
A0084	Fuel pre-supply pump test
A0085	QWC test
A0086	Rail pressure target test
A0087	Stop engine test
A0088	Exhaust brake valve test
A0089	Fuel filter heating test
A0090	Fuel consumption Test
A0091	Low voltage control glow plug test
A0092	Fuel consumption display test
A0093	Water temperature indicator test
A0094	EGR Opening Test
A0095	Metering unit duty cycle test
A0096	Throttle valve actuator test
A0097	Air conditioner Compressor signal test
A0098	Malfunction Indicator Lamp (MIL) Lamp test
A0099	Actual Rail Pressure Test
A0100	Preheat relay control test
A0101	Preheating indicator control test
A0102	Fault indicator control test
A0103	System light signal turn-on test
A0104	Rail pressure fluctuation correction test
A0105	EGR cooler output open test
A0106	Exhaust valve light signal test
A0107	Cylinder cut off Test
A0108	Clear pressure limiting valve times
A0109	Fuel Preheat Pump Test
A0110	glow plug test
A0111	Fuel Metering Valve Duty Cycle Test
A0112	AdBlue injection valve test
A0113	AdBlue pump test
A0114	Return pump test
A0115	Close MeUn test
A0116	Starter low-end control test
A0117	AdBlue pressure pipe heating test
A0118	AdBlue box heating test
A0119	Return tube heating test
A0120	Urea supply unit test
A0121	Urea Suction Line Heating Test
A0122	SCR relay test
A0123	EGR valve opening test
A0124	Throttle valve opening test
A0125	Booster pressure test
A0126	Engine Tachometer test
A0127	Speedometer test
A0128	Cooling Fan Control Test
A0129	Start Relay Test
A0130	Fuel Pump Relay Test
A0131	Power Supply Relay Test
A0132	Fault light test
A0133	Exhaust Brake Pad Test
A0134	Glow Plug Lamp Test
A0135	Oil water separator lamp test
A0136	Fuel filter heating test
A0137	AdBlue nozzle Opening test
A0138	Pipeline Heater Test
A0139	AdBlue tank heater test
A0140	AdBlue tank heater test
A0141	AdBlue nozzle test
A0142	Test cycle threshold
A0143	Write TSCl torque limit test
A0144	Cruise control indicator lamp
A0145	Charging indicator
A0146	Exhaust brake indicator lamp

A0148	Brake system failure indicator
A0149	Engine oil pressure low
A0150	Brake lights
A0151	Door open indicator
A0152	Seat belt indicator
A0153	Engine anti-theft control system indicator light
A0154	Engine water temperature warning light
A0155	Fuel warning light
A0156	Automatic emergency brake warning light
A0157	Fuel/water separation lamp
A0158	Low Coolant Level
A0159	Cab lock indicator
A0160	ESP fault indicator
A0161	Engine exhaust system temperature is high
A0162	Driver warning light
A0163	Lane departure warning light
A0164	Brake air pressure alarm
A0165	4WD work indicator
A0166	A/T error
A0167	Engine emission filter indicator
A0168	Engine fault indicator lamp
A0169	ASR indicator lamp
A0170	ABS lights
A0171	Engine emission fault indicator
A0172	ESP off indicator
A0173	Hill-start auxiliary indicator
A0174	Engine preheat indicator
A0175	Mirror heating indicator
A0176	High beam indicator
A0177	Rear fog light indicator
A0178	Position indicator light
A0179	Parking brake indicator light
A0180	Front fog indicator
A0181	Low beam indicator
A0182	Selective catalytic reduction system failure indicator
A0183	All indicator lights
A0184	LCD Monitor
A0185	Buzzer test
A0186	Speedometer
A0187	Engine tachometer
A0188	Engine temperature gauge
A0189	fuel level gauge
A0190	Barometer
A0191	All tables
A0192	Door status indicator
A0193	Anti-skid indicator light
A0194	Parking brake indicator light
A0195	Transmission fault indicator
A0196	Engine oil Pressure Indicator
A0197	Airbag fault indicator
A0198	Engine emission indicator
A0199	Charge and discharge instructions
A0200	Brake failure
A0201	ABS failure alarm
A0202	Tire pressure alarm
A0203	Low oil level indicator
A0204	Cab lock
A0205	Exhaust Brake
A0206	Daytime Running Light
A0207	Seat belt warning
A0208	Cruise status indicator
A0209	Engine general fault indicator
A0210	Engine series fault indicator
A0211	Oil and water separation
A0212	AdBlue level alarm
A0213	All indicators
A0214	LCD
A0215	EBD (Electronic Braking Force Distribution System) LED indicator
A0216	Auto light
A0217	Engine Brake switch test
A0218	Low Idle Engine Brake Switch Test
A0219	Fuel metering unit test
A0220	Throttle test
A0221	Throttle valve self-learning test
A0222	Exhaust temperature sensor test
A0223	DPF Upstream Temperature Sensor Test
A0224	Engine oil cut off test
A0225	EGR valve self-learning test
A0226	Intake heating control valve test
A0227	Fuel Filter Heater Test
A0228	Starter Signal Test
A0229	MIL
A0230	Carbon canister Purge
A0231	Fuel Pump
A0232	Low speed fan
A0233	Fan speed
A0234	Air Conditioning Clutch
A0235	According to the number of steps to control the stepper motor
A0236	Control stepper motor by speed
A0237	Idle Air Control Valve Reset
A0238	Spark Advance
A0239	Ignition delay
A0240	Injector
A0241	Fuel system Open-loop
A0242	Reset chunk learning
A0243	Engine fault indicator light (MIL)
A0244	Carbon Carbon canister control valve
A0245	Fuel pump relay
A0246	COOLING FAN RELAY 1
A0247	COOLING FAN RELAY 2
A0248	Delayed ignition
A0249	Prohibit fuel Injection
A0250	Idle speed control
A0251	Step motor Position set
A0252	Step motor actuator test
A0253	ECU reset
A0254	MIL indicator lamp

A0256	Pump relay
A0257	Main Relay
A0258	Air conditioning relay
A0259	Cooling fan relay 1
A0260	Cooling fan relay 2
A0261	Magnetizing time
A0262	Ignition advance angle
A0263	Target idling
A0264	Air-fuel ratio
A0265	Fuel injection pulse width
A0266	Charging Efficiency
A0267	Carbon canister solenoid valve
A0268	Upstream oxygen sensor heating
A0269	Downstream oxygen sensor heating
A0270	Fault lamp
A0271	Gas Valve closed
A0272	A/C compressor relay
A0273	Valve remains closed
A0274	Anti-theft control lights
A0275	Cooling fan relay high
A0276	Cooling fan relay Low
A0277	Carbon canister valve
A0278	Idle Actuator
A0279	Single cylinder closed
A0280	Ignition coil 1
A0281	Ignition coil 2
A0282	Ignition coil 3
A0283	Reset all of the adaptive values
A0284	Reset Atmospheric correction value feedback by intake air signal
A0285	Reset half of the adaptive value of knock ignition angle
A0286	Reset adaptive value adjustment of throttle position
A0287	Reset injection time addition for each tank/multiplication Adaptive factor [Oxygen sensor]
A0288	Reset idle speed adaptive value
A0289	Reset the rough engine value adaptive value
A0290	Reset the adaptive value of the engine rough value heated by the catalytic package
A0291	Reset Carbon canister adaptation
A0292	Fuel injection prohibit
A0293	Airbag status indicator control
A0294	Collision output 1 test
A0295	ESCL (Electronic Steering Column Lock Control Unit) switch status input
A0296	Control the driver's door input
A0297	Control vehicle speed input
A0298	Control lock/unlock action
A0299	System operating mode
A0300	4WD (four-wheel drive) lamp (high)
A0301	4WD (four-wheel drive) light (low)
A0302	Low speed fan relay
A0303	High-speed fan relay
A0304	MIL lights
A0305	SVS lamp
A0306	IDLE CONTROL
A0307	Speed control
A0308	Electronic throttle
A0309	Fuel evaporative leak diagnosis
A0310	Air conditioner switch relay
A0311	GPF data reset
A0312	GPF regeneration
A0313	Vacuum pump relay control
A0314	Relief valve control (pressurization item)
A0315	Carbon Carbon canister shut-off valve control
A0316	Exhaust VVT control
A0317	Intake VVT control
A0318	EGR valve control
A0319	Carbon canister flushing pump control
A0320	Booster valve control
A0321	Front oxygen heating control
A0322	Rear oxygen heating control
A0323	Switch control
A0324	Prohibit fuel injection control
A0325	Oil level meter reading control
A0326	Speed meter reading control
A0327	Calculate CVN check code
A0328	After-sales total reset (fuel idling throttle)
A0329	Reset long-term fuel self-learning adjustment value
A0330	Reset idle speed self-learning value
A0331	Forced throttle self-learning
A0332	CNG light
A0333	Quad camera power control
A0334	Power switch
A0335	Set audio source
A0336	Set the current frequency of the radio (FM)
A0337	Set the current frequency of the radio (AM)
A0338	Radio frequency switching
A0339	Set radio preset station
A0340	Automatic radio scan
A0341	Radio search
A0342	Mute setting
A0343	Set bass
A0344	Set midrange
A0345	Set the treble
A0346	Engine Thermometer (LED) test
A0347	Fuel Gauge (LED) test
A0348	Barometer 1 test
A0349	Barometer 2 test
A0350	All gauges (vehicle speed, RPM, fuel, water temperature, barometer 1, barometer 2) tested
A0351	Left turn indicator test
A0352	Right turn indicator test
A0353	High beam test
A0354	Position light test
A0355	Rear fog light test
A0356	Front fog light test
A0357	Driver's seat belt alarm test
A0358	Engine oil pressure low test
A0359	Oil-water separation test
A0360	low fuel test
A0361	Urea level low test
A0362	Cooling water level low test

A0364	High water temperature test
A0365	door open indication test
A0366	MIL lamp test
A0367	Engine fault test
A0368	ABS fault indicator test
A0369	Low brake air pressure test
A0370	Parking brake indication test
A0371	Stop lamp test
A0372	SCR indicator (red) test
A0373	Fuel saving indicator test
A0374	Rearview mirror heating indication test
A0375	Cruise indicator test
A0376	Air filter clogging indication test
A0377	low beam indicator test
A0378	SCR indicator (yellow) test
A0379	Lane Departure System malfunction indicator test
A0380	All indicator lights tested
A0381	LCD screen test
A0382	Electric door and window relay
A0383	start inhibit relay
A0384	Unlock relay
A0385	Alarm horn relay
A0386	Latching Relay
A0387	Indoor light
A0388	Key match
A0389	Clear key information
A0390	ISS relay control (reserved)
A0391	Defrost Relay Control
A0392	Left Step Light Control
A0393	Right Step Light control
A0394	Key erase
A0395	Front light LED control
A0396	Horn relay control
A0397	Engine water thermometer gauge
A0398	Barometer 1
A0399	Barometer 2
A0400	All gauge (Vehicle speed, Engine speed, Fuel, Water Temperature, Air pressure gauge 1, Air pressure gauge 2)
A0401	Left turn indicator
A0402	Right Turn Indicator
A0403	Main driver seatbelt alarm
A0404	Preheat indicator
A0405	Low fuel oil
A0406	Low AdBlue level
A0407	Low cooling water level
A0408	Flip lock stop alarm
A0409	water temperature is high
A0410	Door opening indication
A0411	Engine failure
A0412	ABS fault indicator
A0413	Brake pressure low
A0414	Parking brake indication
A0415	STOP lamp
A0416	SCR indicator (red)
A0417	Fuel saving indicator
A0418	Rear view mirror heating indication
A0419	Cruise indicator
A0420	Air filter blocking indication
A0421	Low light indication
A0422	SCR indicator (yellow)
A0423	Lane deviation system failure indicator
A0424	LCD Off LCD display
A0425	Electronic throttle position
A0426	Accelerator Pedal Position
A0427	Oil pump
A0428	low fan
A0429	high fan
A0430	PWM fan
A0431	Carbon canister stop valve
A0432	Canister
A0433	Target high idle speed