

JMC V14.06 Function List

Note:

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Light-Duty Trucks Model\Bosch engine (JX4D20A6L MD1SC089)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Light-Duty Trucks Model\N800\N800 BEV\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N800\N800 BEV\Asia-Pacific ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\N800\N800 BEV\VCU	✓	✓	✓	✓	A0462, A0463, A0464, A0465, A0466, A0467, A0468, A0469	S0189, S0096, S0190
Light-Duty Trucks Model\N800\N800 BEV\MCU Motor Controller	✓	✓	✓	✓		
Light-Duty Trucks Model\N800\N800 BEV\OBC car charger	✓	✓	✓	✓		
Light-Duty Trucks Model\N800\N800 BEV\BMS high voltage battery management system	✓	✓	✓	✓		S0191, S0192, S0096
Light-Duty Trucks Model\N800\N800 BEV\DCDC DC-DC converter	✓	✓	✓	✓		
Light-Duty Trucks Model\N800\N800 BEV\SCU shifter	✓	✓	✓			S0092, S0193, S0096
Light-Duty Trucks Model\N800\N800 BEV\BCM body controller	✓	✓	✓	✓	A0470, A0207, A0208, A0471, A0300, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0472, A0473, A0220, A0222	S0112, S0092, S0096
Light-Duty Trucks Model\N800\N800 BEV\ICM Combination Instrument	✓	✓	✓	✓	A0474, A0475, A0225, A0226, A0227, A0476, A0477, A0478, A0479, A0480, A0481, A0482, A0483, A0484, A0485, A0486, A0487, A0488, A0489, A0490, A0250,	S0096, S0092, S0154
Light-Duty Trucks Model\N800\N800 BEV\ACM (air conditioning panel)	✓	✓	✓	✓		
Light-Duty Trucks Model\N800\N800 BEV\TBOX	✓	✓	✓	✓		S0096, S0190
Light-Duty Trucks Model\N800\N800 BEV\GW network management controller	✓	✓	✓			
Light-Duty Trucks Model\N800\N800 BEV\N801BMS battery management system	✓	✓	✓	✓		S0100, S0191, S0192
Light-Duty Trucks Model\N800\N800\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N800\N800\Engine system (ECM)\N800 KR with Bosch system (4D30 IV)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N800\N800\Engine system (ECM)\N800 Kai Rui with Bosch system (PUMA IV)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N800\N800\Engine system (ECM)\N800 KR With Bosch system (4D30 V)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0001, S0014, S0008, S0009, S0010, S0011, S0012, S0002, S0015, S0016, S0017
Light-Duty Trucks Model\N800\N800\Engine system (ECM)\N800 Kai Rui with Bosch system (PUMA V)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N800\N800\Engine system (ECM)\Yunnei Power DEV Series China VI Diesel Engine	✓	✓	✓	✓	Please refer to YUNNEIPOWER Function List	
Light-Duty Trucks Model\N800\N800\Anti-lock Brake System (ABS)\Asia-Pacific ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\N800\N800\Anti-lock Brake System (ABS)\VIE Pneumatic Brake ABS	✓	✓	✓	✓	A0058, A0059, A0060, A0061, A0062	S0031, S0032, S0033
Light-Duty Trucks Model\N800\N800\Exhaust Aftertreatment System (SCR)\N800 Kai Rui with Wuxi Weifu SCR system		✓	✓	✓		
Light-Duty Trucks Model\N800\N800\Exhaust Aftertreatment System (SCR)\Weifu Lida NOx2.0 Exhaust Aftertreatment (Non-Air Assist)	✓	✓	✓	✓	Please refer to SCR Function List	
Light-Duty Trucks Model\N800\N800\Exhaust Aftertreatment System (SCR)\Weifu Lida NOx2.0 Exhaust Aftertreatment (Air Assist)	✓	✓	✓	✓	Please refer to SCR Function List	
Light-Duty Trucks Model\N800\N800\AMT gearbox (TCU)	✓	✓	✓	✓		S0092
Light-Duty Trucks Model\N800\N800\BODY CONTROL SYSTEM\Body Control System	✓	✓	✓	✓	A0223, A0224, A0249, A0264, A0227, A0225, A0226, A0502, A0503, A0504, A0505, A0506, A0507, A0508, A0373, A0509, A0372	S0112, S0201, S0092, S0096
Light-Duty Trucks Model\N800\N800\BODY CONTROL SYSTEM\Body Control System (BCM)-Tongzhi	✓	✓	✓	✓	A0204, A0207, A0208, A0471, A0300, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0310, A0311, A0472, A0220, A0222	S0202, S0203, S0204, S0112, S0096, S0205, S0092
Light-Duty Trucks Model\N800\N800\Combinatorial instrument\Combination instrument (IC1)	✓	✓	✓	✓	A0474, A0475, A0225, A0226, A0227, A0264, A0510, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0518, A0253, A0519, A0520, A0521, A0522, A0523,	S0206, S0025
Light-Duty Trucks Model\N800\N800\Combinatorial instrument\Combination instrument (IC2)	✓	✓	✓	✓	A0474, A0475, A0225, A0226, A0227, A0264, A0510, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0253, A0519, A0520, A0521, A0522, A0523, A0524,	S0113, S0092, S0154
Light-Duty Trucks Model\N800\N800\ESP-Wuhu Bethel	✓	✓	✓	✓	A0077, A0539, A0540, A0541, A0542, A0543, A0544, A0545, A0546, A0547, A0548, A0549, A0550, A0202, A0289	S0134, S0207, S0208, S0209, S0100, S0092
Light-Duty Trucks Model\N800\N800\Electronic clutch\Electronic Clutch (ICS)-Vorpo	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092

Light-Duty Trucks Model\N800\N800\Electronic clutch\Electronic clutch (ICS)	✓	✓	✓	✓		S0096, S0194, S0195, S0196, S0197, S0198, S0092, S0199, S0200
Light-Duty Trucks Model\N800\N800\TBOX\TBOX-HiRain	✓	✓	✓			S0096, S0215, S0216, S0092
Light-Duty Trucks Model\N800\N800\TBOX\Vehicle terminal (TBOX 2.0)	✓	✓	✓	✓		S0096, S0215, S0216, S0092
Light-Duty Trucks Model\N800\N800\Jiulle airbag KD5.2 (SRS)	✓	✓	✓	✓		
Light-Duty Trucks Model\N800\N800HP\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N800\N800HP\Body Control Module-BCM	✓	✓	✓	✓	A0223, A0224, A0249, A0264, A0227, A0225, A0226, A0502, A0503, A0504, A0505, A0506, A0507, A0508, A0373, A0509, A0372	S0112, S0201, S0092, S0096
Light-Duty Trucks Model\N800\N800HP\VIE Pneumatic Brake ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\N800\N800HP\Electronic clutch (ICS)	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Light-Duty Trucks Model\N800\N800HP National VI\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N800\N800HP National VI\VIE Pneumatic Brake ABS	✓	✓	✓	✓	A0058, A0059, A0060, A0061, A0062	S0031, S0032, S0033
Light-Duty Trucks Model\N800\N800HP National VI\Yunnei Power DEV Series China VI Diesel Engine	✓	✓	✓	✓	A0109, A0110, A0891, A0007, A0892, A0009, A0010, A0003, A0115, A0011, A0893, A0559, A0894, A0895, A0560, A0896, A0897, A0898, A0899, A0013, A0900,	S0013, S0001, S0350, S0003, S0004, S0006, S0007, S0002, S0351, S0019
Light-Duty Trucks Model\N800\N800HP National VI\Vehicle terminal (TBOX 2.0)	✓	✓	✓	✓		S0096, S0215, S0216, S0092
Light-Duty Trucks Model\N800\N800HP National VI\Body Control Module (BCM)	✓	✓	✓	✓	A0223, A0224, A0249, A0264, A0227, A0225, A0226, A0263, A0503, A0906, A0907, A0908, A0507, A0508, A0373, A0509, A0909, A0910	S0112, S0201, S0352, S0100, S0025
Light-Duty Trucks Model\N800\N800HP National VI\Instrument combination (IC)	✓	✓	✓	✓	A0474, A0475, A0665, A0666, A0667, A0264, A0510, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0518, A0253, A0660, A0520, A0521, A0522, A0661,	S0206, S0025
Light-Duty Trucks Model\N806\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N806\Electronic clutch (ICS)	✓	✓	✓	✓		S0100, S0194, S0195, S0196, S0197, S0198, S0092, S0199, S0200, S0210, S0211, S0212, S0135, S0213, S0214
Light-Duty Trucks Model\N806\VIE Pneumatic Brake ABS	✓	✓	✓	✓	A0058, A0059, A0060, A0061, A0062	S0031, S0032, S0033
Light-Duty Trucks Model\N806\Engine Control Module (China VI Bosch C81)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Light-Duty Trucks Model\N806\Tongzhi - Body Controller (BCM)	✓	✓	✓	✓	A0204, A0295, A0296, A0471, A0571, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0310, A0311, A0472, A0220, A0222, A0789, A0790, A0791	S0113, S0203, S0204, S0112, S0096, S0205, S0092
Light-Duty Trucks Model\N806\ESP-Wuhu Bethel	✓	✓	✓	✓	A0077, A0539, A0540, A0541, A0542, A0543, A0544, A0545, A0546, A0547, A0548, A0549, A0550, A0202, A0289	S0134, S0207, S0208, S0209, S0100, S0092
Light-Duty Trucks Model\N806\Electronic clutch-ICS-vortex	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Light-Duty Trucks Model\N806\Asia-Pacific ABS System - Hydraulic Brake	✓	✓	✓	✓	A0792, A0793, A0794, A0795, A0796, A0797, A0798, A0799, A0800, A0801, A0802, A0803, A0804, A0805, A0806	S0092
Light-Duty Trucks Model\N806\AMT gearbox (TCU)	✓	✓	✓	✓		S0092
Light-Duty Trucks Model\N806\TBOX-HiRain	✓	✓	✓			S0096, S0215, S0216, S0092
Light-Duty Trucks Model\N806\Combinatorial instrument	✓	✓	✓	✓	A0474, A0475, A0807, A0808, A0667, A0809, A0510, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0253, A0660, A0520, A0521, A0522, A0661, A0524,	S0309, S0286, S0092, S0154
Light-Duty Trucks Model\N806\Dangerous Goods China VI ADAS	✓	✓	✓			S0310, S0311
Light-Duty Trucks Model\N825\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N825\EMS (Engine Control Unit)	✓	✓	✓	✓		S0027
Light-Duty Trucks Model\N825\ICM (Instrument China VI)	✓	✓	✓	✓		
Light-Duty Trucks Model\N825\ICM (Instrument)	✓	✓	✓	✓		S0286
Light-Duty Trucks Model\N825\TBOX (remote control device)	✓	✓	✓	✓		S0301, S0302
Light-Duty Trucks Model\N825\ABS (Pneumatic Brake CAN line)	✓	✓	✓	✓		
Light-Duty Trucks Model\N825\DCU (urea pump control unit)	✓	✓	✓	✓		
Light-Duty Trucks Model\N825\BCM (Body Controller)	✓	✓	✓	✓	A0649, A0648, A0300, A0311, A0213, A0215, A0295, A0778, A0779, A0220, A0216, A0780, A0781, A0217, A0218, A0214, A0310, A0782, A0783, A0222, A0784	S0286, S0349
Light-Duty Trucks Model\N822\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N822\EMS (Engine Management System)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0027, S0281, S0223, S0268, S0269

Light-Duty Trucks Model\N822\ICM_CN5 (Instrument)	✓	✓	✓	✓	A0751, A0752, A0753, A0754, A0716, A0717, A0718, A0719, A0720, A0721, A0722, A0723, A0724, A0725, A0755, A0756, A0728, A0729, A0732, A0757, A0245,	
Light-Duty Trucks Model\N822\TBOX_CN5 (remote control device)	✓	✓	✓	✓		S0301, S0302
Light-Duty Trucks Model\N822\ABS (Brake Anti-lock Brake System Hydraulic Brake)	✓	✓	✓	✓		
Light-Duty Trucks Model\N822\ABS (Pneumatic Brake K line)	✓	✓	✓	✓		
Light-Duty Trucks Model\N822\ABS (Pneumatic Brake CAN line)	✓	✓	✓	✓	A0767, A0768, A0769	
Light-Duty Trucks Model\N822\ICS (Electronic Clutch)	✓	✓	✓	✓		
Light-Duty Trucks Model\N822\IPM (forward looking monocular camera)	✓	✓	✓	✓		S0027
Light-Duty Trucks Model\N821\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N821\EMS (Engine Control Unit)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0027, S0281, S0223, S0268, S0269
Light-Duty Trucks Model\N821\ABS (Pneumatic Brake CAN line)	✓	✓	✓	✓	A0767, A0768, A0769	
Light-Duty Trucks Model\N821\ICM_CN6 (Instrument)	✓	✓	✓	✓	A0512, A0531, A0253, A0521, A0513, A0658, A0529, A0527, A0522, A0511, A0524, A0770, A0771, A0659, A0533, A0661, A0530, A0665, A0520, A0772, A0514,	
Light-Duty Trucks Model\N821\TBOX_CN6 (remote control device)	✓	✓	✓	✓		S0294, S0303, S0304, S0305, S0306, S0307
Light-Duty Trucks Model\N821\BCM (Body Controller)	✓	✓	✓	✓	A0649, A0648, A0300, A0311, A0213, A0215, A0295, A0778, A0779, A0220, A0216, A0780, A0781, A0217, A0218, A0214, A0310, A0782, A0783, A0222, A0784,	S0286, S0349
Light-Duty Trucks Model\N900\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N900\Engine system (ECM)\N900 Kaiwei Chaochai Engine - Dynamic Data Diagnosis				✓	A0041, A0093	
Light-Duty Trucks Model\N900\Engine system (ECM)\N900 Kaiwei Chaochai Engine - Static Data Diagnosis	✓	✓	✓	✓		S0043, S0044
Light-Duty Trucks Model\N900\Engine system (ECM)\N900 Kaiwei Yuchai Engine - Dynamic Data Diagnosis	✓	✓	✓	✓	A0094, A0041, A0093	
Light-Duty Trucks Model\N900\Engine system (ECM)\N900 Kaiwei Yuchai Engine - Static Data Diagnosis	✓	✓	✓	✓		S0043, S0044
Light-Duty Trucks Model\N900\Exhaust Aftertreatment System (SCR)\N800 Kai Rui with Wuxi Weifu SCR system		✓	✓	✓		
Light-Duty Trucks Model\N900\Electronically controlled dispensing pump system	✓	✓	✓			
Light-Duty Trucks Model\N720\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N720\Engine system (ECM)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0018, S0006, S0002, S0003, S0004, S0007, S0019, S0020, S0001, S0015, S0016, S0021, S0022, S0008, S0009, S0010, S0011, S0012
Light-Duty Trucks Model\N720\Anti-lock Brake System (ABS)\Asia-Pacific ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\N720\Anti-lock Brake System (ABS)\VIE Pneumatic Brake ABS	✓	✓	✓	✓	A0058, A0059, A0060, A0061, A0062	S0031, S0032, S0033
Light-Duty Trucks Model\N720\Electronic clutch (ICS)	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Light-Duty Trucks Model\N710\JMC P1877 EDC17C81 Chian VI	✓	✓	✓	✓	Please refer to BOSCH Function List	
Light-Duty Trucks Model\N710\Engine system (ECM)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0001, S0014, S0008, S0009, S0010, S0011, S0012, S0002, S0015, S0016, S0017
Light-Duty Trucks Model\N625\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N625\EMS (Engine Management System)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0027, S0281, S0223, S0268, S0269
Light-Duty Trucks Model\N625\ICM_CN5 (Instrument)	✓	✓	✓	✓	A0751, A0752, A0753, A0754, A0716, A0717, A0718, A0719, A0720, A0721, A0722, A0723, A0724, A0725, A0755, A0756, A0728, A0729, A0732, A0757, A0245,	
Light-Duty Trucks Model\N625\TBOX_CN5 (remote control device)	✓	✓	✓	✓		S0301, S0302
Light-Duty Trucks Model\N625\ABS (Brake Anti-lock Brake System Hydraulic Brake)	✓	✓	✓	✓		
Light-Duty Trucks Model\N625\ABS (Pneumatic Brake CAN line)	✓	✓	✓	✓	A0767, A0768, A0769	
Light-Duty Trucks Model\N625\ICM_CN6 (Instrument)	✓	✓	✓	✓	A0512, A0531, A0253, A0521, A0513, A0658, A0529, A0527, A0522, A0511, A0524, A0770, A0771, A0659, A0533, A0661, A0530, A0665, A0520, A0772, A0514,	
Light-Duty Trucks Model\N625\TBOX_CN6 (remote control device)	✓	✓	✓	✓		S0294, S0303, S0304, S0305, S0306, S0307
Light-Duty Trucks Model\N625\BCM (Body Controller)	✓	✓	✓	✓	A0649, A0648, A0300, A0311, A0213, A0215, A0295, A0778, A0779, A0220, A0216, A0780, A0781, A0217, A0218, A0214, A0310, A0782, A0783, A0222, A0784,	S0286, S0308

Light-Duty Trucks Model\N621\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N621\EMS (Engine Control Unit)	✓	✓	✓	✓		S0027
Light-Duty Trucks Model\N621\ABS (Pneumatic Brake K line)	✓	✓	✓	✓		
Light-Duty Trucks Model\N621\BCM (Body Controller)	✓	✓	✓	✓	A0649, A0648, A0300, A0311, A0213, A0215, A0295, A0778, A0779, A0220, A0216, A0780, A0781, A0217, A0218, A0214, A0310, A0782, A0783, A0222, A0784	S0286, S0349
Light-Duty Trucks Model\N621\ICM (Instrument China VI)	✓	✓	✓	✓		
Light-Duty Trucks Model\N621\ICM (Instrument)	✓	✓	✓	✓		S0286
Light-Duty Trucks Model\N621\TBOX (remote control device)	✓	✓	✓	✓		S0301, S0302
Light-Duty Trucks Model\N621\ABS (anti-lock brakes)	✓	✓	✓	✓		
Light-Duty Trucks Model\N620\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N620\ABS (Pneumatic Brake K line)	✓	✓	✓	✓		
Light-Duty Trucks Model\N620\EMS (Engine Control Unit)	✓	✓	✓	✓		S0027
Light-Duty Trucks Model\N620\ICM (Instrument)	✓	✓	✓	✓		S0286
Light-Duty Trucks Model\N620\TBOX (remote control device)	✓	✓	✓	✓		S0301, S0302
Light-Duty Trucks Model\N620\ABS (anti-lock brakes)	✓	✓	✓	✓		
Light-Duty Trucks Model\N620\ABS (Pneumatic Brake CAN line)	✓	✓	✓	✓		
Light-Duty Trucks Model\N601\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\N601\Engine system (ECM)\Bosch EDC17 System_4D30 (China IV)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N601\Engine system (ECM)\Bosch EDC17 System_PUMA (China IV)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N601\Engine system (ECM)\Bosch EDC17C53 System_4D30 (China V)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0001, S0014, S0008, S0009, S0010, S0011, S0012, S0002, S0015, S0016, S0017
Light-Duty Trucks Model\N601\Engine system (ECM)\Bosch EDC17 System_PUMA (China V)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013
Light-Duty Trucks Model\N601\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\N601\Jiulle airbag KD5.2 (SRS)	✓	✓	✓	✓		
Light-Duty Trucks Model\N600\Engine system (ECM)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0018, S0006, S0002, S0003, S0004, S0007, S0019, S0020, S0001, S0015, S0016, S0021, S0022, S0008, S0009, S0010, S0011, S0012
Light-Duty Trucks Model\N600\Electronic clutch (ICS)	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Quick Test	✓	✓	✓			
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\493 engine (China IV)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0023, S0015, S0024, S0014, S0025, S0008, S0009, S0010, S0011, S0012
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Bosch Common Rail - EDC16C39 - Automatic Identification	✓	✓	✓	✓	Please refer to BOSCH Function List	
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Diesel Engine (Bosch Euro III Electronic Control System)	✓	✓	✓	✓	A0001, A0007, A0355, A0356, A0357, A0358	S0001, S0142, S0143
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Diesel Engine (Delphi Euro III Electronic Control) System)	✓	✓	✓	✓	A0359, A0360, A0040, A0039, A0361, A0184, A0362, A0100, A0363, A0364, A0365, A0366	S0001, S0013, S0144
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Electronically controlled dispensing pump system	✓	✓	✓			
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\Asia-Pacific ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Trucks Model\Kai Yun/Shunda (old models)\VIE Pneumatic Brake ABS	✓	✓	✓	✓	A0058, A0059, A0060, A0061, A0062	S0031, S0032, S0033
Pickup Type\Classic Yuhu\Quick Test	✓	✓	✓			
Pickup Type\Classic Yuhu\Engine system (ECM)\Delphi Europe 4 Gasoline Engine	✓	✓	✓	✓	A0041, A0044, A0045, A0046, A0047, A0038, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057	S0027, S0028, S0029, S0030
Pickup Type\Classic Yuhu\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0044, S0004, S0003, S0005, S0006, S0007, S0024, S0014, S0027, S0001
Pickup Type\Classic Yuhu\Engine system (ECM)\Bosch Diesel System (C63)	✓	✓	✓	✓	A0001, A0109, A0110, A0111, A0112, A0275, A0007, A0009, A0114, A0003, A0115, A0116, A0117, A0011, A0118, A0119, A0120, A0121, A0122, A0123, A0124,	S0013, S0001, S0051, S0020

Pickup Type\Classic Yuhu\Anti-lock Brake System (ABS)\Bosch anti-lock brake	√	√	√	√	Please refer to ABS Function List	
Pickup Type\Classic Yuhu\Anti-lock Brake System (ABS)\ABS9	√	√	√	√	Please refer to ABS Function List	
Pickup Type\Classic Yuhu\Supplemental Restraint System (SRS)	√	√	√	√	A0162, A0163	S0025, S0095, S0096, S0097
Pickup Type\Classic Yuhu\Body Control System	√	√	√	√	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0220, A0221, A0222	S0112, S0113, S0114, S0115, S0092
Pickup Type\Classic Yuhu\Dashboard System (ICM)	√	√	√	√	A0223, A0224, A0225, A0226, A0227, A0228, A0229, A0230, A0231, A0232, A0233, A0234, A0235, A0236, A0237, A0238, A0239, A0240, A0241, A0242, A0243,	S0116, S0117, S0118, S0027, S0119, S0120, S0121, S0122
Pickup Type\Classic Yuhu\Tongzhi anti-theft system	√	√	√	√		S0217, S0176, S0100
Pickup Type\New Yuhu\Quick Test	√	√	√			
Pickup Type\New Yuhu\Engine system (ECM)\Gasoline - UMC-EMS	√	√	√	√	A0164, A0045, A0046, A0047, A0165, A0166, A0167, A0168, A0169, A0170, A0171, A0172	S0092, S0096, S0098, S0099
Pickup Type\New Yuhu\Engine system (ECM)\Diesel-Bosch-C63	√	√	√	√	A0001, A0109, A0110, A0111, A0112, A0113, A0007, A0009, A0114, A0003, A0115, A0116, A0117, A0011, A0118, A0119, A0120, A0121, A0122, A0123, A0124,	S0013, S0001, S0016, S0017, S0051, S0020
Pickup Type\New Yuhu\ZF-6-speed gearbox system (TCU)	√	√	√	√		S0151, S0152, S0153
Pickup Type\New Yuhu\Bosch - Body Stability Control (ESP)	√	√	√	√	A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0199, A0200, A0201, A0202	S0107, S0108, S0109, S0110, S0111
Pickup Type\New Yuhu\Continental-Airbag System (SRS)	√	√	√	√	A0162, A0163	S0025, S0095, S0096, S0097
Pickup Type\New Yuhu\Tongzhi - Body Controller (BCM)	√	√	√	√	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0220, A0221, A0222	S0112, S0113, S0114, S0115, S0092
Pickup Type\New Yuhu\Visteon-Dashboard System (ICM)	√	√	√	√	A0223, A0224, A0225, A0226, A0227, A0228, A0229, A0230, A0231, A0232, A0233, A0234, A0235, A0236, A0237, A0238, A0239, A0240, A0241, A0242, A0243,	S0116, S0117, S0118, S0027, S0119, S0120, S0121, S0122
Pickup Type\New Yuhu\Visteon-Automatic Air Conditioning System (AC)	√	√	√	√		S0154
Pickup Type\New Yuhu\PEPS\Gasoline - Lear-PEPS	√	√	√	√		S0045, S0155, S0156, S0157
Pickup Type\New Yuhu\PEPS\Diesel-Lear-PEPS	√	√	√			S0045, S0155, S0157
Pickup Type\New Yuhu\BorgWarner-four-wheel drive system (TCCU)	√			√	A0256, A0257, A0258	S0123, S0124, S0125
Pickup Type\New Yuhu\Baolong-Tire Pressure Monitoring System (TPMS)	√	√	√	√		S0158, S0159, S0160, S0161, S0162, S0163, S0164, S0165, S0166, S0092, S0154
Pickup Type\New Yuhu\Electronic clutch (ICS)	√	√	√	√		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Pickup Type\Collection Series\Quick Test	√	√	√			
Pickup Type\Collection Series\Engine system (ECM)\Bosch Common Rail - EDC16C39 - Automatic Identification	√	√	√	√	Please refer to BOSCH Function List	
Pickup Type\Collection Series\Engine system (ECM)\Gasoline Engine (Delphi Euro II Electronic Control System)		√	√	√	A0035, A0036, A0037, A0038, A0039, A0040	
Pickup Type\Collection Series\Engine system (ECM)\Gasoline Engine (Delphi Euro III Electronic Control System)	√	√	√	√	A0041, A0044, A0045, A0046, A0047, A0038, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057	S0027, S0028, S0029, S0030
Pickup Type\Collection Series\Engine system (ECM)\Diesel Engine (Bosch Euro III Electronic Control System)	√	√	√	√	A0001, A0024, A0025, A0026, A0027, A0028, A0029, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0003, S0004, S0007, S0001, S0026
Pickup Type\Collection Series\Engine system (ECM)\Bosch Diesel (Euro IV)	√	√	√	√		S0027, S0001
Pickup Type\Collection Series\Engine system (ECM)\493 engine (China IV)	√	√	√	√	A0001, A0002, A0003, A0004, A0005	S0023, S0015, S0024, S0014, S0025, S0008, S0009, S0010, S0011, S0012
Pickup Type\Collection Series\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	√	√	√	√	A0102, A0037, A0103, A0104, A0038, A0105, A0106, A0107, A0108	S0027, S0030
Pickup Type\Collection Series\Engine system (ECM)\Bosch D5 project (EDC17C63)	√	√	√	√	A0001, A0109, A0110, A0111, A0112, A0113, A0007, A0009, A0114, A0003, A0115, A0116, A0117, A0011, A0118, A0119, A0120, A0121, A0122, A0123, A0124,	S0013, S0001, S0016, S0017, S0051, S0020
Pickup Type\Collection Series\Anti-lock Brake System (ABS)\Asia-Pacific ABS System	√	√	√	√	Please refer to ABS Function List	
Pickup Type\Collection Series\Supplemental Restraint System (SRS)\East Joy Long airbag		√	√	√		S0052, S0053
Pickup Type\Collection Series\Supplemental Restraint System (SRS)\East Joy Long Airbag (AB10)	√	√	√	√		S0027
Pickup Type\Collection series (new)\Quick Test	√	√	√			
Pickup Type\Collection series (new)\Diesel Engine Management Module (EMS)	√	√	√	√	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0218, S0027, S0219, S0220, S0221, S0222, S0223, S0224
Pickup Type\Collection series (new)\Gasoline Engine Management Module (EMS)	√	√	√	√	A0561, A0562, A0563, A0037, A0564, A0565, A0566, A0567, A0172, A0568, A0569	S0027, S0225, S0226, S0227, S0228
Pickup Type\Collection series (new)\Body Control Module (BCM)	√	√	√	√		

Pickup Type\Collection series (new)\Anti-lock brake control module (ABS)	✓	✓	✓	✓		
Pickup Type\Collection series (new)\Instrument (IC)	✓	✓	✓	✓		
Pickup Type\Collection series (new)\Airbag Control Module (SRS)	✓	✓	✓	✓		
Pickup Type\Collection series (new)\Remote control module (TBOX)	✓	✓	✓			
Pickup Type\Collection series (new)\All-wheel drive module (MT AWD)	✓	✓	✓	✓		
Pickup Type\Collection series (new)\Tire Pressure Monitoring Module (TPMS)	✓	✓	✓	✓		
Pickup Type\Baowei series\Engine system (ECM)\Bosch Common Rail - EDC16C39 - Automatic Identification	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Baowei series\Engine system (ECM)\Gasoline Engine (Delphi Euro II Electronic Control System)		✓	✓	✓	A0035, A0036, A0037, A0038, A0039, A0040	
Pickup Type\Baowei series\Engine system (ECM)\Gasoline Engine (Delphi Euro III Electronic Control System)	✓	✓	✓	✓	A0041, A0044, A0045, A0046, A0047, A0038, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057	S0027, S0028, S0029, S0030
Pickup Type\Baowei series\Engine system (ECM)\Diesel Engine (Bosch Euro III Electronic Control System)	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0028, A0029, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0003, S0004, S0007, S0001, S0026
Pickup Type\Baowei series\Engine system (ECM)\Bosch Diesel (Euro IV)	✓	✓	✓	✓		S0027, S0001
Pickup Type\Baowei series\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	✓	✓	✓	✓	A0102, A0037, A0103, A0104, A0038, A0105, A0106, A0107, A0108	S0027, S0030
Pickup Type\Baowei series\Engine system (ECM)\Bosch D5 project (EDC17C63)	✓	✓	✓	✓	A0001, A0109, A0110, A0111, A0112, A0113, A0007, A0009, A0114, A0003, A0115, A0116, A0117, A0011, A0118, A0119, A0120, A0121, A0122, A0123, A0124	S0013, S0001, S0016, S0017, S0051, S0020
Pickup Type\Baowei series\Anti-lock Brake System (ABS)\Asia-Pacific ABS System	✓	✓	✓	✓	Please refer to ABS Function List	
Pickup Type\Baowei series\Supplemental Restraint System (SRS)		✓	✓	✓		S0052, S0053
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17C81 (China V, AdBlue) Engine	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ5D WIT (China V) Engine	✓	✓	✓	✓	Please refer to SIDA Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Delphi Diesel Engine (China V)	✓	✓	✓	✓	Please refer to JXISUZU Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17C55 Diesel System (4JB1, China IV)	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0028, A0029, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0044, S0003, S0004, S0005, S0006, S0001, S0014, S0027
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 Diesel System - Wolffu (China IV)\Wolffu EDC17CV54 CAN System (493 Light-Duty Trucks)	✓	✓	✓	✓		S0054, S0027, S0001
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 Diesel System - Wolffu (China IV)\Wolffu P1229 EDC17CV54 with EGR (K)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Bosch EDC17CV54 Diesel System - Wolffu (China IV)\Wolffu P1229 EDC17CV54 with EGR (CAN)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ4E Weifu Electronic Control VP Pump System (China IV)\Weifu Electronic Control VP Pump (CAN Line)	✓	✓	✓	✓	Please refer to JINGNING Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu JE493ZLQ4E Weifu Electronic Control VP Pump System (China IV)\Weifu Electronic Control VP Pump (K Line)	✓	✓	✓	✓	Please refer to QUANCHAI Function List	
Pickup Type\Qiling (light steam) series\Engine system (ECM)\Jiangxi Isuzu Delphi Gasoline Engine (4G22B)	✓	✓	✓	✓	A0102, A0037, A0130, A0131, A0038, A0105, A0106, A0107, A0108	S0027, S0030
Pickup Type\Baodian N310 1.8GDI (gasoline direct injection)\N310 1.8T engine system	✓	✓	✓	✓	A0132, A0133, A0134, A0135, A0037, A0136, A0137, A0138, A0139, A0140, A0141, A0142, A0143, A0144, A0145, A0146, A0147, A0148, A0149, A0150, A0151	S0055, S0056, S0057, S0058, S0059, S0060, S0061, S0062, S0063, S0064, S0065, S0066, S0067, S0068, S0069, S0070, S0071, S0072, S0073, S0074, S0075
Pickup Type\Baodian N310 1.8GDI (gasoline direct injection)\Asia-Pacific ABS System	✓	✓	✓	✓	Please refer to ABS Function List	
Pickup Type\Baodian N310 1.8GDI (gasoline direct injection)\East Joy Long Airbag (AB10)	✓	✓	✓	✓		S0027
Pickup Type\Yuhu EV\Quick Test	✓	✓	✓			
Pickup Type\Yuhu EV\Body Controller (BCM)	✓	✓	✓	✓	A0203, A0204, A0207, A0208, A0570, A0471, A0571, A0213, A0214, A0215, A0572, A0217, A0218, A0219, A0310, A0220, A0222	S0112, S0092, S0229
Pickup Type\Yuhu EV\Combination Meter (ICM)	✓	✓	✓		A0474, A0475, A0225, A0226, A0227, A0477, A0229, A0573, A0490, A0574, A0575, A0576, A0485, A0577, A0578, A0579, A0580, A0323, A0482, A0581, A0248	
Pickup Type\Yuhu EV\Vehicle Controller (VCU)	✓	✓	✓	✓	A0462, A0463, A0464, A0465, A0587, A0588, A0589, A0590	S0100, S0230, S0092, S0231
Pickup Type\Yuhu EV\Anti-lock Brake System (ABS)	✓	✓	✓	✓	A0200, A0277, A0278, A0279, A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0228, A0591, A0238	S0134, S0135, S0136, S0154
Pickup Type\Yuhu EV\Air Conditioning Controller (ACM)	✓	✓	✓	✓		
Pickup Type\Yuhu EV\Battery Pack (BMS)	✓	✓	✓	✓	A0592, A0593, A0594, A0595	
Pickup Type\Yuhu EV\Voltage converter (DCDC)	✓	✓	✓	✓		

Pickup Type\Yuhu EV\Electronic Power Steering (EPS)	✓	✓	✓	✓		S0175, S0232, S0233, S0092
Pickup Type\Yuhu EV\Motor Controller (MCU)	✓	✓	✓	✓		
Pickup Type\Yuhu EV\Charge Controller (OBC)	✓	✓	✓	✓		S0092
Pickup Type\Yuhu EV\Shifter Module (SCU)	✓	✓	✓			S0092, S0141, S0154
Pickup Type\Yuhu EV\Remote control equipment (TBOX)	✓	✓	✓	✓		S0234, S0096, S0092
Pickup Type\Yuhu EV\Tire Pressure Controller (TPMS)	✓	✓	✓	✓		S0158, S0159, S0160, S0161, S0162, S0163, S0164, S0165, S0166, S0092, S0154
Pickup Type\Yuhu EV\Continental-Airbag (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Pickup Type\Yuhu 5\Quick Test	✓	✓	✓			
Pickup Type\Yuhu 5\Diesel - Continent - EMS (JX4D20A5L)	✓	✓	✓	✓	A0132, A0133, A0173, A0174, A0175, A0176, A0177, A0178, A0179, A0180, A0181, A0182, A0183, A0184, A0185, A0186, A0187	S0100, S0101, S0043, S0102, S0103, S0104, S0105, S0106
Pickup Type\Yuhu 5\Engine System China V (EMS)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0596, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0218, S0027, S0235, S0236, S0219, S0220, S0221, S0222, S0223, S0224
Pickup Type\Yuhu 5\Engine System China VI (EMS)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Yuhu 5\ZF-6-speed gearbox - TCU	✓	✓	✓	✓		S0151, S0152, S0153
Pickup Type\Yuhu 5\Bosch - Body Stability Control (ESP)	✓	✓	✓	✓	A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0199, A0200, A0201, A0202	S0107, S0108, S0109, S0110, S0111
Pickup Type\Yuhu 5\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	A0813, A0814, A0815, A0620, A0816, A0618, A0817, A0818, A0819, A0820, A0821, A0622	S0315
Pickup Type\Yuhu 5\SRS (Airbag Control Module)	✓	✓	✓	✓	A0679	S0312
Pickup Type\Yuhu 5\SRS_EDR (airbag)	✓	✓	✓	✓	A0812, A0163	S0313, S0314
Pickup Type\Yuhu 5\Tongzhi - Body Controller - BCM	✓	✓	✓	✓	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0220, A0221, A0222	S0112, S0113, S0114, S0115, S0092
Pickup Type\Yuhu 5\BCM9 (Body Controller)	✓	✓	✓	✓	A0822, A0823, A0300, A0824, A0225, A0207, A0825, A0826, A0220, A0694, A0227, A0264, A0827, A0248, A0226, A0263, A0828, A0829	S0316, S0317
Pickup Type\Yuhu 5\Visteon-Instrument-ICM	✓	✓	✓	✓	A0223, A0224, A0225, A0226, A0227, A0228, A0229, A0230, A0231, A0232, A0233, A0234, A0235, A0236, A0237, A0238, A0239, A0240, A0241, A0242, A0243,	S0116, S0117, S0118, S0027, S0119, S0120, S0121, S0122
Pickup Type\Yuhu 5\Visteon-Air Conditioning-AC	✓	✓	✓	✓		S0154
Pickup Type\Yuhu 5\Remote control module (TBOX)	✓	✓	✓			
Pickup Type\Yuhu 5\TPMS (Tire Pressure Monitoring System)	✓	✓	✓	✓		S0318, S0319, S0320, S0321
Pickup Type\Yuhu 5\IMMO (Anti-Theft System)	✓	✓	✓	✓		S0322, S0323
Pickup Type\Yuhu 7\Quick Test	✓	✓	✓			
Pickup Type\Yuhu 7\Engine system (ECM)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0596, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0218, S0027, S0235, S0236, S0219, S0220, S0221, S0222, S0223, S0224
Pickup Type\Yuhu 7\EMS6 (Engine Control Unit China VI)	✓	✓	✓	✓	A0561, A0562, A0563, A0037, A0564, A0565, A0566, A0567, A0172, A0568, A0569	S0027, S0225, S0226, S0227, S0228
Pickup Type\Yuhu 7\Automatic Transmission Control Unit (TCU)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Body Control Module (BCM9)	✓	✓	✓	✓	A0822, A0823, A0300, A0824, A0225, A0207, A0825, A0826, A0220, A0694, A0227, A0264, A0827, A0248, A0226, A0263, A0828, A0829	S0316, S0317
Pickup Type\Yuhu 7\Anti-lock brake control module (ABS)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Instrument (IC)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Airbag Control Module (SRS)	✓	✓	✓	✓	A0679	S0312
Pickup Type\Yuhu 7\SRS_EDR (airbag)	✓	✓	✓	✓	A0812, A0163	S0313, S0314
Pickup Type\Yuhu 7\Remote control module (TBOX)	✓	✓	✓			
Pickup Type\Yuhu 7\Air Conditioning Controller (AC)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Air conditioning control module (AC9)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Electronic shifter (SCU)	✓	✓	✓	✓		

Pickup Type\Yuhu 7\Electronic Stability System (ESP)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\All-wheel drive module (MT AWD)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Keyless start control module-8 speed (SAT PEPS)	✓	✓	✓	✓		
Pickup Type\Yuhu 7\Anti-theft module (IMMO)	✓	✓	✓	✓		S0322, S0323
Pickup Type\Yuhu 7\APM (ripple anti-pinch module)	✓	✓	✓	✓	A0830, A0831, A0832, A0833	S0324
Pickup Type\Yuhu 7\Tire Pressure Monitoring Module (TPMS)	✓	✓	✓	✓		S0318, S0319, S0320, S0321
Pickup Type\Yuhu 7\Entertainment System (MP5)	✓	✓	✓	✓		S0325, S0326, S0327
Pickup Type\Yuhu 7\PEPS_DER (Keyless Start Keyless Control System - Delphi)	✓	✓	✓	✓	A0668, A0669, A0670, A0671, A0672	S0263, S0264, S0265, S0266, S0267
Pickup Type\Yuhu 9\Quick Test	✓	✓	✓			
Pickup Type\Yuhu 9\Engine System China V (EMS)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0596, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0218, S0027, S0235, S0236, S0219, S0220, S0221, S0222, S0223, S0224
Pickup Type\Yuhu 9\Engine System China VI (EMS)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Pickup Type\Yuhu 9\EMS6 (Engine Control Unit China VI)	✓	✓	✓	✓	A0561, A0562, A0563, A0037, A0564, A0565, A0566, A0567, A0172, A0568, A0569	S0027, S0225, S0226, S0227, S0228
Pickup Type\Yuhu 9\Automatic Transmission Control Unit (TCU)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Body Control Module (BCM)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Instrument (IC)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Airbag Control Module (SRS)	✓	✓	✓	✓	A0679	S0312
Pickup Type\Yuhu 9\SRS_EDR (airbag)	✓	✓	✓	✓	A0812, A0163	S0313, S0314
Pickup Type\Yuhu 9\Remote control module (TBOX)	✓	✓	✓			
Pickup Type\Yuhu 9\Air Conditioning Controller (AC)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Air conditioning control module (AC9)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Electronic shifter (SCU)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Electronic Stability System (ESP)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Electric Power Steering System (EPS)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\All-wheel drive module (AWD)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\All-wheel drive module (MT AWD)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Keyless Start Control Module (PEPS)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Keyless start control module-8 speed (SAT PEPS)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\PEPS_DER (Keyless Start Keyless Control System - Delphi)	✓	✓	✓	✓	A0668, A0669, A0670, A0671, A0672	S0263, S0264, S0265, S0266, S0267
Pickup Type\Yuhu 9\Ripple Anti-Pinch Module (APM)	✓	✓	✓	✓	A0830, A0831, A0832, A0833	S0324
Pickup Type\Yuhu 9\Mode switch (ATCM)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Combination Switch Module (SWM)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Entertainment System (MP5)	✓	✓	✓	✓		S0325, S0326, S0327
Pickup Type\Yuhu 9\Wireless receiving module (RTM)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Seat Memory Control Module (SCM)	✓	✓	✓			
Pickup Type\Yuhu 9\Front View Monocular Camera (IPM)	✓	✓	✓	✓		
Pickup Type\Yuhu 9\Radars Control System (MRR)	✓	✓	✓	✓		

Pickup Type\T500EV_ICA\Quick Test	✓	✓	✓			
Pickup Type\T500EV_ICA\TPMS (Tire Pressure Monitoring System)	✓	✓	✓	✓		S0318, S0319, S0320, S0321
Pickup Type\T500EV_ICA\APM (ripple anti-pinch module)	✓	✓	✓	✓	A0830, A0831, A0832, A0833	S0324
Pickup Type\T500EV_ICA\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	A0813, A0814, A0834, A0835, A0836, A0837, A0817, A0838, A0839, A0840, A0841, A0622	
Pickup Type\T500EV_ICA\AC (Air Conditioning Controller)	✓	✓	✓	✓		
Pickup Type\T500EV_ICA\BCM (Body Controller)		✓	✓	✓	A0649, A0648, A0300, A0842, A0213, A0215, A0295, A0778, A0779, A0843, A0216, A0653, A0217, A0698, A0844, A0218, A0214, A0310, A0652, A0222, A0709,	S0114
Pickup Type\T500EV_ICA\NBS (electrically controlled booster with brake master cylinder assembly)	✓	✓	✓		A0846, A0847	S0328, S0329
Pickup Type\T500EV_ICA\TBOX (remote control device)	✓	✓	✓	✓		S0330
Pickup Type\T500EV_ICA\VCU (vehicle controller)	✓	✓	✓	✓	A0848, A0849, A0850, A0587, A0851, A0465, A0852, A0853, A0854	S0331, S0332, S0333, S0311
Pickup Type\T500EV_ICA\MCU (Motor Controller)	✓	✓	✓	✓		
Pickup Type\T500EV_ICA\BMS (Battery Management System)	✓	✓	✓	✓		S0027
Pickup Type\T500EV_ICA\DCDC_OBC (DCDC Voltage Regulator Module_Charge Controller)	✓	✓	✓	✓		
Pickup Type\T500EV_ICA\SCU (Shifter Module)	✓	✓	✓			
Pickup Type\T500EV_ICA\EPS (Electric Power Steering)	✓	✓	✓	✓		S0334, S0175
Pickup Type\T500EV_ICA\ICM (Instrument)	✓	✓	✓			
Pickup Type\T500EV_ICA\PACM (Slow Voice)	✓	✓	✓			
Pickup Type\T500EV_ICA\IMMO (IMMO Receiver)	✓	✓	✓	✓	A0855	S0294, S0322
Light-Duty Bus Model\Ford Transit\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\EFI Euro 2 gasoline engine		✓	✓	✓	A0035, A0036, A0037, A0038, A0039, A0040	
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\EFI EUR 3 gasoline engine	✓	✓	✓	✓	A0041, A0042, A0037, A0043, A0039, A0040	S0025, S0027
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\EFI EUR 3 gasoline engine with EOBD	✓	✓	✓	✓	A0041, A0044, A0045, A0046, A0047, A0038, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057	S0027, S0028, S0029, S0030
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\EFI EUR 3 diesel engine 3.1	✓	✓	✓	✓	Please refer to DELPHI Function List	
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\EFI EUR 3 Diesel Engine 3.2 upgrade version	✓	✓	✓	✓	Please refer to DELPHI Function List	
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Delphi System\Delphi Gasoline Engine (Euro 5)	✓	✓	✓	✓	A0102, A0037, A0103, A0104, A0038, A0105, A0106, A0107, A0108	S0027, S0030
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Ford Transit 2.2L		✓	✓	✓	A0095, A0096, A0097, A0098, A0099, A0036, A0100, A0101	
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Ford Transit 2.4L	✓	✓	✓	✓		S0034, S0035, S0036, S0037, S0038, S0039, S0040, S0041, S0042
Light-Duty Bus Model\Ford Transit\Engine system (ECM)\Bosch Diesel Engine Europe IV	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0001, S0002, S0003, S0004, S0005, S0006, S0007
Light-Duty Bus Model\Ford Transit\Anti-lock Brake System (ABS)\ABS1.0		✓	✓			
Light-Duty Bus Model\Ford Transit\Anti-lock Brake System (ABS)\Ford Transit 2.4L	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Bus Model\Ford Transit\Body Control System	✓	✓	✓	✓		
Light-Duty Bus Model\Ford Transit\Dashboard System (ICM)	✓	✓	✓	✓		
Light-Duty Bus Model\Ford Transit\Reverse assist system (PDC)		✓	✓	✓		
Light-Duty Bus Model\Ford Transit\Parking System System (EPB)		✓	✓	✓		
Light-Duty Bus Model\Ford Transit\EGR system		✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Engine Control System	✓	✓	✓	✓	A0597, A0598, A0599, A0600, A0601, A0602, A0603, A0604, A0605, A0606, A0607, A0608, A0609, A0610	S0218, S0237, S0238, S0239

Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\BODY CONTROL SYSTEM	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Anti-lock brake control system		✓	✓	✓		S0240, S0241, S0242, S0243, S0244, S0245, S0246
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Car parking aid module		✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Instrument control system	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Audio Control Module (ACM)		✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit (2.2L)\Speech Recognition Module (SRM)		✓	✓			
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Engine Control System	✓	✓	✓	✓	A0597, A0598, A0599, A0600, A0601, A0602, A0603, A0604, A0605, A0606, A0607, A0608, A0609, A0610	S0218, S0237
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Anti-lock Brake System	✓	✓	✓	✓	A0611	
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Audio control module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Body control module	✓	✓	✓	✓	A0612	
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Front control display interface module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Heating ventilation and air conditioning	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Dashboard control module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Parking aid module	✓	✓	✓	✓		S0247
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Constraint control module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Remote heating and air conditioning	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Steering angle sensor module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Automotive Dynamics Module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\All-wheel drive module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Variable speed control module	✓	✓	✓	✓		S0247
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Headlight control module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Transit (2.0L)\Accessory protocol module	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\New Era Transit China VI				✓		S0223, S0268, S0269, S0027, S0006, S0270, S0271, S0272, S0273, S0274, S0275, S0276, S0277, S0278, S0279, S0280
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\PEPS_DER (Keyless Start Keyless Control System - Delphi)	✓	✓	✓	✓	A0668, A0669, A0670, A0671, A0672	S0263, S0264, S0265, S0266, S0267
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\EMS (Engine Control Unit)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0027, S0281, S0279, S0278, S0268, S0269, S0235, S0282
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\TCU (Transmission Control Unit)	✓	✓	✓	✓	A0673, A0674, A0675, A0676, A0677	S0027, S0283
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\SCU (Shifter Module)	✓	✓	✓	✓	A0678	
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\SRS (Airbag Control Module)	✓	✓	✓		A0679, A0163	S0284, S0285
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\ESP (Electronic Stability Program)	✓	✓	✓	✓		S0286, S0287, S0288
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\EPS (Electric Power Steering)	✓	✓	✓	✓		S0286
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\PAM (Parking Assist System)	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\IPM (forward looking monocular camera)	✓	✓	✓	✓		S0027, S0286, S0289, S0290
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\BSD_L (Blind Spot Monitoring Module - Left)	✓	✓	✓	✓	A0680, A0681, A0682, A0683, A0684	S0027, S0291
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\BSD_R (Blind Spot Monitoring Module - Right)	✓	✓	✓	✓	A0680, A0681, A0682, A0683, A0684	S0027, S0291

Light-Duty Bus Model\Classic Transit\New Era Transit Pro\BCM (Body Controller)	✓	✓	✓		A0648, A0685, A0686, A0687, A0688, A0689, A0690, A0691, A0692, A0693, A0694, A0695, A0696, A0697, A0698, A0699, A0700, A0293, A0701, A0702, A0703,	S0286, S0292, S0293, S0294
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\ICM (Instrument)	✓	✓	✓		A0716, A0717, A0718, A0719, A0720, A0721, A0722, A0723, A0724, A0725, A0726, A0727, A0728, A0729, A0245, A0730, A0731, A0227, A0732, A0733, A0434,	S0294, S0295
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\MP5 (Entertainment System)	✓	✓	✓		A0745	
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\RTM (Radio Receiver Module)	✓	✓	✓	✓		S0296, S0297
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\Remote control equipment (TBOX)	✓	✓	✓	✓		S0298, S0299
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\AC (Air Conditioning Controller)	✓	✓	✓	✓	A0746, A0747, A0748, A0749, A0750	
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\SAS (Rotation Angle Sensor)	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\New Era Transit Pro\RVC (rear reversing radar)	✓	✓	✓			S0300
Light-Duty Bus Model\Classic Transit\V348_BEV\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\V348_BEV\NBS (electrically controlled booster with brake master cylinder assembly)	✓	✓	✓		A0846, A0847	S0328, S0329
Light-Duty Bus Model\Classic Transit\V348_BEV\BMS (Battery Management System)	✓	✓	✓	✓		S0027
Light-Duty Bus Model\Classic Transit\V348_BEV\SCU (Shifter Module)	✓	✓	✓	✓	A0678	
Light-Duty Bus Model\Classic Transit\V348_BEV\SRS (Airbag Control Module)	✓	✓	✓		A0679, A0163	S0284, S0285
Light-Duty Bus Model\Classic Transit\V348_BEV\RAM (Parking Assist System)	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\V348_BEV\MP5 (Entertainment System)	✓	✓	✓		A0745	
Light-Duty Bus Model\Classic Transit\V348_BEV\PEPS (Push-to-Start/Entry Controller)	✓	✓	✓	✓		S0335, S0336, S0266, S0267, S0265
Light-Duty Bus Model\Classic Transit\V348_BEV\ICM (Instrument)	✓	✓	✓	✓	A0743, A0856, A0719, A0857, A0721, A0722, A0724, A0726, A0858, A0245, A0758, A0731, A0227, A0859, A0860, A0861, A0735, A0248, A0862, A0863, A0864,	S0295
Light-Duty Bus Model\Classic Transit\V348_BEV\BCM (Body Controller)	✓	✓	✓	✓	A0648, A0685, A0686, A0687, A0688, A0689, A0690, A0691, A0692, A0693, A0694, A0695, A0696, A0697, A0698, A0699, A0700, A0293, A0873, A0702, A0703,	S0286, S0292, S0293, S0294
Light-Duty Bus Model\Classic Transit\V348_BEV\RTM (Radio Receiver Module)	✓	✓	✓	✓		S0335, S0337
Light-Duty Bus Model\Classic Transit\V348_BEV\PACM (Slow Voice)	✓	✓	✓			
Light-Duty Bus Model\Classic Transit\V348_BEV\VCU (vehicle controller)	✓	✓	✓	✓	A0874, A0875, A0876, A0877, A0878, A0879, A0880, A0881	S0338, S0339, S0340, S0341, S0342
Light-Duty Bus Model\Classic Transit\V348_BEV\MCU (Motor Controller)	✓	✓	✓	✓		S0343, S0344, S0345
Light-Duty Bus Model\Classic Transit\V348_BEV\DCDC_OBC (DCDC Voltage Regulator Module_Charge Controller)	✓	✓	✓	✓		
Light-Duty Bus Model\Classic Transit\V348_BEV\FACM (Front Air Conditioning Module)	✓	✓	✓	✓	A0882, A0883, A0884, A0885, A0886, A0887	
Light-Duty Bus Model\Classic Transit\V348_BEV\RACM (Rear Air Conditioning Controller)	✓	✓	✓	✓	A0748, A0888, A0889, A0890	
Light-Duty Bus Model\Classic Transit\V348_BEV\TBOX (remote control device)	✓	✓	✓	✓		S0346
Light-Duty Bus Model\Classic Transit\V348_BEV\EPS (Electric Power Steering)	✓	✓	✓	✓		S0335
Light-Duty Bus Model\Classic Transit\V348_BEV\ESP (Electronic Stability Program)	✓	✓	✓	✓	A0539, A0543, A0540, A0544, A0547, A0548, A0077, A0541, A0545, A0542, A0546, A0549, A0550	S0335, S0287, S0288, S0347, S0348
Light-Duty Bus Model\Teshun Series\Teshun\Engine system (ECM)\Bosch China V (EDC17C81)	✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0003, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022, A0023	S0018, S0006, S0002, S0003, S0004, S0007, S0019, S0020, S0001, S0015, S0016, S0021, S0022, S0008, S0009, S0010, S0011, S0012
Light-Duty Bus Model\Teshun Series\Teshun\Engine system (ECM)\Delphi Gasoline Engine (Euro 5)	✓	✓	✓	✓	A0102, A0037, A0103, A0104, A0038, A0105, A0106, A0107, A0108	S0027, S0030
Light-Duty Bus Model\Teshun Series\Teshun\Anti-lock Brake System (ABS)	✓	✓	✓	✓	A0065, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161	S0094
Light-Duty Bus Model\Teshun Series\Teshun\Supplemental Restraint System (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Light-Duty Bus Model\Teshun Series\Teshun\Electronic clutch (ICS)	✓	✓	✓	✓		S0199, S0210, S0200, S0211, S0212, S0135, S0213, S0214, S0092
Light-Duty Bus Model\Teshun Series\Teshun\Asia-Pacific ABS	✓	✓	✓	✓	Please refer to ABS Function List	
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Battery Management System (BMS)	✓	✓	✓	✓		S0248, S0096, S0092, S0141, S0154

Light-Duty Bus Model\Teshun Series\Teshun L500EV\Direct-to-direct converter (DCDC)	✓	✓	✓	✓		S0096, S0092
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Motor Controller (MCU)	✓	✓	✓	✓		S0096, S0249, S0250, S0092, S0141
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Charger Controller (OBC)	✓	✓	✓	✓		S0096, S0092
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Airbag Controller (SRS)	✓	✓	✓	✓	A0290, A0163	S0251, S0252, S0096, S0253, S0092
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Vehicle Management System (VCU)	✓	✓	✓	✓	A0462, A0463, A0464, A0465, A0587, A0613, A0589, A0590	S0096, S0230, S0092, S0231, S0254
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Anti-lock Brake System (ABS)	✓	✓	✓	✓	A0614, A0615, A0616, A0617, A0618, A0619, A0620, A0621, A0238, A0228, A0622, A0623	S0096, S0092
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Air Conditioning Controller (ACM)	✓	✓	✓			
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Body Controller (BCM)	✓	✓	✓	✓	A0470, A0207, A0624, A0471, A0300, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0310, A0311, A0472, A0220	S0112, S0092, S0096, S0229, S0255
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Telematics Box (TBOX)	✓	✓	✓	✓		S0256, S0092, S0190
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Electro-hydraulic power steering (EHPS)	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Shift Control Unit (SCU)	✓	✓	✓		A0291, A0625, A0626	S0096
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Combination Meter (ICM)	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun L500EV\Rotation sensor (SAS)		✓	✓			S0257, S0092
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Quick Test	✓	✓	✓			
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Engine Control System\Teshun China VI (N526) engine	✓	✓	✓	✓	A0001, A0109, A0110, A0113, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0011, A0118, A0126, A0555, A0556, A0120, A0647, A0558, A0559,	S0218, S0027, S0223, S0224
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Engine Control System\JMC P1741 MD1CS089 China VI	✓	✓	✓	✓	Please refer to BOSCH Function List	
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Body control module	✓	✓	✓	✓	A0648, A0649, A0207, A0650, A0651, A0471, A0300, A0213, A0214, A0215, A0216, A0217, A0218, A0652, A0653, A0310, A0311, A0654, A0655, A0220, A0222	
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Anti-lock brake control module	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Instrument Control Module	✓	✓	✓	✓	A0246, A0656, A0535, A0527, A0454, A0657, A0529, A0658, A0530, A0531, A0659, A0660, A0520, A0521, A0522, A0661, A0524, A0525, A0526, A0512, A0513,	
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Airbag control module	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Airbag Control Module (EDR)	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Electronic clutch	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Remote control system	✓	✓	✓	✓		
Light-Duty Bus Model\Teshun Series\Teshun China VI (N526)\Tire pressure detection system	✓	✓	✓	✓		
Veyron Series\JH476 JMC Weilong\Quick Test	✓	✓	✓			
Veyron Series\JH476 JMC Weilong\ECM	✓	✓	✓	✓		S0183, S0184, S0185, S0186
Veyron Series\JH476 JMC Weilong\Body control module		✓	✓	✓	A0371, A0372, A0373, A0374, A0375, A0376, A0377, A0225, A0378, A0379, A0380, A0381, A0227, A0382, A0383, A0264, A0384, A0385, A0248, A0226, A0386,	
Veyron Series\JH476 JMC Weilong\Instrument cluster		✓	✓	✓		
Veyron Series\JH476 JMC Weilong\ABS module		✓	✓	✓	A0390, A0391, A0392, A0393, A0394	
Veyron Series\JH476 JMC Weilong\Recorder		✓	✓	✓		
Veyron Series\JH476 JMC Weilong\Vehicle T_Box		✓	✓	✓		
Veyron Series\JH476 JMC Weilong\Tire pressure module		✓	✓	✓		
Veyron Series\JH476 JMC Weilong\MP5	✓	✓	✓	✓	A0441	
Veyron Series\JH625 Veyron HV5\Quick Test	✓	✓	✓			
Veyron Series\JH625 Veyron HV5\ECM	✓	✓	✓	✓		S0183, S0184, S0185, S0186
Veyron Series\JH625 Veyron HV5\Body control module		✓	✓	✓	A0371, A0372, A0373, A0374, A0375, A0376, A0377, A0225, A0378, A0379, A0380, A0381, A0227, A0382, A0264, A0383, A0384, A0385, A0248, A0226, A0386,	

Veyron Series\JH625 Veyron HV5\Instrument cluster	✓	✓	✓	✓	A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403, A0404, A0405, A0406, A0407, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415,	
Veyron Series\JH625 Veyron HV5\ABS module		✓	✓	✓	A0390, A0391, A0392, A0393, A0394	
Veyron Series\JH625 Veyron HV5\Recorder		✓	✓	✓		
Veyron Series\JH625 Veyron HV5\MP5	✓	✓	✓	✓	A0441	
Veyron Series\JH625 Veyron HV5\Vehicle T_Box		✓	✓	✓		
Veyron Series\JH625 Veyron HV5\Tire pressure module	✓	✓	✓	✓		
Veyron Series\JH625 Veyron HV5\Anti-fatigue controller	✓	✓	✓			
Veyron Series\JH625 Veyron HV5\Automatic air conditioning	✓	✓	✓			
Veyron Series\JH625 Veyron HV5\Camera	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S350)\Quick Test	✓	✓	✓			
Yusheng Series\New Yusheng (S350)\Engine system (ECM)\Gasoline – UMC-EMS	✓	✓	✓	✓	A0164, A0045, A0046, A0047, A0165, A0166, A0167, A0168, A0169, A0170, A0171, A0172	S0092, S0096, S0098, S0099
Yusheng Series\New Yusheng (S350)\Engine system (ECM)\Diesel-Continent-EMS	✓	✓	✓	✓	A0132, A0133, A0173, A0174, A0175, A0176, A0177, A0178, A0179, A0180, A0181, A0182, A0183, A0184, A0185, A0186, A0187	S0100, S0101, S0043, S0102, S0103, S0104, S0105, S0106
Yusheng Series\New Yusheng (S350)\Automatic Transmission System (AT)\ZF-6-speed gearbox – TCU	✓	✓	✓	✓		S0151, S0152, S0153
Yusheng Series\New Yusheng (S350)\Electronic Stability System (ESP)\Bosch – Body Stabilization System – ESP	✓	✓	✓	✓	A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0199, A0200, A0201, A0202	S0107, S0108, S0109, S0110, S0111
Yusheng Series\New Yusheng (S350)\Supplemental Restraint System (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Yusheng Series\New Yusheng (S350)\Body Control System\Tongzhi – Body Controller – BCM	✓	✓	✓	✓	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214, A0215, A0216, A0217, A0218, A0219, A0220, A0221, A0222	S0112, S0113, S0114, S0115, S0092
Yusheng Series\New Yusheng (S350)\Dashboard System (ICM)\Visteon-Instrument-ICM	✓	✓	✓	✓	A0223, A0224, A0225, A0226, A0227, A0228, A0229, A0230, A0231, A0232, A0233, A0234, A0235, A0236, A0237, A0238, A0239, A0240, A0241, A0242, A0243,	S0116, S0117, S0118, S0027, S0119, S0120, S0121, S0122
Yusheng Series\New Yusheng (S350)\PEPS\Gasoline – Lear-PEPS	✓	✓	✓	✓		S0045, S0155, S0156, S0157
Yusheng Series\New Yusheng (S350)\PEPS\Diesel-Lear-PEPS	✓	✓	✓	✓		S0045, S0155, S0156, S0157
Yusheng Series\New Yusheng (S350)\Automatic air conditioning system (AC)\Visteon-Air Conditioning-AC	✓	✓	✓	✓		S0154
Yusheng Series\New Yusheng (S350)\Borg Warner-four-wheel drive system – TCCU	✓			✓	A0256, A0257, A0258	S0123, S0124, S0125
Yusheng Series\New Yusheng (S350)\Vision Imaging System (AVM)\Huichuang-360° viewing image –AVM	✓	✓	✓	✓		S0092, S0167, S0168, S0169, S0170
Yusheng Series\New Yusheng (S350)\Vision Imaging System (AVM)\Huichuang-360° viewing image-AVM (endsa)						S0167, S0169, S0170
Yusheng Series\New Yusheng (S350)\East Joy Long – anti-pinch system – APM	✓	✓	✓	✓	A0367, A0368, A0369, A0370	S0179, S0180, S0181, S0182
Yusheng Series\New Yusheng – automatic gear (S350)\Quick Test	✓	✓	✓			
Yusheng Series\New Yusheng – automatic gear (S350)\Engine system (ECM)\Bosch-Diesel EDC17 (China IV)	✓	✓	✓	✓	A0006, A0259, A0031	S0024, S0014, S0027, S0126, S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0016, S0017
Yusheng Series\New Yusheng – automatic gear (S350)\Transmission system (AT)\ZF gearbox	✓	✓	✓	✓		S0151, S0152, S0153
Yusheng Series\New Yusheng – automatic gear (S350)\Actuator System (TCCM)\BorgWarner transfer case	✓			✓	A0256, A0257, A0258	S0123, S0124, S0125
Yusheng Series\New Yusheng – automatic gear (S350)\Electronic Stability System (ESP)\Bosch – Body Stabilization System – ESP	✓	✓	✓	✓	A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0199, A0200, A0201, A0202	S0107, S0108, S0109, S0110, S0111
Yusheng Series\New Yusheng – automatic gear (S350)\Gateway System (GW)	✓	✓	✓	✓		S0171, S0172, S0173, S0174
Yusheng Series\New Yusheng – automatic gear (S350)\PEPS	✓	✓	✓			S0045, S0155, S0157
Yusheng Series\New Yusheng – automatic gear (S350)\Body Control System	✓	✓	✓	✓	A0260, A0261, A0224, A0223, A0226, A0262, A0225, A0248, A0263, A0264, A0227, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0272, A0273	
Yusheng Series\New Yusheng – automatic gear (S350)\Dashboard System (ICM)	✓	✓	✓	✓	A0274, A0255	S0116, S0117, S0118, S0027, S0119, S0120, S0121, S0122
Yusheng Series\New Yusheng – automatic gear (S350)\Supplemental Restraint System (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Yusheng Series\New Yusheng – manual gear (S350)\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0044, S0004, S0003, S0005, S0006, S0007, S0024, S0014, S0027, S0001
Yusheng Series\New Yusheng – manual gear (S350)\Engine system (ECM)\Delphi Gasoline Engine	✓	✓	✓	✓	A0102, A0037, A0130, A0131, A0038, A0105, A0106, A0107, A0108	S0027, S0030

Yusheng Series\New Yusheng - manual gear (S350)\Anti-lock Brake System (ABS)	✓	✓	✓	✓	Please refer to ABS Function List	
Yusheng Series\New Yusheng - manual gear (S350)\Supplemental Restraint System (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Yusheng Series\New Yusheng - manual gear (S350)\Anti-theft System (IMMO)	✓	✓	✓	✓		S0145, S0146, S0147, S0148, S0149, S0150
Yusheng Series\Yusheng(manual gear)\Engine system (ECM)\Delphi Europe 4 Gasoline Engine	✓	✓	✓	✓	A0041, A0044, A0045, A0046, A0047, A0038, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056, A0057	S0027, S0028, S0029, S0030
Yusheng Series\Yusheng(manual gear)\Engine system (ECM)\Bosch Diesel Engine System	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	S0044, S0004, S0003, S0005, S0006, S0007, S0024, S0014, S0027, S0001
Yusheng Series\Yusheng(manual gear)\Engine system (ECM)\Bosch Diesel System (C63)	✓	✓	✓	✓	A0001, A0109, A0110, A0111, A0112, A0275, A0007, A0009, A0114, A0003, A0115, A0116, A0117, A0011, A0118, A0119, A0120, A0121, A0122, A0123, A0124,	S0013, S0001, S0051, S0020
Yusheng Series\Yusheng(manual gear)\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Yusheng Series\Yusheng(manual gear)\Anti-lock Brake System (ABS)\ABS9	✓	✓	✓	✓	Please refer to ABS Function List	
Yusheng Series\Yusheng(manual gear)\Supplemental Restraint System (SRS)	✓	✓	✓	✓	A0162, A0163	S0025, S0095, S0096, S0097
Yusheng Series\Yusheng (S330)\Quick Test	✓	✓	✓			
Yusheng Series\Yusheng (S330)\Engine system (ECM)	✓	✓	✓	✓	A0132, A0133, A0134, A0276, A0037, A0136, A0137, A0138, A0139, A0142, A0143, A0144, A0146	S0055, S0056, S0057, S0063, S0127, S0065, S0128, S0129, S0130, S0131, S0070, S0071, S0073, S0076, S0077, S0078, S0132, S0082, S0083, S0084, S0133,
Yusheng Series\Yusheng (S330)\Automatic Transmission System (AT)	✓	✓	✓	✓		S0092
Yusheng Series\Yusheng (S330)\Electronic Stability System (ESP)	✓	✓	✓	✓	A0200, A0277, A0278, A0279, A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0228, A0245, A0238, A0202, A0289	S0134, S0135, S0136, S0137, S0138, S0139, S0140, S0092
Yusheng Series\Yusheng (S330)\Electric Power Steering System (EPS)	✓	✓	✓	✓		S0175, S0092
Yusheng Series\Yusheng (S330)\Supplemental Restraint System (SRS)	✓	✓	✓		A0290, A0291	S0100
Yusheng Series\Yusheng (S330)\Body Control System	✓	✓	✓	✓	A0292, A0203, A0204, A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0210, A0300, A0212, A0301, A0302, A0303, A0304, A0213, A0214, A0215, A0216,	S0112, S0092
Yusheng Series\Yusheng (S330)\Dashboard System (ICM)	✓	✓	✓		A0223, A0224, A0225, A0226, A0227, A0312, A0229, A0230, A0313, A0314, A0233, A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322, A0323, A0324,	S0092
Yusheng Series\Yusheng (S330)\PEPS	✓	✓	✓			
Yusheng Series\Yusheng (S330)\Automatic air conditioning system (AC)	✓	✓	✓	✓		S0154
Yusheng Series\Yusheng (S330)\Vision Imaging System (AVM)\Huichuang-360° viewing image -AVM	✓	✓	✓	✓		S0092, S0167, S0168, S0169, S0170
Yusheng Series\Yusheng (S330)\Vision Imaging System (AVM)\Huichuang-360° viewing image-AVM (endsa)						S0167, S0169, S0170
Yusheng Series\Yusheng (S330)\Huichuang-engine anti-theft locking system-IMMO	✓	✓	✓	✓		S0176, S0177, S0178, S0100
Yusheng Series\Yusheng (S330)\Baolong-Tire Pressure Monitoring System-TPMS	✓	✓	✓	✓		S0158, S0159, S0160, S0161, S0162, S0163, S0164, S0165, S0166, S0092, S0154
Yusheng Series\Yusheng (S330)\Huayang-Multimedia (high) - MP5	✓	✓	✓	✓	A0337, A0338, A0339, A0340, A0341, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350, A0351, A0352, A0353, A0354	S0092, S0141
Yusheng Series\Yusheng (S330)\video camera	✓	✓	✓	✓	A0811	S0092
Yusheng Series\New Yusheng (S356)\Quick Test	✓	✓	✓			
Yusheng Series\New Yusheng (S356)\Engine System China V (EMS)	✓	✓	✓	✓	A0001, A0109, A0110, A0551, A0007, A0009, A0114, A0552, A0003, A0115, A0116, A0553, A0596, A0118, A0554, A0555, A0556, A0120, A0557, A0558, A0559,	S0218, S0027, S0235, S0236, S0219, S0220, S0221, S0222, S0223, S0224
Yusheng Series\New Yusheng (S356)\Engine System China VI (EMS)	✓	✓	✓	✓	Please refer to BOSCH Function List	
Yusheng Series\New Yusheng (S356)\Body Control Module (BCM)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Automatic Transmission Control Unit (TCU)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Air Conditioning Controller (AC)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Remote control module (TBOX)	✓	✓	✓			
Yusheng Series\New Yusheng (S356)\Electronic Stability System (ESP)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Instrument (IC)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Airbag Control Module (SRS)	✓	✓	✓	✓	A0679	S0312
Yusheng Series\New Yusheng (S356)\Airbag (SRS_EDR)	✓	✓	✓	✓	A0812, A0163	S0313, S0314

Yusheng Series\New Yusheng (S356)\Ripple Anti-Pinch Module (APM)	✓	✓	✓	✓	A0830, A0831, A0832, A0833	S0324
Yusheng Series\New Yusheng (S356)\Mode switch (ATCM)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\All-wheel drive module (AWD)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Entertainment System (MP5)	✓	✓	✓	✓		S0325, S0326, S0327
Yusheng Series\New Yusheng (S356)\Parking Assist System (PAM)	✓	✓	✓			
Yusheng Series\New Yusheng (S356)\Keyless Start Control Module (PEPS)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Wireless receiving module (RTM)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Seat Memory Control Module (SCM)	✓	✓	✓			
Yusheng Series\New Yusheng (S356)\Electronic shifter (SCU)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Electric Power Steering System (EPS)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Front View Monocular Camera (IPM)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Radar Control System (MRR)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Combination Switch Module (SWM)	✓	✓	✓	✓		
Yusheng Series\New Yusheng (S356)\Blind Spot Monitoring System (BSD)	✓	✓	✓	✓		
Landwind Series\X8 Series\Quick Test	✓	✓	✓			
Landwind Series\X8 Series\Engine\Bosch Common Rail System (VM2. 5T)	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0091, A0092, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0015, S0034
Landwind Series\X8 Series\Engine\Bosch EDC16C39 (VM2.0T)	✓	✓	✓	✓		
Landwind Series\X8 Series\Anti-lock braking system\Delphi ABS		✓	✓	✓	A0063, A0064, A0058, A0065, A0066, A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074, A0075, A0076	
Landwind Series\X8 Series\Anti-lock braking system\Mando ABS	✓	✓	✓	✓	A0077, A0078, A0079, A0080, A0081, A0082, A0083, A0084, A0085, A0086, A0087, A0088, A0089, A0090	
Landwind Series\X8 Series\Airbag\Jinheng Airbag System	✓	✓	✓	✓		
Landwind Series\X8 Series\Airbag\East Joy Long Airbag System	✓	✓	✓	✓		
Landwind Series\X8 Series\Anti-theft System\Shanghai Industrial Traffic Anti-theft	✓	✓	✓	✓		S0015, S0045, S0046, S0047, S0048, S0049, S0050
Landwind Series\X8 Series\Anti-theft System\Delphi Anti-Theft System	✓	✓	✓	✓	Please refer to IMMOBILIZER Function List	
Landwind Series\X6 Series\Quick Test	✓	✓	✓			
Landwind Series\X6 Series\Engine\Bosch Common Rail System (VM2. 5T)	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0091, A0092, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0015, S0034
Landwind Series\X6 Series\Engine\4JB1 Common Rail Engine	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0028, A0029, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0044, S0003, S0004, S0005, S0006, S0001, S0014, S0027
Landwind Series\X6 Series\Engine\JE493 Common Rail Engine	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0091, A0092, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0015, S0034
Landwind Series\X6 Series\Engine\Bosch EDC16C39	✓	✓	✓	✓		
Landwind Series\X6 Series\ABS\Delphi ABS		✓	✓	✓	A0063, A0064, A0058, A0065, A0066, A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074, A0075, A0076	
Landwind Series\X6 Series\ABS\Mando ABS	✓	✓	✓	✓	A0077, A0078, A0079, A0080, A0081, A0082, A0083, A0084, A0085, A0086, A0087, A0088, A0089, A0090	
Landwind Series\X6 Series\Anti-theft System\Shanghai Industrial Traffic Anti-theft	✓	✓	✓	✓		S0015, S0045, S0046, S0047, S0048, S0049, S0050
Landwind Series\X9 Series\Quick Test	✓	✓	✓			
Landwind Series\X9 Series\Engine\Bosch Common Rail System (VM2. 5T)	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0091, A0092, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0015, S0034
Landwind Series\X9 Series\Engine\JE493 Common Rail Engine	✓	✓	✓	✓	A0001, A0024, A0025, A0026, A0027, A0091, A0092, A0030, A0003, A0031, A0032, A0004, A0005, A0033, A0034	S0015, S0034
Landwind Series\X9 Series\ABS\Delphi ABS		✓	✓	✓	A0063, A0064, A0058, A0065, A0066, A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074, A0075, A0076	
Landwind Series\X9 Series\ABS\Mando ABS	✓	✓	✓	✓	A0077, A0078, A0079, A0080, A0081, A0082, A0083, A0084, A0085, A0086, A0087, A0088, A0089, A0090	

Landwind Series\X9 Series\Anti-theft System\Shanghai Industrial Traffic Anti-theft	✓	✓	✓	✓		S0015, S0045, S0046, S0047, S0048, S0049, S0050
Landwind Series\X5 series\Quick Test	✓	✓	✓			
Landwind Series\X5 series\Engine Management System\Delphi MT80	✓	✓	✓	✓	A0241, A0045, A0046, A0047, A0006, A0627	S0027, S0258, S0125, S0030
Landwind Series\X5 series\Engine Management System\E0BD emission diagnosis	✓	✓	✓	✓		
Landwind Series\X5 series\ABS (ESC)	✓	✓	✓	✓	A0628, A0629, A0630, A0631, A0632, A0633, A0634, A0074, A0200	S0093, S0259, S0260
Landwind Series\X5 series\JMC Landwind Instrument System	✓	✓	✓	✓	A0444, A0241, A0445, A0446, A0184, A0447, A0448, A0449, A0450, A0451, A0452, A0453, A0372, A0454, A0372, A0238, A0455, A0456, A0228, A0457, A0458,	S0187, S0188
Landwind Series\X5 series\Airbag	✓	✓	✓	✓	A0635, A0636, A0637	S0093, S0261, S0262
Landwind Series\X5 series\Anti-theft System	✓	✓	✓	✓	Please refer to IMMOBILIZER Function List	
Landwind Series\X5 series\Intelligent four-wheel drive control system	✓	✓	✓	✓		
Landwind Series\Landwind Fengshang\Quick Test	✓	✓	✓			
Landwind Series\Landwind Fengshang\Engine\JMC Landwind ME797 EFI system		✓	✓	✓	A0035, A0442, A0037, A0039, A0040, A0038, A0443	
Landwind Series\Landwind Fengshang\Engine\CV9_OBD		✓	✓	✓		
Landwind Series\Landwind Fengshang\Transmission	✓	✓	✓	✓		
Landwind Series\Landwind Fengshang\Airbag		✓	✓	✓		
Landwind Series\Landwind Fengshang\Anti-Theft	✓	✓	✓	✓		S0015, S0045, S0046, S0047, S0048, S0049, S0050
Landwind Series\Landwind Fenghua\Quick Test	✓	✓	✓			
Landwind Series\Landwind Fenghua\JMC Landwind ME797 EFI system		✓	✓	✓	A0035, A0442, A0037, A0039, A0040, A0038, A0443	
Landwind Series\Landwind Fenghua\Airbag\Airbag 1		✓	✓	✓	A0638, A0639, A0640, A0641, A0642, A0643, A0644	
Landwind Series\Landwind Fenghua\Airbag\Airbag 2	✓	✓	✓	✓		
Landwind Series\Landwind Fenghua\Airbag\Autoliv Airbag	✓	✓	✓	✓	A0645, A0646	
Landwind Series\Landwind Fenghua\Anti-Theft	✓	✓	✓	✓		S0015, S0045, S0046, S0047, S0048, S0049, S0050
Road Shaker (2.2L)	✓	✓	✓	✓	A0597, A0598, A0599, A0600, A0601, A0602, A0603, A0604, A0605, A0606, A0607, A0608, A0609, A0610	S0218, S0237, S0238, S0239
Puma series\Quick Test	✓	✓	✓			
Puma series\Engine (PCM)		✓	✓	✓		
Puma series\Body System\Instrument		✓	✓			
Puma series\Body System\Body module		✓	✓	✓		
Puma series\Anti-lock Brakes		✓	✓	✓		
Puma series\Electrical System\Charging system		✓	✓	✓		
Puma series\Electrical System\Parking help		✓	✓	✓		
Puma series\Module\ABS		✓	✓	✓		
Puma series\Module\BCM VII		✓	✓	✓		
Puma series\Module\PCM		✓	✓	✓		

Special Function Table	
S0001	Nozzle data
S0002	Start fault information test
S0003	Compression Test
S0004	Accelerated Testing
S0005	Jet off test
S0006	Engine speed comparison
S0007	High-pressure Test

S0008	PTO mode 0 engine speed adjustment value
S0009	PTO mode 1 engine speed adjustment value
S0010	PTO mode 2 engine speed adjustment value
S0011	PTO mode 3 engine speed adjustment value
S0012	Vehicle configuration options
S0013	Flash VIN
S0014	Clear ZFC learning value
S0015	Read/Write VIN
S0016	Temporary forbidden function / engine factory configuration
S0017	Clear function off for unclearable DTCs (OEM selection)
S0018	Cut off cylinder (injection off) test
S0019	Aftertreatment AdBlue system test
S0020	Particle trap DPF value forced regeneration
S0021	Unclearable fault clearing function / OEM configuration
S0022	DPF reset (don't replace ECU)
S0023	Read and write injector data
S0024	EGR zero trigger learning
S0025	ECU reset
S0026	Read and write vehicle data
S0027	Flash VIN
S0028	Flashing the service station code or diagnostic serial number
S0029	Program flash date
S0030	Tooth learning
S0031	Input ECU number
S0032	Input VIN
S0033	Enter model code
S0034	Reading and writing injector code
S0035	reset diesel particulate filter pressure value sense value learning value
S0036	reset diesel particulate filter learning value
S0037	Reset fuel moisture warning indicator
S0038	Reset exhaust gas temperature value
S0039	Reset fuel pressure reducing valve open counter learning value
S0040	Reset fuel pressure reducing valve open duration learning value
S0041	Fuel injection pump learning
S0042	Diesel particulate filter Static regeneration
S0043	Cylinder cut off Test
S0044	Startup fault information
S0045	Key match
S0046	Delete key
S0047	Replacement engine (ECM)
S0048	Replace the immobilizer (IMMO)
S0049	Replace the complete set
S0050	Reset immobilizer (IMMO)
S0051	Particle trap DPF reset
S0052	Modify ECU VIN code
S0053	Modify last service date
S0054	Read and write CAL ID
S0055	Reset all self-learning values
S0056	Parallel test
S0057	Air conditioner compressor relay self test
S0058	IVVT out/Oil inlet solenoid valve 1 self-test
S0059	cylinder #1 self-test
S0060	cylinder #2 self-test
S0061	cylinder #3 Self-test
S0062	Cylinder #4 self-test
S0063	Air flow valve self test
S0064	Variable intake manifold switch self test
S0065	Turbocharger Self Test
S0066	Injector #1 self-check
S0067	Injector #2 self-test
S0068	injector #3 self-test
S0069	Injector #4 Self-test
S0070	Electronic throttle position
S0071	Driver request
S0072	Catalytic efficiency diagnostics
S0073	Idle speed control
S0074	Starter relay 1
S0075	Starter relay 2
S0076	engine first start
S0077	Electronic cooling fan PWM1
S0078	Electronic cooling fan PWM2
S0079	Carbon canister purge solenoid valve self-test
S0080	Fuel pump relay
S0081	Fuel pump PWM
S0082	Flow control valve
S0083	Vacuum pump
S0084	Cooling water pump 1
S0085	Cooling water pump 2
S0086	IVVT out/intake oil solenoid valve 2 self-test
S0087	Rear oxygen heater 1
S0088	Front oxygen heater 1
S0089	after the oxygen heater 2
S0090	Front Oxygen Heater 2
S0091	Reset starter cycle counter
S0092	Hardware reset
S0093	VIN Write
S0094	Exhaust function
S0095	Write Offline Lock Code
S0096	Write VIN
S0097	Write Programming Date

S0098	Write programmed date
S0099	Write the repair shop code
S0100	Write VIN code
S0101	Write IQA
S0102	After-sales mandatory DPF regeneration
S0103	Garage MFMA
S0104	Change the oil
S0105	EEP actuator test
S0106	Update DPF
S0107	Flash the vehicle VIN
S0108	Steering angle sensor calibration
S0109	Yaw acceleration sensor calibration
S0110	Modify fill status
S0111	Modify the offline test status
S0112	Remote learning
S0113	Read vehicle configuration information
S0114	Write vehicle configuration information
S0115	Write vehicle VIN code
S0116	Flash the vehicle manufacturer part number
S0117	Flash system supplier ID
S0118	Flash ECU serial number
S0119	Flash ECU hardware number
S0120	Flash ECU hardware version number
S0121	Flash ECU software number
S0122	Flash ECU software version number
S0123	Flash the vehicle VIN code
S0124	Flash programming location
S0125	Flash programming date
S0126	Flash CALID
S0127	Variable intake manifold switch self-test
S0128	Injector 1# self-check
S0129	Injector 2# self-test
S0130	Injector 3# self-test
S0131	Injector 4# self-test
S0132	Carbon canister purging solenoid valve self-test
S0133	IVVT outlet/intake oil solenoid valve 2 self-test
S0134	ABS test
S0135	Manual exhaust
S0136	Write data
S0137	Yaw Rate sensor calibration
S0138	Tightening or releasing the caliper
S0139	Complete release of the caliper
S0140	Initialize installation
S0141	Switch key reset
S0142	read vehicle models data
S0143	Write model data
S0144	Leak test
S0145	After-sales replacement IMMO
S0146	After-sales replacement ECM
S0147	After-sales replacement IMMO and ECM at the same time
S0148	After-sales replacement key
S0149	Reset ECM
S0150	Reset IMMO
S0151	Self-learning value reset
S0152	Flash the vehicle manufacturer part number
S0153	Flash the vehicle manufacturer ECU hardware number
S0154	Software reset
S0155	Replace ESCL
S0156	Replace EMS
S0157	Replace PEPS
S0158	Left front tire ID learning
S0159	Right front tire ID learning
S0160	Left rear tire ID learning
S0161	Right rear tire ID learning
S0162	All tire ID learning
S0163	Front Tire standard pressure value configuration
S0164	Rear tire standard pressure value configuration
S0165	Front high pressure alarm compensation value configuration
S0166	Rear high pressure alarm compensation value configuration
S0167	Automatic stitching
S0168	Manual stitching
S0169	stitching projection matrix backup
S0170	stitching end
S0171	Configuring power transmitting method
S0172	Configure integrated vehicle power control
S0173	Configure drive shaft
S0174	Download vehicle configuration from the instrument
S0175	Steering angle calibration
S0176	Matching key
S0177	Match EMS
S0178	Match IMMO
S0179	Read configuration information
S0180	Write configuration information
S0181	Anti-pinch self-learning
S0182	Anti-pinch erasure
S0183	Engine oil change warning reset
S0184	Injector switch detection
S0185	Engine brake test
S0186	AdBlue injection test
S0187	Configure by model

S0188	Configure by vehicle configuration list
S0189	Self-learning of brake pedal position
S0190	TBOX configuration
S0191	Forced to turn on the equalization diagnostic command
S0192	Insulation sampling
S0193	Gear indicator LED
S0194	Write vehicle manufacturer part number
S0195	Write system supplier identification number
S0196	Write system supplier ECU hardware version number
S0197	Write system supplier ECU software version number
S0198	Write JMC part number
S0199	Model read
S0200	Model write
S0201	Erase all remotes
S0202	Reading configuration information
S0203	Vehicle Information Configuration
S0204	Reversing radar configuration
S0205	Write product serial number
S0206	Engine type configuration
S0207	ESC test
S0208	ESC calibration
S0209	Wheel speed sensor test
S0210	Read gear value
S0211	Manual learning of gears
S0212	System Test
S0213	Gear value adjustment
S0214	Crawl value adjustment
S0215	Write hardware version number
S0216	Write the serial number of the electronic control unit
S0217	After-sales query of the number of keys
S0218	DPF regeneration
S0219	Replace ECU or replace NSC
S0220	EGR valve reset self-learning
S0221	TVA valve reset self-learning
S0222	VGT valve reset self-learning
S0223	SCR
S0224	Read and write all IQA
S0225	Light Vehicle Diagnostic Ready Features
S0226	Replace GPF
S0227	Replace GPF differential pressure sensor
S0228	Trigger GPF regeneration
S0229	Write product serial number
S0230	Self-learning of brake pedal stroke
S0231	Write TBOX configuration code
S0232	Read offline configuration
S0233	Write offline configuration
S0234	T500-66° TBOX configuration
S0235	Induce system restart count reset
S0236	Trigger NSC desulfurization
S0237	write injector code
S0238	Three-speed control
S0239	Engine oil reset instruction
S0240	IVC sensor initialization
S0241	Configure the steering sensor
S0242	Reset pressure sensor bias
S0243	Calibrate the longitudinal acceleration sensor
S0244	Enable/disable ramp start assist
S0245	ABS filling
S0246	Variable and VIN data learning program
S0247	Module programming
S0248	ECU serial number
S0249	ECU variable code
S0250	ECU serial number
S0251	Read OEM configuration
S0252	OEM configuration
S0253	Offline configuration
S0254	Acu configuration
S0255	Rear radar function information
S0256	Battery pack type
S0257	Real vehicle calibration
S0258	Flashing the repair station code
S0259	Write calibration information
S0260	Fill exhaust
S0261	Write the repair date
S0262	Lock ACU
S0263	Yuhu 7 MT and Yuhu 7 8AT write gear configuration
S0264	Yuhu 7 MT and Yuhu 7 8AT write vehicle configuration
S0265	PEPS ESCL learning
S0266	PEPS key learning
S0267	PEPS learning
S0268	Fuel Injector Code
S0269	DPF function
S0270	Fuel injection shut-off test
S0271	Heavy-Duty Vehicle Diagnostic Ready Features
S0272	Set the regeneration prohibition conditions according to the experimental results
S0273	Delete the regeneration prohibition condition based on the experimental results
S0274	Remove regeneration static parameters
S0275	Reset regeneration lock key to increase carbon load
S0276	Resetting parameters when regeneration is too frequent
S0277	DPF pressure difference Sensor Replacement

S0278	Vehicle speed limit function
S0279	PTO Mode Configuration
S0280	required engine speed
S0281	VDS
S0282	EMS clear SCSK code
S0283	Mechanism Body Update
S0284	Write ACU sensor and switch configuration
S0285	Write EOL mode
S0286	write vehicle configuration
S0287	Maintenance exhaust
S0288	YRS calibration
S0289	write factory pattern
S0290	SPC calibration
S0291	Write down the offline configuration information
S0292	EBS battery coding configuration
S0293	Vehicle Mode Configuration
S0294	Write the VIN
S0295	Write offline function configuration
S0296	Write tire pressure current configuration
S0297	Write tire pressure configuration information 2
S0298	Write the localization standard for diesel vehicles
S0299	Write vehicle remote configuration
S0300	configuration Info
S0301	TBOX function configuration
S0302	Configure VIN code
S0303	Configure vehicle type
S0304	Configure Remote Control
S0305	Configure model information
S0306	Configure Adas
S0307	Configure local specified state
S0308	One-click configuration of BCM
S0309	Read vehicle configuration
S0310	After-sale static calibration of front-view camera
S0311	VIN Number
S0312	EOL mode ACU sensor switch configuration
S0313	Serial number of the vehicle-VIN code
S0314	Write ACU sensor and switch configuration
S0315	write variable code
S0316	N356 Yuhu 7 write vehicle configuration
S0317	Write vehicle configuration for Yuhu 7 MT and Yuhu 7 8AT
S0318	Front Tire High Pressure Warning Offset
S0319	Front tire temperature standard value
S0320	Rear tire high pressure warning offset value
S0321	Rear tire temperature standard value
S0322	Key learning
S0323	Remote control key learning
S0324	Ripple anti-pinch self-learning
S0325	write configuration 1
S0326	write configuration 2
S0327	write configuration 3
S0328	Check push rod zero position
S0329	Load matching (PT self-learning)
S0330	TBOX one-key configuration
S0331	Write air conditioner compressor configuration code
S0332	Write TBOX configuration code
S0333	Write VCU configuration code
S0334	Configure advanced features
S0335	Write vehicle configuration
S0336	write vehicle type
S0337	One-click write configuration information
S0338	Air conditioner compressor configuration code
S0339	TBOX configuration code
S0340	VCU configuration code
S0341	write collision flag
S0342	VCU clears SCSK code
S0343	Select data version
S0344	Calibration transfer angle
S0345	writing corner
S0346	One-click write configuration
S0347	enter service mode
S0348	exit service mode
S0349	RPAS (Rear Radar Configuration Information)
S0350	Cut off cylinder (injection off) test
S0351	DPF function test
S0352	Daylight/automatic light configuration

Active Test Table

A0001	Air conditioning compressor test
A0002	Lighting signal test (preheat wire indicator)
A0003	System light test
A0004	Common Rail pressure test
A0005	Cylinder close test
A0006	A/C Compressor
A0007	Preheat indicator light test
A0008	Glow plug control test
A0009	OBD lamp test
A0010	Oil metering unit test
A0011	Rail pressure target test

A0012	Exhaust brake valve test
A0013	SCR system injection valve test
A0014	SCR system pressure tube heating test
A0015	SCR system AdBlue box heating test
A0016	SCR system AdBlue pump test
A0017	SCR system inverse pumping test
A0018	SCR system return pipe heating test
A0019	SCR system AdBlue supply pump test
A0020	SXR system return pipe heating test
A0021	SCR system heating relay test
A0022	SCR system AdBlue level lamp test
A0023	SCR system relay test
A0024	Time Calibration Correction Released
A0025	Time calibration correction
A0026	Engine speed test
A0027	Lights Signal Test
A0028	Lighting control test
A0029	Odometer lamp test
A0030	Front-supply pump test
A0031	Relieve pressure waveform correction
A0032	External detector test
A0033	EGR cooler output test
A0034	Exhaust valve light test
A0035	MIL
A0036	Carbon canister Control Valve
A0037	Fuel pump relay
A0038	Air Conditioning Clutch
A0039	Fan 1
A0040	Fan 2
A0041	Fault lamp
A0042	Carbon canister valve
A0043	Air conditioning off relay
A0044	Carbon canister purge
A0045	Fuel Pump
A0046	low fan
A0047	high fan
A0048	IAC stepping
A0049	IAC speed
A0050	IAC reset
A0051	Ignition advance angle
A0052	Injector
A0053	Freeze measurement
A0054	BLM learning
A0055	Fuel open-loop control
A0056	BLM reset
A0057	Idle catalyst monitoring
A0058	ABS Warning Lamp
A0059	Left front wheel solenoid valve
A0060	Right front wheel solenoid valve
A0061	Left rear wheel solenoid valve
A0062	Right rear Wheel solenoid valve
A0063	System relay
A0064	System brake warning light
A0065	pump motor
A0066	Enable valve
A0067	Rear pressure relief valve
A0068	Rear block valve
A0069	Right front pressure relief valve
A0070	Right front brake valve
A0071	Left front pressure relief valve
A0072	Left Front shut-off valve
A0073	PWM duty Cycle
A0074	Right rear release valve
A0075	Right rear brake valve
A0076	ENABLE SOLENOID PWM
A0077	Motor
A0078	Left front valve (input)
A0079	Right front valve (input)
A0080	Left rear valve (input)
A0081	Right rear valve (input)
A0082	Left front valve (output)
A0083	Right front valve (output)
A0084	Left rear valve (output)
A0085	Right rear valve (output)
A0086	Left front valve (input and output) and motor
A0087	Right front valve (input and output) and motor
A0088	Left rear valve (input and output) and motor
A0089	right rear valve (input and output) and motor
A0090	all valves and motors
A0091	Lighting control system
A0092	Odometer light system
A0093	Cold Startup Lamp
A0094	Engine brake Exhaust throttle valve
A0095	injector A
A0096	injector B
A0097	Injector C
A0098	Injector D
A0099	Idle valve
A0100	Air conditioning relay
A0101	Air conditioning electromagnetic fan

A0102	Engine fault indicator lamp
A0103	Cooling fan relay 1#
A0104	Cooling Fan Relay 2#
A0105	Cut off cylinder 1
A0106	Cut off cylinder 2
A0107	Cut off cylinder 3
A0108	Cut off cylinder 4
A0109	Turbocharger testing
A0110	EGR valve test
A0111	Prohibit power-up time correction
A0112	Activate power up time correction
A0113	Water in oil indicator
A0114	MeUn test
A0115	Throttle test
A0116	QWC test
A0117	EGR bypass valve test
A0118	Stop engine test
A0119	Cruise Control Lamp Test
A0120	EGR valve self-learning test
A0121	Throttle valve self-learning test
A0122	Engine water temperature display test
A0123	Fuel filter heating test
A0124	Low speed fan test
A0125	High speed fan test
A0126	Starter low-end control test
A0127	Close MeUn test
A0128	Low voltage control glow plug test
A0129	Fuel consumption display test
A0130	COOLING FAN RELAY 1
A0131	COOLING FAN RELAY 2
A0132	Electronic cooling fan PWM1
A0133	Electronic cooling fan PWM2
A0134	A/C compressor relay
A0135	Carbon canister control solenoid valve
A0136	IVVT solenoid valve 1
A0137	IVVT solenoid valve 2
A0138	Rear oxygen heater 1
A0139	Front oxygen heater 1
A0140	after the oxygen heater 2
A0141	Front Oxygen Heater 2
A0142	Electronic throttle position
A0143	Air flow valve
A0144	Variable intake manifold switch
A0145	Turbocharger
A0146	Fuel pump PWM
A0147	Main Relay
A0148	Flow control valve
A0149	Starter motor
A0150	Start relay 1
A0151	Start relay 2
A0152	Vacuum pump
A0153	Cooling water pump
A0154	Left front air inlet valve
A0155	Right front air inlet valve
A0156	Left Rear air Inlet Valve
A0157	Right rear air inlet Valve
A0158	Left front exhaust outlet valve
A0159	Right front exhaust outlet valve
A0160	Left Rear air Outlet Valve
A0161	Right rear exhaust outlet valve
A0162	Airbag warning light
A0163	Collision output
A0164	Carbon canister cleaning
A0165	Throttle valve
A0166	Intake camshaft control
A0167	Outlet camshaft control
A0168	Intake pressure solenoid
A0169	turbocharger release
A0170	Cooling pump
A0171	Fuel quantity control valve
A0172	IDLE CONTROL
A0173	Engine speed control
A0174	Engine Coolant Temperature
A0175	Intake air temperature
A0176	Air Conditioning
A0177	Electric plug relay
A0178	EGR Throttle Valve
A0179	Throttle
A0180	boost pressure adjustment
A0181	injector test
A0182	Warning Light 1
A0183	warning light 2
A0184	Engine fault lamp
A0185	Engine speed display
A0186	Pressure Control Valve
A0187	Glow plug indicator
A0188	Left front oil outlet valve
A0189	Left front oil inlet valve
A0190	Right front oil outlet valve
A0191	Right front oil inlet valve

A0192	Left rear oil outlet valve
A0193	Left rear oil inlet valve
A0194	Right rear oil outlet valve
A0195	Right rear oil inlet valve
A0196	HSV1
A0197	HSV2
A0198	USV1
A0199	USV2
A0200	Pump motor
A0201	Valve relay failure
A0202	Speed limit disable/enable
A0203	Rear door lock unlock
A0204	Door lock lock/unlock
A0205	Rear washing action
A0206	Rear wiper Action
A0207	Front wash action
A0208	Front wiper action
A0209	Close window output
A0210	Electronic steering column lock signal output
A0211	Anti-theft speaker output
A0212	Rear defrost relay output
A0213	Daytime running light output control
A0214	Rear fog Lamp output control
A0215	Front fog light output control
A0216	High beam output control
A0217	Low beam output control
A0218	Position Lamp output control
A0219	Left and right direction Lamp output control
A0220	Danger Warning Light Output Control
A0221	PEPS indicator output control
A0222	Indoor light output control
A0223	Left turn signal
A0224	Right turn signal
A0225	Front Fog Lamp
A0226	Rear Fog Light
A0227	High Beam Light
A0228	ABS indicator
A0229	auto cruise
A0230	Engine water temp
A0231	IMMO indicator
A0232	Engine oil Pressure Indicator
A0233	PEPS/IMMO fault light
A0234	SVS lamp
A0235	Low fuel warning light
A0236	four-wheel drive high speed
A0237	four-wheel drive low speed
A0238	EBD indicator
A0239	Diesel preheating
A0240	Oil and water separation
A0241	OBD indicator
A0242	TPMS indicator
A0243	Driver belt
A0244	occupant seat belt
A0245	ESP indicator
A0246	ESP OFF indicator
A0247	ESCL indicator
A0248	Position lights
A0249	Parking Lamp
A0250	Charging indicator
A0251	Diesel particle capture indicator
A0252	Engine oil change indicator
A0253	Airbag indicator
A0254	Illumination brightness test
A0255	LCD Lamp Test
A0256	Coil current
A0257	Clutch torque
A0258	System operation mode
A0259	Pump Test
A0260	Door lock control
A0261	Trunk lock
A0262	Rear defrost
A0263	Indoor light
A0264	Low Beam Light
A0265	Alarm horn
A0266	Wiper
A0267	Rear wiper
A0268	Front wash motor
A0269	Rear washing motor
A0270	Glass Lift
A0271	PEPS backlight
A0272	Steering column lock to ground relay
A0273	Warning light switch backlight
A0274	Instrument light test
A0275	Water in oil indicator light
A0276	Carbon canister control solenoid valve
A0277	Left front fluid inlet valve
A0278	Left front liquid outlet valve
A0279	Right front liquid inlet valve
A0280	Right front liquid outlet valve
A0281	Left rear liquid inlet valve

A0282	Left rear outlet valve
A0283	Right rear liquid inlet valve
A0284	Right rear liquid outlet valve
A0285	Pilot valve 1
A0286	Pilot Valve 2
A0287	High pressure valve 1
A0288	High pressure valve 2
A0289	Disable relay valve off
A0290	System warning light
A0291	Hardware reset
A0292	Rearview mirror output control
A0293	Rear washing action
A0294	Rear wiper actuation
A0295	Front wash actuation
A0296	Front wiper actuation
A0297	Sunshade relay output
A0298	In-vehicle sunroof relay Output
A0299	Solenoid valve output
A0300	Anti-theft horn output
A0301	Right rear window output control
A0302	Left rear window output control
A0303	Right front window output Control
A0304	Left front window output control
A0305	Key ring light output control or door lock status indicator
A0306	Cruise indicator output control
A0307	EPB indicator output control
A0308	PEPS indicator output control or gate Lock status indicator
A0309	Luggage Light Output Control
A0310	Reversing light output control
A0311	Brake light output control
A0312	ABS
A0313	IMMO
A0314	Engine oil pressure
A0315	SVS
A0316	Low fuel indication
A0317	APB status indication
A0318	EPS[red]
A0319	EBD indication
A0320	Driver Airbag
A0321	charge indicator
A0322	OBD
A0323	TPMS
A0324	driver seat belt
A0325	occupant seat safety Band
A0326	esp
A0327	ESP OFF
A0328	ESCL
A0329	APB fault light
A0330	Shift lever indication
A0331	Illumination level detection
A0332	LCD Detection
A0333	Water table
A0334	fuel level gauge
A0335	Speedometer
A0336	Tachometer
A0337	Source mode
A0338	Volume
A0339	Bass [-14dB~0dB]
A0340	Bass [2dB~14dB]
A0341	Treble [-14dB~0dB]
A0342	Treble [2dB~14dB]
A0343	Equalization [Left 14~8]
A0344	Equilibrium [Left 7~0]
A0345	Equalization [Right 1~7]
A0346	Equalization [Right 8~14]
A0347	Attenuation [Left 14~8]
A0348	Attenuation [Left 7~0]
A0349	Attenuation [Right 1~7]
A0350	Attenuation [Right 8~14]
A0351	EQ
A0352	Illumination
A0353	Speaker-equalization/attenuation
A0354	Vehicle speed
A0355	Preheat module control test
A0356	engine fault Lamp test
A0357	System fault lamp test
A0358	Cylinder shut-down test
A0359	Electric plug
A0360	IMV test
A0361	Power main relay
A0362	Electric plug lamp
A0363	Injector # 1
A0364	Injector # 2
A0365	Injector # 3
A0366	Injector # 4
A0367	Left front window lift control
A0368	Right front window lift control
A0369	Left rear window lift control
A0370	Right rear Window lift control
A0371	Air Horn

A0372	Brake lights
A0373	Central lock
A0374	Wheel differential
A0375	Electric Horn
A0376	Left front window
A0377	Front right window
A0378	Front Windshield Wash
A0379	High speed wiper
A0380	Low speed wiper
A0381	Emergency light
A0382	Interior light
A0383	Axis Difference
A0384	Rear-view mirror heating
A0385	Self-unloading force
A0386	Rear work light
A0387	Reversing light
A0388	Electric sunroof
A0389	Step light
A0390	Rear axle left exhaust valve (DL OV)
A0391	Rear axle right exhaust valve (DR OV)
A0392	Front axle left exhaust valve (SL OV)
A0393	Front axle right exhaust valve (SR OV)
A0394	ASR valve
A0395	AEBS pre-emergency braking system
A0396	ASR Drive Skid System
A0397	Airbag
A0398	Pointer backlight control
A0399	Dial backlight control
A0400	LCD backlight control
A0401	Battery charge status
A0402	Buzzer
A0403	Camera
A0404	Diesel preheating
A0405	EBS electronic parking yellow light
A0406	EBS electronic parking red light
A0407	Engine Brake
A0408	Engine water temperature alarm
A0409	Engine fault indicator (indicator + text alarm)
A0410	Engine oil temperature
A0411	Engine Exhaust System Temperature
A0412	FCW front collision warning
A0413	Floating red area indication
A0414	Floating green area indication
A0415	Ramp keep
A0416	IHC adaptive far and near light control
A0417	Anti-Theft
A0418	LCD (red)
A0419	LCD (green)
A0420	LCD (blue)
A0421	LDWS lane offset warning system
A0422	LKA lane hold assist
A0423	Vehicle diagnostic interface
A0424	Pointer control
A0425	Decelerator
A0426	stability control off
A0427	stability control system
A0428	Tire pressure indicator
A0429	TSR Traffic Sign Recognition Function
A0430	Transmission faulty
A0431	PARKING BRAKE
A0432	Trailer ABS Brake
A0433	Adaptive Cruise
A0434	Low fuel level
A0435	Engine oil pressure low
A0436	Trailer turn right
A0437	Trailer turn left
A0438	Right Turn Indicator
A0439	Left turn indicator
A0440	AdBlue level lamp
A0441	Source
A0442	Carbon Carbon canister control valve
A0443	Maintenance lamp
A0444	ESC indicator
A0445	AT indicator
A0446	4WD indicator
A0447	Seat belt indicator
A0448	Airbag indicator
A0449	Winter mode indicator
A0450	Sport mode indicator
A0451	Cruise indicator
A0452	Transmission error indicator
A0453	Low fuel indicator
A0454	Water temperature indicator
A0455	TCS indicator
A0456	ESC/TCS indicator
A0457	Turn signal/danger light
A0458	door warning light
A0459	Headlights turn on warning lights
A0460	Service light
A0461	Outside low temperature warning light

A0462	CG relay enable
A0463	CG relay switch
A0464	Fan relay enable
A0465	Fan low speed relay on
A0466	Fan high speed relay on
A0467	Water pump relay enable
A0468	Pump duty cycle
A0469	Brake pedal position learning enable
A0470	Car door lock
A0471	Lift window output
A0472	Left and right corner lamp output control
A0473	Front radar indicator output control
A0474	Left turn indicator
A0475	Right turn indicator
A0476	Position light & low beam
A0477	ABS fault light
A0478	EBD fault light or brake vacuum pump fault light or low brake fluid level alarm
A0479	APB Status
A0480	Mechanical handbrake status
A0481	Fault of DCDC
A0482	Main driver's seat belt warning light
A0483	Co-pilot seat belt warning light (reserved)
A0484	EPS electro-hydraulic steering pump fault light
A0485	Ready indicator
A0486	Energy storage system failure
A0487	Vehicle system failure
A0488	Over temperature of drive motor or controller
A0489	Charger connection status
A0490	Insulation fault light
A0491	Power battery cut off fault light
A0492	Drive system failure
A0493	Cab locking mechanism (reserved)
A0494	Door open alarm
A0495	Door open sound alarm
A0496	Seat belt prompt sound alarm
A0497	Small light not turned off sound alarm
A0498	SOC too low alarm
A0499	Not in N gear start prompt
A0500	Not stepping on the brakes when starting prompt
A0501	Turn left and right voice alarm
A0502	Interior lights
A0503	Left corner light
A0504	Right corner light
A0505	Warning indicator
A0506	Warning LED
A0507	Front wiper high speed
A0508	Front wiper low speed
A0509	Front wash
A0510	Precipitating water indicator
A0511	Engine fault warning light
A0512	ABS fault warning light
A0513	Braking system fault light EBD
A0514	Hand brake indicator
A0515	EPS (yellow)
A0516	EPS (red)
A0517	Main driver's seat belt not fastened indicator
A0518	Co-pilot seat belt not fastened indicator light (reserved)
A0519	Oil pressure warning light
A0520	Fuel warning light
A0521	Battery charging indicator
A0522	Emission fault indicator
A0523	Exhaust brake
A0524	Engine preheat indicator
A0525	Overtaking speed warning light
A0526	Tire underpressure alarm and fast air leak alarm light (reserved)
A0527	DPF indicator
A0528	SCR indicator (AdBlue level)
A0529	Open door indicator
A0530	Cruise control (reserved)
A0531	Adaptive cruise indicator (reserved)
A0532	EPS fault indication
A0533	ESP OFF indication
A0534	LDW reserved
A0535	Start and stop instructions (reserved)
A0536	Driver's warning light
A0537	High Exhaust Temperature Lamp
A0538	Sound alarm prompt
A0539	Left front always open valve
A0540	Right front always open valve
A0541	Left rear always open valve
A0542	Right rear normally open valve
A0543	Left front always closed valve
A0544	Right front always closed valve
A0545	Left rear always closed valve
A0546	Right rear normally closed valve
A0547	Pressure regulating valve 1
A0548	Pressure regulator 2
A0549	Fuel supply valve 1
A0550	Fuel supply valve 2
A0551	Water in oil light test

A0552	Fuel pre-supply pump test
A0553	ECB test
A0554	Starter high-end control test
A0555	Exhaust brake valve relay test
A0556	Exhaust brake lamp test
A0557	Supercharger self-learning test
A0558	Water temperature test
A0559	AdBlue pressure pipe heating test
A0560	AdBlue box heating test
A0561	Cooling Fan Relay (Low Speed)
A0562	Cooling Fan Relay (High Speed)
A0563	Turbocharger drain valve
A0564	Cooler pump
A0565	Volume control valve
A0566	Throttle blade
A0567	Fuel tank cleaning solenoid
A0568	Intake camshaft control angle
A0569	Exhaust camshaft control angle
A0570	Rearview mirror folding/opening action
A0571	Speaker output
A0572	High beam output control
A0573	Power battery fault light
A0574	System fault
A0575	Power cut off fault light
A0576	Low battery state
A0577	Drive system fault light
A0578	EBD fault light
A0579	Power battery charge status
A0580	Generator temperature
A0581	Co-pilot seat belt warning light
A0582	Brake fault light or low brake fluid level alarm
A0583	EPS fault light
A0584	Lighting brightness adjustment
A0585	LCD adjustment
A0586	GAUGE adjustment
A0587	Fan high-speed relay on
A0588	Circuit loop water pump enable
A0589	Motor circuit water pump duty cycle
A0590	Coolant filling function
A0591	EPS indicator
A0592	Heater relay
A0593	Positive relay
A0594	Precharge relay
A0595	Negative relay
A0596	Rail pressure target test
A0597	Reset air intake throttle learning value
A0598	Reset the exhausted recirculation valve (EGR) learning value
A0599	Reset diesel particulate filter learning value
A0600	Reset the learning value of the pressure difference sensor of the diesel particulate filter
A0601	Reset the water in oil warning indicator
A0602	Reset the learning value of the power train control module
A0603	Reset exhaust temperature value
A0604	Reset high pressure fuel system learning value
A0605	Reset the learning value of the mass air flow sensor
A0606	Reset the learning value of the injector
A0607	Reset turbocharger learning value
A0608	Stop-start action
A0609	Vaporization coefficient of fuel system
A0610	Exhaust temperature sensor configuration
A0611	IVC sensor initialization
A0612	BMS reset
A0613	Motor circuit water pump enable
A0614	Right rear pressure reducing valve
A0615	Right rear booster valve
A0616	Left rear pressure reducing valve
A0617	Left rear booster valve
A0618	Right front pressure reducing valve
A0619	Right front booster valve
A0620	Left front pressure reducing valve
A0621	Left front boost valve
A0622	Relay switch
A0623	Generator switch
A0624	Front wiper action
A0625	Gear indicator LED
A0626	Solenoid control
A0627	Close injector
A0628	Left front filling valve
A0629	Left front release valve
A0630	Right front filling valve
A0631	Front Right release valve(Front Right)
A0632	Left rear filling valve
A0633	Left Rear release valve(Rear Left)
A0634	Right rear filling valve
A0635	Airbag status indicator
A0636	Collision output 1 test
A0637	Collision output 2 test
A0638	Warning light is off, prohibition light is off
A0639	Warning light is off, prohibition light is on
A0640	Warning light is on, prohibition light is off
A0641	Warning light is on, prohibition light is on

A0642	Collision output activated
A0643	HIGH G output active
A0644	ON-STAR LINK activation
A0645	Lock the ignition system
A0646	Unlock the ignition system
A0647	Self-learning test of booster valve
A0648	Door lock unlock
A0649	Door lock locked
A0650	Front wiper action at high speed
A0651	Front wiper action at low speed
A0652	Right direction light output control
A0653	Left turn signal output control
A0654	Right corner light output control
A0655	Left corner light output control
A0656	LDW (reserved)
A0657	SCR indicator (AdBlue level)
A0658	Cab locking mechanism (reserved)
A0659	ESP fault indication
A0660	Oil pressure warning light
A0661	Exhaust Brake
A0662	EPS (yellow)
A0663	EPS (red)
A0664	Co-pilot seat belt not wearing indicator light (reserved)
A0665	Front fog lamp indication
A0666	Rear fog lamp indication
A0667	High beam indicator
A0668	IGN1 relay
A0669	IGN2 relay
A0670	ESCL lock ground
A0671	ESCL POWER
A0672	12V pull-up control
A0673	Hydraulic Pump Command
A0674	clutch electric valve
A0675	Even gears engage electric valve
A0676	Odd gear engagement electric valve
A0677	Shift electric valve
A0678	Electronic Shifter Control
A0679	airbag warning light
A0680	door open signal
A0681	LED output control
A0682	R gear state
A0683	turn signal
A0684	The speed exceeds the threshold to activate BSD
A0685	Indoor backlight output
A0686	Day light output
A0687	Left/right turn signal output
A0688	Left and right front fog light output
A0689	Pre/post wash action
A0690	Front wipers high speed action
A0691	Front wiper low speed action
A0692	Danger warning light LED output
A0693	High brake light output
A0694	HDC LED light output
A0695	High beam output
A0696	Brake light output
A0697	Left/right low beam output
A0698	Rear mirror folding action
A0699	Rear mirrors open
A0700	Rear fog light output
A0701	Rear defrost LED light control
A0702	Rear defrost output
A0703	Reversing light output
A0704	Indoor light output
A0705	Indoor LOGO light output
A0706	Indoor light power output
A0707	Position light output
A0708	Start and stop LED output
A0709	back door unlock
A0710	Day mode LED output
A0711	Delay relay output
A0712	Left front door open signal output
A0713	ESCL output
A0714	Left front window lowering output control
A0715	Left front window up output control
A0716	AEB function is turned off/AEB function failure
A0717	ESP warning light/ESP fault light
A0718	FCW function is turned off/FCW Functional failure
A0719	ABS fault indicator
A0720	ACC system
A0721	Airbag fault
A0722	Anti-theft authentication indicator
A0723	Automatic high beam light
A0724	Battery charge indicator
A0725	The blind spot monitoring function is turned off / the door opening warning function is turned off
A0726	Low brake fluid level indicator light/parking brake/EBD malfunction indicator light
A0727	The reminder function of vehicles passing behind the CTA is turned off
A0728	Engine maintenance
A0729	Engine preheat
A0730	ESP off indicator
A0731	Front Fog Lamp Indicator

A0732	Engine water temperature high
A0733	LDW indicator
A0734	Oil-water separation fault
A0735	PEPS alarm indicator
A0736	Rear fog light indicator
A0737	Driver's seat belt not fastened
A0738	TPMS fault indicator
A0739	Urea indicator light
A0740	Vehicle safety distance alarm/pedestrian safety distance alarm
A0741	Vehicle speeding alarm
A0742	EPB fault
A0743	Automatic Parking - AVH
A0744	Engine fault(high configuration)
A0745	RVC output control
A0746	Blower gear
A0747	Mode position
A0748	AC
A0749	loop position
A0750	damper position
A0751	Backlight Level Check
A0752	pressure gauge check
A0753	Control LED Gauge Check
A0754	TFT check
A0755	Cab lock indicator light
A0756	Door open indicator
A0757	Electronic steering column lock
A0758	ESP OFF indicator
A0759	Exhaust brake indicator lamp
A0760	Variable Speed
A0761	LCD Screen Check
A0762	speaker control
A0763	SVS indicator
A0764	Turn left
A0765	Turn right
A0766	Vehicle safety distance alarm Pedestrian safety distance alarm
A0767	Control Status Switch Control
A0768	Boost Time Valve Control
A0769	Decompression time valve control
A0770	ESP (red)
A0771	ESP (yellow)
A0772	Handbrake
A0773	No key
A0774	Low pressure alarm and insufficient vacuum alarm (HW grounding)
A0775	Small light not turn off alarm
A0776	seat belt warning light
A0777	Door open
A0778	Front wiper at high speed
A0779	Front wiper action at low speed
A0780	Left turn signal output
A0781	Left/left front turn signal output
A0782	Right turn signal output
A0783	Right/right front turn signal output
A0784	Rising window output
A0785	Forward Collision Warning System Light Output
A0786	Vehicle safety system Lane departure warning light output
A0787	Rear Mirror heating indicator
A0788	Rear defogging relay output
A0789	LDW LED light output
A0790	FCW LED light output
A0791	Mirror heating output
A0792	A1R valve
A0793	A1L valve
A0794	A2L valve
A0795	A2R valve
A0796	A3L valve
A0797	A3R valve
A0798	Trailer Control Solenoid Valve
A0799	Rear axle ASR valve boost
A0800	Rear axle ASR valve pressure keeping
A0801	Front axle ASR valve boost
A0802	Front axle ASR valve pressure keeping
A0803	Retarder
A0804	ABS lights
A0805	ASR lights
A0806	Trailer ABS light
A0807	Front fog indicator
A0808	rear fog indicator
A0809	Position lights and low beams
A0810	ESP OFF indication
A0811	video on
A0812	Airbag warning light status
A0813	ABS indicator switch
A0814	EBD indicator switch
A0815	Left front booster valve
A0816	Right front booster valve
A0817	Motor switch
A0818	Rear left booster valve
A0819	Rear left pressure reducing valve
A0820	Rear right booster valve
A0821	Rear right pressure reducing valve

A0822	All doors are locked
A0823	All doors are unlocked
A0824	Daytime running light status
A0825	front wiper high speed
A0826	front wiper low speed
A0827	ParkLed light output
A0828	Window down
A0829	Window
A0830	left front window control
A0831	Right front window control
A0832	left rear window control
A0833	right rear window control
A0834	Front left boost threshold
A0835	Front left decompression valve
A0836	Front right boost threshold
A0837	Front right decompression valve
A0838	Rear left boost valve
A0839	Rear left decompression valve
A0840	Rear right boost valve
A0841	Rear right decompression valve
A0842	Brake light output status
A0843	Hazard warning light LED output control
A0844	Mirror opening action
A0845	Falling window output
A0846	ABS adjustment adaptation switch
A0847	Static output speed limit switch
A0848	Brake position learning enabled
A0849	CG relay open
A0850	EG relay open
A0851	Increase coolant activity
A0852	CPID battery pack water pump duty cycle
A0853	CPID Motor Water Pump Duty Cycle
A0854	CPID Tbox lock code
A0855	Anti-theft status
A0856	EPS warning light/EPS fault light
A0857	ACC system indicator light
A0858	Drive system temperature is too high
A0859	Insulation failure
A0860	drive power limited
A0861	Power battery voltage is low
A0862	Power battery charging indication
A0863	Power battery connection indication
A0864	powertrain failure
A0865	READY
A0866	Power battery failure
A0867	Vehicle safety distance alarm Pedestrian safety distance alarm
A0868	Blind spot monitoring function/door opening warning function
A0869	Hill Descent - HDC
A0870	passenger seat belt
A0871	CTA rear vehicle crossing reminder function
A0872	AUTO HOLD indicator light
A0873	Rear defrost LED control
A0874	Battery water pump duty cycle
A0875	Battery water pump 2 duty cycle
A0876	Fan Duty Cycle Control
A0877	Motor water pump duty cycle
A0878	Tbosx lock flag
A0879	ECO light on control
A0880	OG relay status
A0881	Coolant filling enable flag bit
A0882	Compressor speed control
A0883	Blower voltage output control
A0884	Internal and external circulation damper motor/actuator
A0885	Mixed temperature damper motor/actuator, left
A0886	Blow Mode Damper Motor/Actuator
A0887	PTC temperature control
A0888	air cooler
A0889	heater
A0890	PTC
A0891	Engine brake switch
A0892	Low idle brake switch
A0893	Throttle position self-learning test
A0894	AdBlue suction pipe heating test
A0895	AdBlue supply pipe heating test
A0896	AdBlue pump test
A0897	Exhaust temperature sensor test
A0898	Particle filter upstream sensor temperature test
A0899	SCR system upstream sensor temperature test
A0900	Engine oil cut off test
A0901	AdBlue Metering valve actuator test
A0902	AdBlue return pipe heating test
A0903	Intake heating control valve test
A0904	Fuel filter heater test
A0905	Starter test
A0906	Right corner light
A0907	error indication
A0908	Fault LED
A0909	Brake Lamp
A0910	Daytime Running Light
A0911	Sound alarm reminder