

QINGLING V12.87 Function List

Note:

✓	Functions marked with ✓ is fully supported.									
System		ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test		Special Func		
Qingling(Isuzu) China VI\Heavy-Duty Trucks China VI (6U&6W) Bosch MD1CE108		✓	✓	✓	✓	Please refer to BOSCH Function List				
Qingling(Isuzu) China VI\Medium & Heavy-Duty Trucks China VI (4H) Bosch MD1CC878		✓	✓	✓	✓	Please refer to BOSCH Function List				
Qingling(Isuzu) China VI\Light-Duty Trucks China VI (4K) Bosch EDC17C81		✓	✓	✓	✓	Please refer to BOSCH Function List				
Qingling(Isuzu) China VI\Delphi Common Rail System DCM7.1 (Qingling Isuzu 4KH1CT6 China VI)		✓	✓	✓	✓	Please refer to DELPHI Function List				
Qingling(Isuzu) China VI\Delphi Common Rail System (Jiangxi Isuzu JE493ZLQ6E China VI)		✓	✓	✓	✓	Please refer to DELPHI Function List				
Qingling(Isuzu) China VI\Delphi (China VI) Exhaust Aftertreatment		✓	✓	✓	✓	Please refer to SCR Function List				
Qingling(Isuzu) 100P\Engine System\Engine 4KH1-TC (VP44, Denso K line)		✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033		S0036, S0037, S0038, S0031		
Qingling(Isuzu) 100P\Engine System\4JB1-TCT/TC1 China III		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Engine System\4JB1CN China IV		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Engine System\4JJ1-TC Common Rail EGINE (CAN China IV/V)		✓	✓	✓	✓	A0040, A0041, A0042, A0043, A0044, A0045, A0046, A0047, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0035		S0027, S0028, S0039, S0040, S0041, S0042		
Qingling(Isuzu) 100P\Engine System\4KH1CN5HD China V		✓	✓	✓	✓	Please refer to DELPHI Function List				
Qingling(Isuzu) 100P\Engine System\4KH1CN5LS China V		✓	✓	✓	✓	Please refer to SCR Function List				
Qingling(Isuzu) 100P\Transmission System\4HK1-TC Transmission System		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Transmission System\ELF truck Smoother (Ex) gearbox		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 100P\Anti-lock Brake System (ABS)\Bosch anti-lock brake		✓	✓	✓	✓	Please refer to ABS Function List				
Qingling(Isuzu) 100P\Immobilizer		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Engine System\4KH1-TC China III		✓	✓	✓	✓	A0037, A0030, A0031, A0032, A0033		S0032, S0033		
Qingling(Isuzu) 600P\Engine System\4KH1-TCG40 China IV		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Engine System\4KH1-TCG4 China IV		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Engine System\4KH1CN5HD China V		✓	✓	✓	✓	Please refer to DELPHI Function List				
Qingling(Isuzu) 600P\Engine System\4KH1CN5HS China V		✓	✓	✓	✓	Please refer to SCR Function List				
Qingling(Isuzu) 600P\Engine System\4KH1-TCG51 China V		✓	✓	✓	✓	Please refer to SCR Function List				
Qingling(Isuzu) 600P\Transmission System\4HK1-TC Transmission System		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Transmission System\ELF truck Smoother (Ex) gearbox		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 600P\Anti-lock Brake System (ABS)\Bosch anti-lock brake		✓	✓	✓	✓	Please refer to ABS Function List				
Qingling(Isuzu) 600P\Immobilizer		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 700P\Engine System\4HK1-TC China III		✓	✓	✓	✓	A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020		S0005, S0006, S0007, S0008, S0009, S0012, S0013, S0014, S0015		
Qingling(Isuzu) 700P\Engine System\4HK1-TCG40 China IV		✓	✓	✓	✓	Please refer to ISUZU Function List				
Qingling(Isuzu) 700P\Engine System\4KH1-TCG4 China IV		✓	✓	✓	✓	Please refer to ISUZU Function List				

Qingling(Isuzu) 700P\Engine System\4HK1- TC51 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Engine System\4HV1-CNG Eging (K line China III)	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0001, S0002, S0003, S0004
Qingling(Isuzu) 700P\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) 700P\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) 700P\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) 700P\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) 700P\Immobilizer	✓	✓	✓			
Qingling(Isuzu) 700P\Monitor	✓	✓	✓			
Qingling(Isuzu) 700P\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) 700P\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) 700P\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) K600\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
Qingling(Isuzu) K600\Engine System\4KH1-TCG4 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Engine System\4KH1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Engine System\4KH1-TC51 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) K600\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) K600\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) K600\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) K600\Immobilizer	✓	✓	✓			
Qingling(Isuzu) K600\Monitor	✓	✓	✓			
Qingling(Isuzu) K600\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) K600\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) K600\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) VC46\Engine System\6HK1-TCNG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Engine System\6UZ1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Engine System\6HK1-TCH China V	✓	✓	✓	✓	Please refer to ISUZU Function List	

Qingling(Isuzu) VC46\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) VC46\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) VC46\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) VC46\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC46\Immobilizer	✓	✓	✓			
Qingling(Isuzu) VC46\Monitor	✓	✓	✓			
Qingling(Isuzu) VC46\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) VC46\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) VC46\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) VC46\Allision 4430(Gen 5)	✓	✓	✓		A0056, A0057	
Qingling(Isuzu) VC61\Engine System\6WG1-TC Common Rail Engine (China III)	✓	✓	✓	✓	A0012, A0023, A0024, A0034, A0025, A0035, A0036, A0011	S0016, S0017, S0018, S0019, S0020, S0021, S0031, S0030
Qingling(Isuzu) VC61\Engine System\6WG1-TCG51 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Engine System\6UZ1-TCG50 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) VC61\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) VC61\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) VC61\CAN Converter (FMS)	✓	✓	✓	✓		
Qingling(Isuzu) VC61\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) VC61\Immobilizer	✓	✓	✓			
Qingling(Isuzu) VC61\Monitor	✓	✓	✓			
Qingling(Isuzu) VC61\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) VC61\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) VC61\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) VC61\Allision 4430(Gen 5)	✓	✓	✓		A0056, A0057	
Qingling(Isuzu) VC61\Instrument	✓					
Qingling(Isuzu) KV100\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
Qingling(Isuzu) KV100\Engine System\4KH1CN5LS China V	✓	✓	✓	✓	Please refer to SCR Function List	
Qingling(Isuzu) KV100\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	

Qingling(Isuzu) KV100\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV100\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV100\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV100\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) KV100\Immobilizer	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV600\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
Qingling(Isuzu) KV600\Engine System\4KH1CN5HD China V	✓	✓	✓	✓	Please refer to DELPHI Function List	
Qingling(Isuzu) KV600\Engine System\4KH1CN5HS China V	✓	✓	✓	✓	Please refer to SCR Function List	
Qingling(Isuzu) KV600\Engine System\4KH1-TCG51 China V	✓	✓	✓	✓	Please refer to SCR Function List	
Qingling(Isuzu) KV600\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV600\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV600\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV600\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) KV600\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) KV600\Immobilizer	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
Qingling(Isuzu) FTR\Engine System\4HK1-TC China III	✓	✓	✓	✓	A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020	S0005, S0006, S0007, S0008, S0009, S0012, S0013, S0014, S0015
Qingling(Isuzu) FTR\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) FTR\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) FTR\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) FTR\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FTR\Immobilizer	✓	✓	✓			
Qingling(Isuzu) FTR\Monitor	✓	✓	✓			
Qingling(Isuzu) FTR\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) FTR\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) FTR\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) FVZ\Engine System\6HK1-TCS China III	✓	✓	✓	✓	A0011, A0021, A0022, A0023, A0024, A0021, A0022, A0025, A0026, A0027, A0028	S0006, S0007, S0008, S0009, S0010, S0011, S0034, S0035
Qingling(Isuzu) FVZ\Engine System\6HK1-TC China III	✓	✓	✓	✓	A0011, A0021, A0022, A0023, A0024, A0021, A0022, A0025, A0026, A0027, A0028	S0006, S0007, S0008, S0009, S0010, S0011, S0034, S0035
Qingling(Isuzu) FVZ\Engine System\6HK1-TCH China V	✓	✓	✓	✓	Please refer to ISUZU Function List	

Qingling(Isuzu) FVZ\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVZ\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVZ\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVZ\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVZ\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) FVZ\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) FVZ\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) FVZ\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVZ\Immobilizer	✓	✓	✓			
Qingling(Isuzu) FVZ\Monitor	✓	✓	✓			
Qingling(Isuzu) FVZ\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) FVZ\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) FVZ\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) FVR\Engine System\6HK1-TC China III	✓	✓	✓	✓	A0011, A0021, A0022, A0023, A0024, A0021, A0022, A0025, A0026, A0027, A0028	S0006, S0007, S0008, S0009, S0010, S0011, S0034, S0035
Qingling(Isuzu) FVR\Engine System\6HK1-TCN China III	✓	✓	✓	✓	A0011, A0021, A0022, A0023, A0024, A0021, A0022, A0025, A0026, A0027, A0028	S0006, S0007, S0008, S0009, S0010, S0011, S0034, S0035
Qingling(Isuzu) FVR\Engine System\6HK1-TCN China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) FVR\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) FVR\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) FVR\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) FVR\Immobilizer	✓	✓	✓			
Qingling(Isuzu) FVR\Monitor	✓	✓	✓			
Qingling(Isuzu) FVR\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) FVR\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) FVR\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) Juka\Engine System\6UZ1-TCG50 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Engine System\6UZ1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Engine System\6UZ1_TC engine	✓	✓	✓	✓	A0038, A0039, A0011	S0022, S0023, S0024, S0025, S0016, S0017, S0018, S0019, S0020, S0021, S0026, S0029, S0030
Qingling(Isuzu) Juka\Engine System\6WG1_TC Common Rail Engine (China III)	✓	✓	✓	✓	A0012, A0023, A0024, A0034, A0025, A0035, A0036, A0011	S0016, S0017, S0018, S0019, S0020, S0021, S0031, S0030
Qingling(Isuzu) Juka\Engine System\6WG1-TCG51 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Engine System\6WG1-TCG52 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	

Qingling(Isuzu) Juka\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
Qingling(Isuzu) Juka\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
Qingling(Isuzu) Juka\Airbag	✓	✓	✓	✓		
Qingling(Isuzu) Juka\CAN Converter (FMS)	✓	✓	✓	✓		
Qingling(Isuzu) Juka\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
Qingling(Isuzu) Juka\Immobilizer	✓	✓	✓			
Qingling(Isuzu) Juka\Monitor	✓	✓	✓			
Qingling(Isuzu) Juka\Smoother (MZW)	✓	✓	✓			
Qingling(Isuzu) Juka\Speedometer control device (independent)	✓			✓		
Qingling(Isuzu) Juka\Speedometer control device (internal speedometer)	✓			✓		
Qingling(Isuzu) Juka\Allision 4430(Gen 5)	✓	✓	✓		A0056, A0057	
Qingling(Isuzu) Juka\Instrument	✓					
NLR/NMR Models\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
NLR/NMR Models\Engine System\4HK1-TC China III	✓	✓	✓	✓	A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020	S0005, S0006, S0007, S0008, S0009, S0012, S0013, S0014, S0015
NLR/NMR Models\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓			
NLR/NMR Models\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List	
NLR/NMR Models\Airbag	✓	✓	✓	✓		
NLR/NMR Models\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List	
NLR/NMR Models\Immobilizer	✓	✓	✓			
NLR/NMR Models\Monitor	✓	✓	✓			
NLR/NMR Models\Smoother (MZW)	✓	✓	✓			
NLR/NMR Models\Speedometer control device (independent)	✓			✓		
NLR/NMR Models\Speedometer control device (internal speedometer)	✓			✓		
ELF Models\Engine System\Engine 4KH1-TC (VP44, Denso K line)	✓	✓	✓	✓	A0029, A0030, A0031, A0032, A0033	S0036, S0037, S0038, S0031
ELF Models\Engine System\4HK1-TC China III	✓	✓	✓	✓	A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020	S0005, S0006, S0007, S0008, S0009, S0012, S0013, S0014, S0015
ELF Models\Engine System\4HK1-TCG40 China IV	✓	✓	✓	✓	Please refer to ISUZU Function List	

ELF Models\Engine System\4HK1-TC50 China V	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Engine System\4HK1/4JJ1 CRail_Euro3(700P)	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Transmission System\4HK1-TC Transmission System	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Transmission System\ELF truck Smoother (Ex) gearbox	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Anti-lock Brake System (ABS)\Anti-lock Braking System ABS 6	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Anti-lock Brake System (ABS)\ABS (Prevention Locking Brake System)	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Anti-lock Brake System (ABS)\ABS/ESC	✓	✓	✓		
ELF Models\Anti-lock Brake System (ABS)\Bosch anti-lock brake	✓	✓	✓	✓	Please refer to ABS Function List
ELF Models\Airbag	✓	✓	✓	✓	
ELF Models\AdBlue SCR system	✓	✓	✓	✓	Please refer to ISUZU Function List
ELF Models\Immobilizer	✓	✓	✓		
ELF Models\Monitor	✓	✓	✓		
ELF Models\Smoother (MZW)	✓	✓	✓		
ELF Models\Speedometer control device (independent)	✓			✓	
ELF Models\Speedometer control device (internal speedometer)	✓			✓	

Special Function Table	
S0001	Clear injector learning value
S0002	Clear gasoline ratio limit value
S0003	Clear throttle idle speed learning value
S0004	Clear closed loop throttle learning value
S0005	Reading nozzle data
S0006	Fuel injector code #1
S0007	Injector code #2
S0008	Injector code #3
S0009	Fuel injector code #4
S0010	Injection nozzle coding #5
S0011	Injection nozzle coding #6
S0012	Diesel particulate trap forced Regeneration
S0013	Diesel particulate trap regeneration data reset
S0014	air flow correction data service mode
S0015	Clear learned fuel pump data
S0016	1-cylinder injector code reading and writing
S0017	2-cylinder injector code reading and writing
S0018	3-cylinder injector code reading and writing
S0019	4-cylinder injector code reading and writing
S0020	5-cylinder injector code reading and writing
S0021	6-cylinder injector code reading and writing
S0022	Injector stop
S0023	Main injection timing
S0024	Front injection timing
S0025	Fuel injection valve forced drive
S0026	Reset fuel pump calibration
S0027	Mode 1
S0028	Fuel Pump Initialization
S0029	Exhaust Gas Recirculation Control Valve
S0030	Turbocharger control
S0031	EGR
S0032	Read and write VIN
S0033	Lock ECU
S0034	4-cylinder
S0035	6-cylinder
S0036	Idle speed adjustment
S0037	Initial capacity
S0038	Limit capacity
S0039	DPD automatic regeneration
S0040	Diesel particulate trap normal regeneration control
S0041	Diesel particulate trap slow regeneration control
S0042	Diesel Particle Trap Status Reset

Active Test Table	
A0001	A/C relay
A0002	Fuel cut off solenoid 1
A0003	Fuel cut off solenoid 2

A0004	Warning light
A0005	Electronically controlled throttle operation
A0006	Fuel injection valve operation
A0007	Fuel injection spark timing change
A0008	Exhaust brake light
A0009	Exhaust brake VSV
A0010	Required idle speed change
A0011	Fuel rail pressure
A0012	Injector stop
A0013	Pre-injection stop
A0014	Injector force start
A0015	Glow Plug Relay
A0016	Exhaust brake
A0017	Intake throttle valve
A0018	Exhaust throttle valve
A0019	EGR
A0020	Turbo charger
A0021	Cylinder cut off test 4-cylinder
A0022	Cylinder cut off test 6-cylinder
A0023	Main injection timing
A0024	Front injection stop
A0025	Preheat relay command
A0026	Exhaust Throttle Control
A0027	EGR control valve
A0028	Turbocharger control
A0029	Engine indicator (check light) test
A0030	Preheating relay test
A0031	Preheating time indicator test
A0032	Exhaust gas recirculation valve test
A0033	Speed Control
A0034	Fuel injection valve forced drive
A0035	Exhaust throttling control
A0036	Reset fuel pump calibration
A0037	Engine indicator (checking lamp) test
A0038	Preheat relay command
A0039	Exhaust throttling control
A0040	Fuel pressure control
A0041	Pre-spray control
A0042	Injection Timing Control
A0043	Nozzle 1 forced drive
A0044	Nozzle 2 forced drive
A0045	Nozzle 3 forced drive
A0046	Nozzle 4 forced drive
A0047	Cylinder 1 Balance rate test
A0048	Cylinder 2 balance rate test
A0049	Cylinder 3 balance rate test
A0050	Cylinder 4 balance rate test
A0051	Intake throttle Solenoid control
A0052	EGR solenoid valve control
A0053	Turbocharger solenoid valve control
A0054	Preheating relay control
A0055	Exhaust brake Control
A0056	AT warning light
A0057	Clear learning values