

DOOSAN V13.1 Function List							
Note:							
✓	Functions marked with ✓ is fully supported.						
System		ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Diesel Engine\DL 08 (step 3)		✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0010	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013, S0014
Diesel Engine\DV 11 (step 3)		✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015	S0001, S0002, S0003, S0005, S0006, S0007, S0008, S0009, S0010, S0015, S0012, S0013, S0014
Diesel Engine\DL 06\Bosch EDC7UC31		✓	✓	✓	✓	A0016, A0007, A0017, A0009, A0010, A0011, A0012, A0013, A0014, A0015	S0001, S0002, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0015, S0012, S0016, S0013, S0014
Diesel Engine\DL 06\Bosch EDC7C1		✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0010	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013, S0014
Diesel Engine\DL 06\Bosch EDC16C39		✓	✓	✓		A0018, A0019, A0020, A0021, A0022, A0023, A0024, A0025, A0026, A0027, A0028, A0029	
Diesel Engine\DL 08		✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0010	S0001, S0002, S0003, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0011, S0012, S0013, S0014
Diesel Engine\DV 11		✓	✓	✓	✓	A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015	S0001, S0002, S0003, S0005, S0006, S0007, S0008, S0009, S0010, S0015, S0012, S0013, S0014
Diesel Engine\Bosch Automatic Identification		✓	✓	✓	✓	Please refer to BOSCH Function List	
Exhaust Aftertreatment\Exhaust Aftertreatment DNOX2		✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005	
Exhaust Aftertreatment\DeNox DCU for vehicle AdBlue			✓	✓			

Special Function Table	
S0001	Accelerated Testing
S0002	Compression Test
S0003	Cylinder Cut Off Test
S0004	Cooling water temperature sensor
S0005	Boost temperature sensor
S0006	Fuel temperature sensor
S0007	Fuel pressure sensor
S0008	Barometric Air Pressure Sensor
S0009	Supercharging pressure sensor
S0010	Accelerator pedal position sensor
S0011	Battery voltage sensor
S0012	Vehicle Speed Sensor
S0013	Engine Oil Pressure Sensor
S0014	Engine Oil Temperature Sensor
S0015	Battery pressure sensor
S0016	Engine speed

Active Test Table	
A0001	Proportioning valve
A0002	Vehicles use urea two-position four-way valve
A0003	AdBlue tank heating device
A0004	Filter case Heating element
A0005	Filter outlet interface heating element
A0006	Parking brake switch
A0007	Foot Brake Switch
A0008	Cruise Control Switch
A0009	Clutch Switch
A0010	Intake/Exhaust Brake 1 Switch
A0011	Cruise control off switch
A0012	Cruise control recovery switch
A0013	Cruise control acceleration switch
A0014	Cruise control deceleration switch
A0015	Intake/exhaust brake 2 Switch
A0016	Parking Brake Switch
A0017	Cruise Control Mode Switch
A0018	Fuel filter heating device
A0019	Electric fuel pump relay
A0020	EGR solenoid valve
A0021	Auxiliary heater electronics 1
A0022	Auxiliary heater electronics 2
A0023	Boost pressure control
A0024	Throttle control unit
A0025	Preheating appliances
A0026	Exhaust Warning Lamp
A0027	Glow plug indicator
A0028	Coolant Compressor Relay
A0029	Water tank fan