

# JCB V12.2 Function List

**Note:**

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Construction\Articulated Dump Trucks\Diagnostics\Read ECU Information\Engine\Engine Identification	✓					
Construction\Articulated Dump Trucks\Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Construction\Articulated Dump Trucks\Diagnostics\Read Fault Code\Engine\Fault Codes		✓	✓			
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Alternator				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Fog Lights				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Fuel Level				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Head lights				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Indicators and Hazards				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Side lights				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Electrical\Work Lights				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Air Filter				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Engine Brake				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Engine Oil Pressure				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Engine Speed & Hours				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Engine Temperatures				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Fueling Information				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Inlet Exhaust Conditions				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Pre-Heat				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Engine\Throttle Control				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Body Control				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Emergency Steering				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Hydraulic Cold Start				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Park Brake Accumulator Pressure				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Park Brake Pressure				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Hydraulic\Suspension Control				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Transmission\Differential Lock				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Transmission\Gear Selection				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Transmission\Gearbox Filter Blocked				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Transmission\Gearbox Oil Temperatures				✓		
Construction\Articulated Dump Trucks\Diagnostics\Live Data\Transmission\Vehicle Speed				✓		
Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\LiveLink Dagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\LiveLink Dagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\Machine ECU Diagnostic\Read Fault Code\MECU\Cluster Active Fault Codes		✓	✓			

Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\Machine ECU Diagnostic\Read Fault Code\MECU\MECU Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\Machine ECU Diagnostic\Read Fault Code\MECU\Throttle Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Backhoe Loader 3DX Series India\Machine ECU Diagnostic\Live Data\MECU\Electronic Pump Flow Control Status				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Backhoe Loaders\Backhoe Loaders\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.01 - Cluster Details	✓				
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.02 - MECU Details	✓				
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.03 - TECU Details	✓				
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Cluster Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active MECU Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active DCU Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Engine Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Transmission Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Immobiliser Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Livelink Faults		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.02 - Cluster Fault codes only		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.03 - MECU Fault codes only		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.04 - DCU Fault codes only		✓	✓		
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.01 - Fuel / DEF Info				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.02 - Hydraulic Pump Control				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.03 - Liquid Levels				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.04 - Pressures				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.05 - Temperatures				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.06 - Engine				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.07 - Air Filter				✓	
Construction\Backhoe Loaders\Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.08 - RH Cluster Button Status				✓	
Construction\Backhoe Loaders\Compact Backhoe Loaders\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Backhoe Loaders\Compact Backhoe Loaders\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.01 - RH Cluster Details	✓				
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.02 - Front Cluster Details	✓				
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.03 - TECU Details	✓				
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active RH Cluster Faults		✓	✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active FW Cluster Faults		✓	✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Transmission Faults		✓	✓		

Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Immobiliser Faults		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Livelink Faults		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Engine Faults		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.02 - RH Cluster Fault codes only		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.03 - FW Cluster Fault codes only		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.04 - TECU Fault codes only		✓	✓			
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.01 - Fuel Info				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.03 - Liquid Levels				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.04 - Pressures				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.05 - Temperatures				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.06 - Engine				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.07 - Air Filter				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.08 - RH Cluster I/O Status				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.10 - TECU I/O Status				✓		
Construction\Backhoe Loaders\Compact Backhoe Loaders\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.11 - TECU CAN Status				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Read ECU Information\Vehicle && CAN\Vehicle Identification	✓					
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Beacon				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Courtesy Light				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Horn				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Lever Lock / Servo Isolator				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Redundancy				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\System Charge				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Wiper / Washer				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Electrical\Work Lights (Boom)				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Air Filter				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Auto Idle / One Touch Idle				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Auto Warm				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Emergency Stop				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Engine Temperature				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Fuel Level				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Pre-Heat Warning				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Throttle Control				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Engine && Drive Systems\Throttle Running Data				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Hydraulics\High Flow F				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Hydraulics\High Speed Travel				✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Hydraulics\Hydraulic Temperature Sensor				✓		

Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Diagnostics\Live Data\Hydraulics\Slew Brake / Slew Lock				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\801-8065\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Read ECU Information\Vehicle && CAN\Vehicle Identification	✓				
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Beacon				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Courtesy Light				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Horn				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Lever Lock / Servo Isolator				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Redundancy				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\System Charge				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Wiper / Washer				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Electrical\Work Lights (Boom)				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Air Filter				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Auto Idle				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Auto Warm				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Emergency Stop				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Engine Oil Pressure				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Engine Running Section				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Engine Temperature				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Fuel Level				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\One Touch Idle				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Pre-Heat Warning				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Throttle Control				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Engine && Drive Systems\Throttle Running Data				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Hydraulics\Electro-proportional Hydraulic Status				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Hydraulics\Hydraulic Temperature Sensor				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Diagnostics\Live Data\Hydraulics\Swing Aux Changeover Status				✓	
Construction\Compact Excavators (Mini / Midi)\8000 Series Machines\8080-8085\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Read Fault Code\Fault Codes\DISPLAY Faults		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Read Fault Code\Fault Codes\ENGINE Faults		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Read Fault Code\Fault Codes\IMMO Faults		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Read Fault Code\Fault Codes\MECU1 Faults		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Read Fault Code\Fault Codes\MECU2 Faults		✓	✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Live Data\Electrical\Cab Switches				✓	
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\Diagnostics\Live Data\Electrical\Rotary Controller				✓	
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\High Spec\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		

Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\Low Spec\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\Low Spec\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Compact Excavators (Mini / Midi)\NXG Machines\15C-1 - 19C-1\Low Spec\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Read Fault Code\Fault Codes\DISPLAY Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Read Fault Code\Fault Codes\ENGINE Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Read Fault Code\Fault Codes\MECU1 Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Read Fault Code\Fault Codes\MECU2 Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Read Fault Code\Fault Codes\OECU Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Live Data\Electrical\Cab Switches				✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Diagnostics\Live Data\Electrical\Rotary Controller				✓		
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Compact Excavators (Mini / Midi)\NXG Machines\48Z-1 - 57C-1\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\Diagnostics\Read Fault Code\Fault Codes\Engine Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\Diagnostics\Read Fault Code\Fault Codes\MECU1 Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\Diagnostics\Read Fault Code\Fault Codes\MECU2 Faults		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Compact Excavators (Mini / Midi)\NXG Machines\65R-1 - 100C-1\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Read ECU Information\Vehicle && CAN\Vehicle Identification	✓					
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Read Fault Code\Fault Codes\Display Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Read Fault Code\Fault Codes\Machine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Read Fault Code\Fault Codes\Wheeled Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Beacon				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Horn				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Interior Light				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Lever Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Lower Wiper (Optional)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Pilot Pressure Switches				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Refueling Pump				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Head Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Alternator T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Alternator				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Brake Lights (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Brake Lights (XO)				✓		

Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Fog Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Fog/Reverse Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Hazard Warning				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Indicators				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Redundancy System T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Redundancy System				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Servo Isolator (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Servo Isolator (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Servo Isolator (X0 Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Side Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Washer (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Washer (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Wiper (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Wiper (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Work Lights Boom Cab				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Electrical\Work Lights Boom Tool Box				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Air Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Coolant Level				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Fuel Level				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Automatic Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Automatic Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Automatic Warm Up T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Automatic Warm Up				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Axle Lock (Auto Wh)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Axle Lock Automatic				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Axle Lock Manual				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Brake Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Emergency Stop T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Emergency Stop				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Engine Oil Level T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Hydraulic Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Hydraulic Fan				✓		

Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Oil Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\One Touch Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\One Touch Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Park Brake (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Park Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs) T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Three Speed Travel (JS200W)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Three Speed Travel (T3 Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Throttle Control Data (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Throttle Control Data (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Throttle Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Throttle Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Tier 3 engine sensors				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Viscous Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Engine && Drive\Viscous Fan				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\HP Immobiliser\System Diagram				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hydraulic Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Scrap Magnet				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Swing Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Swing Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Auto Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Dozer (Auto Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Dozer (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Dozer (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Dynamic Pump Control (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hammer (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hammer / Aux (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hammer / Breaker (Tracked)				✓		

Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hammer / Breaker - Full Flow				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Hammer / Breaker				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\One Touch Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Pump Control (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Pump Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Pump Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T2/T3 Diagnostics\Live Data\Vehicle && CAN\Engine Data				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read ECU Information\Vehicle && CAN\Vehicle Identification	✓					
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read ECU Information\Vehicle && CAN\Engine Data	✓					
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read Fault Code\Fault Codes\Display Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read Fault Code\Fault Codes\Machine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Read Fault Code\Fault Codes\Wheeled Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Beacon				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Horn				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Interior Light				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Lever Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Pilot Pressure Switches				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Refueling Pump				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Alternator T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Alternator				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Brake Lights (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Brake Lights (XO)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Fog Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Fog/Reverse Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Hazard Warning				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Head Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Indicators				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Redundancy System T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Redundancy System				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Servo Isolator (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Servo Isolator (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Servo Isolator (XO Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Side Lights				✓		



Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Washer (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Washer (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Wiper (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Wiper (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Work Lights Boom Cab				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Electrical\Work Lights Boom Tool Box				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Air Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Coolant Level				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Fuel Level				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Automatic Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Automatic Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Automatic Warm Up T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Automatic Warm Up				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Axle Lock (Auto Wh)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Axle Lock Automatic				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Axle Lock Manual				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Brake Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Emergency Stop T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Emergency Stop				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Engine Oil Level T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Hydraulic Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Hydraulic Fan				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Oil Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\One Touch Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\One Touch Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Park Brake (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Park Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs) T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Three Speed Travel (JS200W)				✓		

Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Three Speed Travel (T3 Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Throttle Control Data (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Throttle Control Data (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Throttle Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Throttle Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Tier 3 engine sensors				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Viscous Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Engine && Drive\Viscous Fan				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hydraulic Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Scrap Magnet				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Swing Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Swing Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Auto Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Dozer (Auto Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Dozer (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Dozer (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Dynamic Pump Control (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hammer (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hammer / Aux (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hammer / Breaker (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hammer / Breaker - Full Flow				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Hammer / Breaker				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\One Touch Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Pump Control (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Pump Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Pump Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Slew Boom Priority (JS200W)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Slew Boom Priority				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Tier 4i\T4i DPD				✓		

Construction\Excavators\AMS Machines\JS/JZ Tracked\T4i Diagnostics\Live Data\Tier 4i\T4i Data Display				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Read ECU Information\Vehicle && CAN\Vehicle Identification	✓					
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Read Fault Code\Fault Codes\Display Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Read Fault Code\Fault Codes\Machine Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Read Fault Code\Fault Codes\Wheeled Fault Codes		✓	✓			
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Beacon				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Horn				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Interior Light				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Lever Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Lower Wiper (Optional)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Pilot Pressure Switches				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Refueling Pump				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Head Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Alternator T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Alternator				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Brake Lights (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Brake Lights (XO)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Fog Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Fog/Reverse Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Hazard Warning				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Indicators				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Redundancy System T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Redundancy System				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Servo Isolator (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Servo Isolator (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Servo Isolator (XO Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Side Lights				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Washer (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Washer (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Wiper (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Wiper (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Work Lights Boom Cab				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Electrical\Work Lights Boom Tool Box				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Air Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Coolant Level				✓		

Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Fuel Level				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Automatic Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Automatic Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Automatic Warm Up T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Automatic Warm Up				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Axle Lock (Auto Wh)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Axle Lock Automatic				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Axle Lock Manual				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Brake Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Emergency Stop T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Emergency Stop				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Engine Oil Level T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Engine Oil Pressure				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Engine Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Hydraulic Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Hydraulic Fan				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Oil Filter Blocked				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\One Touch Idle T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\One Touch Idle				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Park Brake (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Park Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs) T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Preheat (Glow Plugs)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Reverse Rotation Protection				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Three Speed Travel (JS200W)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Three Speed Travel (T3 Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Three Speed Travel (Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Throttle Control Data (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Throttle Control Data (XO)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Throttle Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Throttle Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Tier 3 engine sensors				✓		

Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Viscous Fan T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Engine && Drive\Viscous Fan				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\HP Immobiliser\System Diagram				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hydraulic Temperature Sensor				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Scrap Magnet				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Swing Brake				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Swing Lock				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Auto Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Boom Lowering Speed Regulation				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Dozer (Auto Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Dozer (Auto Wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Dozer (X0)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Dynamic Pump Control (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hammer (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hammer / Aux (T3)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hammer / Breaker (Tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hammer / Breaker - Full Flow				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Hammer / Breaker				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\One Touch Power Boost				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Pump Control (Auto)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Pump Control T3				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Pump Control				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (tracked)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Hydraulics\Soft/Hard Cushion (wheeled)				✓		
Construction\Excavators\AMS Machines\JS/JZ Wheeled\Diagnostics\Live Data\Vehicle && CAN\Engine Data				✓		
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Fault Codes\DECU Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Fault Codes\WECU Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Fault Codes\WECU Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Read Fault Code\Isuzu Tier 4i/St 3b\Engine Fault Codes		✓	✓			
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Diagnostics\AUX				✓		
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Diagnostics\Fan Control				✓		
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Diagnostics\JCB Engine Ancillaries				✓		

Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Diagnostics\MTU Engine				✓	
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Diagnostics\Power Control				✓	
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Isuzu Tier 4i/St 3b\DPD And Regen Status				✓	
Construction\Excavators\DECU Machines\Vehicle Diagnostics\Live Data\Isuzu Tier 4i/St 3b\Data Display				✓	
Construction\Excavators\Excavators (Hydradig)\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Excavators\Excavators (Hydradig)\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\Display Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\IOM 1 Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\Lower ECU Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\Rotary Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Read Fault Code\Fault Codes\Upper ECU Fault Codes		✓	✓		
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\IOM #1				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\IOM #2				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\IOM #3				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\IOM #4				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\KeyPad 1 Tab				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\KeyPad 2 Tab				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\Lower ECU				✓	
Construction\Excavators\Excavators (Hydradig)\Vehicle Diagnostic\Live Data\ECU Status\Upper ECU				✓	
Construction\Excavators\X Series\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Excavators\X Series\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Aftertreatment Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Cab Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Cab Immo Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\DECU Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Engine Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\HVAC Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\High Spec Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Keypad 12 Way Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Keypad 6 Way Tracked RH Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Power Module Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Revolver Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\Rotary Faults		✓	✓		

Construction\Excavators\X Series\Vehicle Diagnostic\Read Fault Code\Fault Codes\TEAM Module Faults		✓	✓		
Construction\Excavators\X Series\Vehicle Diagnostic\Live Data\ECU State\12 Way Keypad				✓	
Construction\Excavators\X Series\Vehicle Diagnostic\Live Data\ECU State\6 Way Keypad				✓	
Construction\Excavators\X Series\Vehicle Diagnostic\Live Data\ECU State\High Spec ECU				✓	
Construction\Excavators\X Series\Vehicle Diagnostic\Live Data\ECU State\Rotary Module				✓	
Construction\Excavators\X Series\Vehicle Diagnostic\Live Data\ECU State\TEAM Module				✓	
Construction\Rough Terrain Forklifts\Tier 4 RTFL\Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Construction\Rough Terrain Forklifts\Tier 4 RTFL\Diagnostics\Read Fault Code\Fault Codes\TECU Faults		✓	✓		
Construction\Rough Terrain Forklifts\Tier 4 RTFL\Diagnostics\Live Data\Transmission\Dash				✓	
Construction\Rough Terrain Forklifts\Tier 4 RTFL\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Rough Terrain Forklifts\Tier 4 RTFL\LiveLink\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Rough Terrain Forklifts\Tier 4 RTFL\LiveLink\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Site Dumpers\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Site Dumpers\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.01 - Cluster Details	✓				
Construction\Site Dumpers\Machine Diagnostics\Read ECU Information\1 - Machine Details\1.02 - Drive Inhibit ECU Details	✓				
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Immobiliser Faults		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Cluster Faults		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Drive Inhibit ECU Faults		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Engine Faults		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.01 - All Machine Fault codes\Active Livelink Faults		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.02 - Cluster Fault codes only		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.03 - Drive Inhibit ECU Fault codes only		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.04 - Engine Fault codes only		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Read Fault Code\2 - Machine Fault codes\2.05 - Livelink Fault codes only		✓	✓		
Construction\Site Dumpers\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.02 - Seat Belt Status				✓	
Construction\Site Dumpers\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.03 - FNR Status				✓	
Construction\Site Dumpers\Machine Diagnostics\Live Data\3 - Machine Diagnostics\3.04 - Drive Inhibit ECU I/O Status				✓	
Construction\Telemasters\TM220\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓		
Construction\Telemasters\TM220\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓	
Construction\Telemasters\TM220\TM180\CWL\TMCluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Construction\Telemasters\TM220\TM180\CWL\TMCluster Diagnostics\Live Data\Cluster\Input Status				✓	
Construction\Telemasters\TM220\TM180\Hydraulic Controller Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Construction\Telemasters\TM220\TM180\ImmobiliserDiagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Telemasters\TM220\TM180\LiveLink\LiveLinkDiagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Telemasters\TM220\TM180\LiveLink\LiveLinkDiagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		

Construction\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓			
Construction\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓		
Construction\Telemasters\TM320 T4i\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓		
Construction\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓		



Construction\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Construction\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Construction\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Construction\Telemasters\TM420 Tier 4 Final\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Construction\Telemasters\TM420 Tier 4 Final\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Construction\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Construction\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Construction\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Construction\Telescopic Handlers\2007+\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Telescopic Handlers\2007+\Loadall 527 Transmission Diagnostics\Live Data\Transmission ECU\Forward/Reverse Drive				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Constant Auxiliary				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Engine Speed				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Raise/Lower				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Second Auxiliary				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Load Control				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Man Platform ECU\Man Platform System Status				✓	
Construction\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Transmission ECU 527-58\Forward/Reverse Drive				✓	
Construction\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Read ECU Information\Electronic Engine\System Diagram	✓				
Construction\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Construction\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Live Data\LLMI Unit\Calibration Status				✓	
Construction\Telescopic Handlers\525-60 Compact Loadall\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Construction\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Engine Speed				✓	

[illegible]



Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Immobiliser		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Joystick		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes LLMI		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Loadall RH Cluster		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Pump Control ECU		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes RAS ECU (T4i)		✓	✓			
Construction\Telescopic Handlers\Tier 4\Diagnostic Tools\North America (P90) Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Transmission		✓	✓			
Construction\Telescopic Handlers\Tier 4\Immobiliser Tools\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Teletruks\LPG Teletruk\Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Teletruks\LPG Teletruk\Diagnostics\Read Fault Code\Fault Codes\TECU Faults		✓	✓			
Construction\Teletruks\LPG Teletruk\Diagnostics\Live Data\Engine\Engine				✓		
Construction\Teletruks\LPG Teletruk\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Teletruks\LPG Teletruk\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			
Construction\Teletruks\Tier 4 Teletruk\Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Teletruks\Tier 4 Teletruk\Diagnostics\Read Fault Code\Fault Codes\TECU Faults		✓	✓			
Construction\Teletruks\Tier 4 Teletruk\Diagnostics\Live Data\Engine\Engine				✓		
Construction\Teletruks\Tier 4 Teletruk\Diagnostics\Live Data\Transmission\Dash				✓		
Construction\Teletruks\Tier 4 Teletruk\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Teletruks\Tier 4 Teletruk\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\Diagnostics\Read Fault Code\Fault Codes\DCU Faults		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\Diagnostics\Read Fault Code\Fault Codes\DECU Faults		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\Diagnostics\Read Fault Code\Fault Codes\Engine Faults		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\Diagnostics\Read Fault Code\Fault Codes\MECU Faults		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\Diagnostics\Live Data\Engine\Engine Ancillaries				✓		
Construction\Vibratory Compactors\Interim Tier 4\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Vibratory Compactors\Interim Tier 4\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Vibratory Compactors\Interim Tier 4\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			
Construction\Vibratory Compactors\VM116\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Vibratory Compactors\VM116\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Compact\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Compact\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓		
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWLS\CWL\TM Cluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWLS\CWL\TM Cluster Diagnostics\Live Data\Cluster\Input Status				✓		
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWLS\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWLS\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWLS\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓			

Construction\Wheeled Loading Shovels\Compact\Tier 4 CWS\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Compact\Tier 4 CWS\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓		
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Management ECU Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Live Data\427/435/437/457\Transmission				✓		
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Live Data\467\Cluster Schematic				✓		
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Live Data\467\Engine				✓		
Construction\Wheeled Loading Shovels\Global WLS\455ZX\Wheel Loader Diagnostics\Live Data\467\Transmission				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Read ECU Information\Electronic Engine\Engine Identification	✓					
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Read Fault Code\Electronic Engine\Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electrical\Alternator				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electrical\Battery				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electrical\Fuel Level				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Engine Oil Pressure (EE)				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Engine Speed and Hours				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Engine Temperatures				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Fuelling Information				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Inlet Exhaust Conditions				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Throttle Control				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Electronic Engine\Variable Fan Control (EE)				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Hydraulic\Hydraulic Oil Temp				✓		
Construction\Wheeled Loading Shovels\Large\Tier 2 and 3\Machine Diagnostics\Live Data\Transmission\Gearbox Oil Temperatures				✓		
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\LiveLink2 Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓			













Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Management ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Live Data\427/435/437/457\Transmission				✓	
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Live Data\467\Cluster Schematic				✓	
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Live Data\467\Engine				✓	
Construction\Wheeled Loading Shovels\Large\Tier 4i and 467\Wheel Loader Diagnostics\Live Data\467\Transmission				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\LiveLink2 Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\LiveLink2 Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC Keypad				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Front Display				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\High Spec Display				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\I/O Module 1				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\I/O Module 2				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\JCB Engine				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 1				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 2				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Rotary Controller				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\TECU				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		



Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\I/O Module 2				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Keypad 1				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Keypad 2				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Rotary Controller				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\TECU				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ACM Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\CPC Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MCM Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\LiveLink2 Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\LiveLink2 Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Instrument Cluster Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Management ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Transmission Fault Codes		✓	✓		

Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Engine Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Instrument Cluster Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Management ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Transmission Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Instrument Cluster Schematic				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Transmission Schematic				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Engine				✓	
Construction\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Transmission				✓	
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\LiveLink2 Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\LiveLink2 Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Instrument Cluster Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Management ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Transmission Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Engine Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Instrument Cluster Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Management ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Transmission Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Instrument Cluster Schematic				✓	
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Transmission Schematic				✓	
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Engine				✓	
Construction\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Transmission				✓	
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		







Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓		
Construction\Wheeled Loading Shovels\Medium\419S Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM220\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\CWL\TM Cluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\CWL\TM Cluster Diagnostics\Live Data\Cluster\Input Status				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\Hydraulic Controller Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\LiveLink\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\LiveLink\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		

Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Construction\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Read Fault Code\Engine 5.9L Tier 2\Fault Codes Tier 2		✓	✓		
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Read Fault Code\Engine 6.7L Tier 3\Fault Codes Tier 3		✓	✓		

Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Read Fault Code\ABS System\ABS Fault Codes		✓	✓		
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\4WS				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\General Info				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Green Slice (V)				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Saved Calibration Values				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Central Controller\Suspension				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Engine 5.9L Tier 2\T2 Engine Controls				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Engine 5.9L Tier 2\T2 Engine Management				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Engine 6.7L Tier 3\T3 Engine Controls				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\Engine 6.7L Tier 3\T3 Engine Management				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\ABS System\ABS System Test				✓	
Agricultural\Fastrac Tractors\2000-3000\Diagnostics\Live Data\ABS System\Modulators and Speed Sensors				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓				
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Read Fault Code\ABS\ABS Fault Codes		✓	✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Read Fault Code\Engine\Fault Codes		✓	✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\4WD Diff and Steering\4WD and Diff Lock				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\ABS\Brake Pedal				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\ABS\ABS System Test				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\ABS\Modulators and Speed Sensors				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\ACE\ACE				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\General Information				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Green Slice (V)				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Manual Mode				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Rear Suspension				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Central Controller\Worklights				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\EHR\EHR Draft Controller				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\EMS\Brakes				✓	
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓	

Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Engine\Engine Management				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Transmission\6x4 Calibration Values				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Transmission\Master Clutch Control				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Transmission\Power Shift Control				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Transmission\Range Control				✓		
Agricultural\Fastrac Tractors\3000 Series 2\3000 Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\4WD Diff and Steering\4WD and Diff Lock				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\General Information				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Green Slice (V)				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Rear Suspension				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Central Controller\Worklights				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\EHR\EHR Draft Controller				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\EMS\Brakes				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\6x4 Calibration Values				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\Available Gears				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\Master Clutch Control				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\Power Shift Control				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\Range Control				✓		
Agricultural\Fastrac Tractors\3000 Series 3\Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\4WD Diff and Steering\4WD and Diff Lock				✓		
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		

Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\General Information				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Green Slice (V)				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Rear Suspension				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Central Controller\Worklights				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\EHR\EHR Draft Controller				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\EMS\Brakes				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Engine\Engine Controls				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Engine\Engine Management				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\PTOs\ISO11786\ISO11786 Implement Connector				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\PTOs\ISO11786\PTOs				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\6x4 Calibration Values				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\Available Gears				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\Master Clutch Control				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\Power Shift Control				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\Range Control				✓	
Agricultural\Fastrac Tractors\3000 Series 4\Diagnostics\Live Data\Transmission\Transmission Controls				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓				
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\4WD, Diff and Steer\4WD, Diff Lock and Steering				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\4WS\AWS Control				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\ACE\ACE				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Advanced Suspension\Front Suspension				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Advanced Suspension\Rear Suspension				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Basic Suspension\Front Suspension				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Basic Suspension\Rear Suspension				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\General Information				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Green Slice (V)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Grey Slice (N)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Torsion Assist				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Central Controller\Yellow Slice (Z)				✓	
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\EHR\EHR Draft Controller				✓	

Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\EMS\Brakes				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\HVAC\Air Conditioning				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\IO Module\IO Module				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Keypad\Membrane Keypad				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Transmission\Transmission Actuator				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\4000 Series\Diagnostics\Live Data\Transport Lock\Transport Lock				✓		
Agricultural\Fastrac Tractors\4000 Series\EHFS Tool\Live Data\EHFS System\EHFS Control				✓		
Agricultural\Fastrac Tractors\4000 Series\EHFS Tool\Live Data\EHFS System\Sensors (3626)				✓		
Agricultural\Fastrac Tractors\4000 Series\EHFS Tool\Live Data\EHFS System\Sensors (DECU / TECU)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Read Fault Code\ABS\ABS Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Read Fault Code\Engine\Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\4WD Diff and Steering\4WD and Diff Lock				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\ABS\Brake Pedal				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\ABS\ABS System Test				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\ABS\Modulators and Speed Sensors				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Front Suspension				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\General Information				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Green Slice (V)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Rear Suspension				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Central Controller\Yellow Slice (Z)				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Door Locking\Door Locking				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\EHR\EHR Draft Controller				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\EMS\Brakes				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Engine\Engine Management				✓		

Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\6x4 Calibration Values				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\Available Gears				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\Master Clutch Control				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\Power Shift Control				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\Range Control				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\7000 Series\7000 Diagnostics\Live Data\mVEC\mVEC				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Read Fault Code\ABS\ABS Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Read Fault Code\Engine\Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\4WD and Diff\4WD and Diff Lock				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\ABS\Brake Pedal				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\ABS\ABS System Test				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\ABS\Modulators and Speed Sensors				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\General Information				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Green Slice (V)				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Rear Suspension				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Central Controller\Worklights				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Door Locking\Door Locking				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\EHR\EHR Draft Controller				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\EMS\Brakes				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Limp Home\Limp Home, Brakes and Steering				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Transmission\Transmission Actuator				✓		
Agricultural\Fastrac Tractors\8000 Series 3\8000 Series 3 Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\4WD, Diff and Steer\4WD, Diff Lock and Steering				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\4WD, Diff and Steer\Dual Steer and GPS				✓		

Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Basic Suspension\Rear Suspension				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\General Information				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Green Slice (V)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Grey Slice (N)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Central Controller\Yellow Slice (Z)				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\EHR\EHR Draft Controller				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\EMS\Brakes				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Engine\Engine Controls				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\HVAC\Air Conditioning				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\IO Module\IO Module				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Keypad\Membrane Keypad				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Transmission\Transmission Actuator				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Transmission\Transmission Controls				✓		
Agricultural\Fastrac Tractors\8000 Series 4\8000 Series 4 Diagnostics\Live Data\Transport Lock\Transport Lock				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Read ECU Information\Vehicle / CAN\Vehicle Identification	✓					
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Read Fault Code\ABS\ABS Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Read Fault Code\Engine\Fault Codes		✓	✓			
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\4WD and Diff\4WD and Diff Lock				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\ACE\ACE				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Brakes\Limp Home, Brakes and Steering				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Blue Slice (W)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Brown Slice (X)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Front Hitch Control (Slice U)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\General Information				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Green Slice (V)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Grey Slice (Y)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Rear Suspension				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Central Controller\Yellow Slice (Z)				✓		
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Door Locking\Door Locking				✓		



Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\EHR\EHR Draft Controller				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\EMS\Brakes				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\EMS\Indicators, Lights and Switches				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Engine\Engine Controls				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Engine\Engine Management				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\PTOs\PTOs / Implement Connector				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Transmission\Transmission Actuator				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\Transmission\Transmission Controls				✓	
Agricultural\Fastrac Tractors\8250 Series 2\8250 Series 2 Diagnostics\Live Data\mVEC\mVEC				✓	
Agricultural\Telemasters\TM220\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓	
Agricultural\Telemasters\TM220\TM180\CWL/TMCluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\TM180\CWL/TMCluster Diagnostics\Live Data\Cluster\Input Status				✓	
Agricultural\Telemasters\TM220\TM180\HydraulicController Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\TM180\ImmobiliserDiagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\TM180\LiveLink\LiveLinkDiagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Telemasters\TM220\TM180\LiveLink\LiveLinkDiagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓		
Agricultural\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓	
Agricultural\Telemasters\TM320 T4i\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	

Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Telemasters\TM420 Tier 4 Final\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Telescopic Handlers\2007+\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		

Agricultural\Telescopic Handlers\2007+\Loadall 527 Transmission Diagnostics\Live Data\Transmission ECU\Forward/Reverse Drive				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Constant Auxiliary				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Engine Speed				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Raise/Lower				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Second Auxiliary				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Hydraulics ECU\Load Control				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Man Platform ECU\Man Platform System Status				✓	
Agricultural\Telescopic Handlers\2007+\Loadall Diagnostics\Live Data\Transmission ECU 527-58\Forward/Reverse Drive				✓	
Agricultural\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Read ECU Information\Electronic Engine\System Diagram	✓				
Agricultural\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Agricultural\Telescopic Handlers\2007+\Loadall LLMI Diagnostics\Live Data\LLMI Unit\Calibration Status				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Engine Speed				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Power Brakes				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Raise/Lower				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Slave ECU Status				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes DEF System		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Engine		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Hydraulics		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Immobiliser		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Joystick		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes LLMI		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Loadall RH Cluster		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Pump Control ECU		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes RAS ECU (T4i)		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Transmission		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall LLMI Diagnostics - T4\Read ECU Information\Electronic Engine\System Diagram	✓				
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall LLMI Diagnostics - T4\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Agricultural\Telescopic Handlers\525-60 Compact Loadall\Machine Diagnostics\Loadall LLMI Diagnostics - T4\Live Data\LLMI Unit\Calibration Status				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\527-58 Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓	



Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Diagnostics\Loadall LLMi Diagnostics - T4\Read ECU Information\Electronic Engine\System Diagram	✓					
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Diagnostics\Loadall LLMi Diagnostics - T4\Read Fault Code\LLMi Unit\Active Fault Codes		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Diagnostics\Loadall LLMi Diagnostics - T4\Live Data\LLMi Unit\Calibration Status				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Engine Speed				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Power Brakes				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Raise/Lower				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Slave ECU Status				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Tilt Isolation				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Smooth Ride System				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes DEF System		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Engine		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Hydraulics		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Immobiliser		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Joystick		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes LLMi		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Loadall RH Cluster		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Pump Control ECU		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes RAS ECU (T4)		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Transmission		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall LLMi Diagnostics - T4\Read ECU Information\Electronic Engine\System Diagram	✓					
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall LLMi Diagnostics - T4\Read Fault Code\LLMi Unit\Active Fault Codes		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Loadall LLMi Diagnostics - T4\Live Data\LLMi Unit\Calibration Status				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\LUC Control				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri Plus and Super Diagnostics\Transmaster Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓					
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓			
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Live Data\Diagnostics\Calibration				✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode HMM				✓		

Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics HMM				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\DualTECH VT Transmission Diagnostics\Live Data\Diagnostics\TECU System Status HMM				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Engine Speed				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Power Brakes				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Raise/Lower				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Slave ECU Status				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes DEF System		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Engine		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Hydraulics		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Immobiliser		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Joystick		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes LLMI		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Loadall RH Cluster		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Pump Control ECU		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes RAS ECU (T4i)		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Transmission		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall LLMI Diagnostics - T4\Read ECU Information\Electronic Engine\System Diagram	✓				
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall LLMI Diagnostics - T4\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Agricultural\Telescopic Handlers\Tier 4\Diagnostic Tools\Agri-Pro Diagnostics\Loadall LLMI Diagnostics - T4\Live Data\LLMI Unit\Calibration Status				✓	
Agricultural\Telescopic Handlers\Tier 4\Immobiliser Tools\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓	
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\CWL\TM Cluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\CWL\TM Cluster Diagnostics\Live Data\Cluster\Input Status				✓	
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Compact\Tier 4 CWLS\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓	
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Management ECU Fault Codes		✓	✓		

Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Live Data\427/435/437/457\Transmission				✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Live Data\467\Cluster Schematic				✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Live Data\467\Engine				✓		
Agricultural\Wheeled Loading Shovels\Large\Large T4i\Wheel Loader Diagnostics\Live Data\467\Transmission				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Read ECU Information\Electronic Engine\Engine Identification	✓					
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Read Fault Code\Electronic Engine\Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electrical\Alternator				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electrical\Battery				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electrical\Fuel Level				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Engine Oil Pressure (EE)				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Engine Speed and Hours				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Engine Temperatures				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Fuelling Information				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Inlet Exhaust Conditions				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Throttle Control				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Electronic Engine\Variable Fan Control (EE)				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Hydraulic\Hydraulic Oil Temp				✓		
Agricultural\Wheeled Loading Shovels\Large\Large\Machine Diagnostics\Live Data\Transmission\Gearbox Oil Temperatures				✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\LiveLink2 Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓					
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓			
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC Keypad				✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\427/437/435S T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC				✓		

[illegible]









Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Keypad 2				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ACM Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\CPC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\L/O 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\L/O 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MCM Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\L/O Module 1				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\L/O Module 2				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Large\Tier 4 Final\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\LiveLink2 Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		





Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MCM Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\LiveLink2 Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Management ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Engine Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Management ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Instrument Cluster Schematic				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Transmission Schematic				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Engine				✓	
Agricultural\Wheeled Loading Shovels\Medium\411, 413, 417 Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Transmission				✓	
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\LiveLink2 Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Management ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\411, 413, 417 Tier 4i\Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Engine Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Instrument Cluster Fault Codes		✓	✓		

Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Management ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Read Fault Code\418S Tier 4i\418S Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Instrument Cluster Schematic				✓	
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\411, 413, 417 Tier 4i\Transmission Schematic				✓	
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Engine				✓	
Agricultural\Wheeled Loading Shovels\Medium\418S Tier 4i\MWLS Diagnostics\Live Data\418S Tier 4i\Transmission				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\LiveLink Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC Keypad				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\ATC				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Front Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\High Spec Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\I/O Module 1				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\I/O Module 2				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\JCB Engine				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 1				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 2				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		



[illegible]

Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Keypad 2				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\427\437\435\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ACM Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\CPC Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MCM Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓	
Agricultural\Wheeled Loading Shovels\Medium\419s Tier 4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\T3 40kph Diagnostics\Read Fault Code\Bosch Transmission Controller\Active and Previous Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\T3 40kph Diagnostics\Live Data\Bosch Transmission Controller\Shift Counter				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\CWL\TM Cluster Diagnostics\Read Fault Code\Fault Codes\Instrument Cluster Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\CWL\TM Cluster Diagnostics\Live Data\Cluster\Input Status				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\Hydraulic Controller Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\LiveLink\LiveLink Diagnostics\Read ECU Information\Livelink ECU\Critical Parameters	✓				

Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Read Fault Code\Fault Codes\Transmission Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM220\TM180\T4 40Kph Controller Diagnostics\Live Data\40KPH Transmission Controller\40kph Diagnostics				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 T4i\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 1\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	

Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM320 Tier 4 Final Mk 2\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Hydraulics Diagnostics\Read Fault Code\Fault Codes\Hydraulic Controller Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Immobiliser\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\LiveLink\LiveLink Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Read Fault Code\Fault Codes\VSFC ECU Fault Codes		✓	✓		
Agricultural\Wheeled Loading Shovels\Telemasters\TM420 Tier 4 Final\VSFC Diagnostics\Live Data\VSFC Diagnostics\Input Status				✓	
Waste\Telescopic Handlers\Tier 3\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Waste\Telescopic Handlers\Tier 3\Loadall 527 Transmission Diagnostics\Live Data\Transmission ECU\Forward/Reverse Drive				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Constant Auxiliary				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Crowd/Dump				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Engine Speed				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Raise/Lower				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Second Auxiliary				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Hydraulics ECU\Load Control				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Man Platform ECU\Man Platform System Status				✓	
Waste\Telescopic Handlers\Tier 3\Loadall Diagnostics\Live Data\Transmission ECU 527-58\Forward/Reverse Drive				✓	
Waste\Telescopic Handlers\Tier 3\Loadall LLMI Diagnostics\Read ECU Information\Electronic Engine\System Diagram	✓				
Waste\Telescopic Handlers\Tier 3\Loadall LLMI Diagnostics\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Waste\Telescopic Handlers\Tier 3\Loadall LLMI Diagnostics\Live Data\LLMI Unit\Calibration Status				✓	
Waste\Telescopic Handlers\Tier 4\Immobiliser Diagnostics\Read Fault Code\grp Immobiliser\dia Active Fault Codes		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Crowd/Dump				✓	

Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Engine Speed				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Power Brakes				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Raise/Lower				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Slave ECU Status				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Tilt Isolation				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Diagnostics - T4\Live Data\Hydraulics ECU\Smooth Ride System				✓	
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes DEF System		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Engine		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Hydraulics		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Immobiliser		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Joystick		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes LLMI		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Loadall RH Cluster		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Pump Control ECU		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes RAS ECU (T4i)		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall Fault Code Reader - T4\Read Fault Code\Active Faults\Active Fault Codes Transmission		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall LLMI Diagnostics - T4\Read ECU Information\Electronic Engine\System Diagram	✓				
Waste\Telescopic Handlers\Tier 4\Loadall LLMI Diagnostics - T4\Read Fault Code\LLMI Unit\Active Fault Codes		✓	✓		
Waste\Telescopic Handlers\Tier 4\Loadall LLMI Diagnostics - T4\Live Data\LLMI Unit\Calibration Status				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Read ECU Information\Diagnostics\ECU Setup	✓				
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Read Fault Code\Diagnostics\DM Messages		✓	✓		
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\LUC Control				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode EM				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\Solenoid Test Mode LDL				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics EM				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU Diagnostics LDL				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status EM				✓	
Waste\Telescopic Handlers\Tier 4\Transmaster Transmission Diagnostics\Live Data\Diagnostics\TECU System Status LDL				✓	
Waste\Wheeled Loading Shovels\427/437/435S T4F\LiveLink2 Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓				
Waste\Wheeled Loading Shovels\427/437/435S T4F\LiveLink2 Diagnostics\Read Fault Code\LiveLink ECU\Active Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\427/437/435S T4F\T4F Diagnostics\411/413/417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		



[illegible]

Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Rotary Controller				✓		
Waste\Wheeled Loading Shovels\427\437\435S T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\TECU				✓		
Waste\Wheeled Loading Shovels\457 T4F\LiveLink2 Diagnostics\Read ECU Information\LiveLink ECU\Critical Parameters	✓					
Waste\Wheeled Loading Shovels\457 T4F\LiveLink2 Diagnostics\Read Fault Code\Livelink ECU\Active Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\DCU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓			
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\ATC Keypad				✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\ATC				✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\Front Display				✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\High Spec Display				✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\I/O Module 1				✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411\413\417\Live Data\Tier 4 Final\I/O Module 2				✓		



Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\JCB Engine				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 1				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Keypad 2				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\Rotary Controller				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\411/413/417\Live Data\Tier 4 Final\TECU				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\L/O 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\L/O 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\ATC Keypad				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\ATC				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\Front Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\High Spec Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\L/O Module 1				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\L/O Module 2				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\Rotary Controller				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\419S\Live Data\Tier 4 Final\TECU				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\Engine Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\L/O 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\L/O 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		

Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\ATC Keypad				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\ATC				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\Cummins Engine				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\FECU Control				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\Front Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\High Spec Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\I/O Module 1				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\I/O Module 2				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\Keypad 1				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\Keypad 2				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\Rotary Controller				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\427/437/435\Live Data\Tier 4 Final\TECU				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ACM Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\ATC Keypad Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\CPC Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Front Display Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\HECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\I/O 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 1 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\KeyPad 2 Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MCM Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\MECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\Rotary Controller Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Read Fault Code\Fault Codes\TECU Fault Codes		✓	✓		
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC Keypad				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\ATC				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\BECU Control				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Front Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\High Spec Display				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 1				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\I/O Module 2				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 1 457				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\Keypad 2 457				✓	
Waste\Wheeled Loading Shovels\457 T4F\T4F Diagnostics\457\Live Data\Tier 4 Final\MTU Engine				✓	

[illegible]







Engines\430 Dieselmex Engine\430 Dieselmex Engine Setup\Injector Calibration						S0008
Engines\Kohler TCR Engine\Kohler TCR Engine Diagnostics\Kohler 3 Cyl		✓		✓	A0008, A0009, A0004	S0009
Engines\Kohler TCR Engine\Kohler TCR Engine Diagnostics\Kohler 4 Cyl		✓		✓	A0010, A0009, A0004	S0009
Engines\Kohler TCR Engine\Kohler TCR Engine Setup\Injector Calibration						S0008
Isuzu Engine	✓	✓	✓	✓	Please refer to ISUZU Function List	

Special Function Table	
S0001	High Pressure Fuel Diagnostics
S0002	Fuel System Diagnostics Test - Cranking
S0003	Fuel System Diagnostic Test - Engine Running
S0004	Fuel System Diagnostics
S0005	Aftertreatment Service Routines
S0006	Aftertreatment component initialisation
S0007	Aftertreatment Component Test
S0008	Injector Calibration
S0009	Trouble Code
S0010	Data List

Active Test Table	
A0001	Injector Test
A0002	Fuel System
A0003	Lamps and Relays
A0004	Actuator Tests
A0005	Actuator Resets
A0006	Actuator Learn
A0007	Injector Shut-Off
A0008	Kohler Injector Stop 3 Cyl
A0009	Fuel Pump Test
A0010	Kohler Injector Stop 4 Cyl