

BENZ V13.30 Function List

Note:

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Manual selection\Truck\Actros(963)	✓	✓	✓	✓		
Manual selection\Truck\Antos(963)	✓	✓	✓	✓		
Manual selection\Truck\Arocs(964)	✓	✓	✓	✓		
Manual selection\Truck\Actros(969)	✓	✓	✓	✓		
Manual selection\Truck\Atego(967)	✓	✓	✓	✓		
Manual selection\Truck\Actros(983)	✓	✓	✓	✓		
Manual selection\Truck\Actros\950.003 - 954.241(14-pin socket)\953.162	✓	✓	✓	✓		
Manual selection\Truck\Actros\950.003 - 954.241(14-pin socket)\950.306	✓	✓	✓	✓		
Manual selection\Truck\Actros\950.003 - 954.241(14-pin socket)\Actros Other	✓	✓	✓	✓		
Manual selection\Truck\Actros 2,3\ACTROS WDB930.004	✓	✓	✓	✓		
Manual selection\Truck\Actros 2,3\ACTROS WDB934.233	✓	✓	✓	✓		
Manual selection\Truck\Actros 2,3\930.003 - 938.142(16-pin socket)	✓	✓	✓	✓		
Manual selection\Truck\Actros MP II\ACTROS MP II WDB930.0 - 934.0(16-pin socket)	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\MCM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\ACM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Brake\EBS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Brake\RCM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Climate\HVAC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Climate\ITH	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Instrument\ICUC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Instrument\TCO	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\ASA	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\CDS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\CGW	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\COM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\CPC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\DCMD	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\DCMP	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\EAPU	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\EIS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\MS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\MSF	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\SAS	✓	✓	✓	✓		

Manual selection\Truck\Actros MP IV\2013\Multifunction\SCA/SSAM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\SCH	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\SRS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\TCC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\TP	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Multifunction\TPM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Gearbox\TCM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Service Light RESET (SLR)\MS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2013\Suspension\CLCS\Air suspension	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\MCM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\ACM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Brake\EB5	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Brake\RCM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Climate\HVAC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Climate\ITH	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Instrument\ICUC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Instrument\TCO	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\ASA	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\CDS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\CGW	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\COM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\CPC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\DCMD	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\DCMP	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\EAPU	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\EIS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\MS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\MSF	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\SAS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\SCA/SSAM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\SCH	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\SRS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\TCC	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\TP	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Multifunction\TPM	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Gearbox\TCM	✓	✓	✓	✓		

Manual selection\Truck\Actros MP IV\2012\Service Light RESET (SLR)\MS	✓	✓	✓	✓		
Manual selection\Truck\Actros MP IV\2012\Suspension\CLCS\Air suspension	✓	✓	✓	✓		
Manual selection\Truck\Atego	✓	✓	✓	✓		
Manual selection\Truck\Atego heavy	✓	✓	✓	✓		
Manual selection\Truck\Atego II\ATEGO WDB970-976, NAB374.4	✓	✓	✓	✓		
Manual selection\Truck\Atego II\ATEGO NMB375.1	✓	✓	✓	✓		
Manual selection\Truck\Atego II\ATEGO 9BM958.0	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\ACM	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\MCM	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Brake\EBS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Instrument\ICUC	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Instrument\TCO	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Gearbox\TCM	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\CDS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\CGW	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\COM	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\CPC	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\EAPU	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\MS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\SAS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\SRS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\TOC	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Multifunction\TP	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Service Light Reset (SLR)\MS	✓	✓	✓	✓		
Manual selection\Truck\Atego III\2013\Suspension\CLCS	✓	✓	✓	✓		
Manual selection\Truck\Atego Light\ATEGO WDB970-976, NAB374.4	✓	✓	✓	✓		
Manual selection\Truck\Atego Light\ATEGO NMB375.1	✓	✓	✓	✓		
Manual selection\Truck\Atego Light\ATEGO 9BM958.0-958.1, 9BMYAN93, 9BMYAN96, 9BMDAN96	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\MCM	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\ACM	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Brake\EBS	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Brake\RCM	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Instrument\ICUC	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Instrument\TCO	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Climate\HAVC	✓	✓	✓	✓		
Manual selection\Truck\Arocs\2013\Climate\ITH	✓	✓	✓	✓		

Manual selection\Truck\Arocs\2013\Gearbox\TCM	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\ASA	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\CDS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\CGW	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\COM	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\CPC	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\DCMD	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\DCMP	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\EAPU	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\EIS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\MS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\MSF	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\PSM	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\SAS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\SCA	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\SCH	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\SRS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\TCC	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\TP	√	√	√	√		
Manual selection\Truck\Arocs\2013\Multifunction\TPM	√	√	√	√		
Manual selection\Truck\Arocs\2013\Service Light Reset (SLR)\MS	√	√	√	√		
Manual selection\Truck\Arocs\2013\Suspension\CLCS	√	√	√	√		
Manual selection\Truck\Atron	√	√	√	√		
Manual selection\Truck\Axor\AXOR -R WDB950.5-954.6,NAB374.5	√	√	√	√		
Manual selection\Truck\Axor\AXOR -R NMB375.3	√	√	√	√		
Manual selection\Truck\Axor\AXOR -C WDB940-944,NAB374.6	√	√	√	√		
Manual selection\Truck\Axor\AXOR -C WDF940-944,NMB940-944	√	√	√	√		
Manual selection\Truck\Axor\AXOR -CI NMB375.4	√	√	√	√		
Manual selection\Truck\Axor\AXOR -C 9BM958.4	√	√	√	√		
Manual selection\Truck\Axor\AXOR -R 9BM958.2	√	√	√	√		
Manual selection\Truck\Axor II\AXOR -R WDB950.5 - 954.6,NAB374.5	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -R WDB950.5-954.6,NAB374.5	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -R NMB375.3	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -C WDB940-944,NAB374.6	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -C WDF940-944,NMB940-944	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -CI NMB375.4	√	√	√	√		
Manual selection\Truck\Axor II(374-958)\AXOR -C 9BM958.4	√	√	√	√		

Manual selection\Truck\Axor II (374-958)\AXOR -R 9EM958.2	✓	✓	✓	✓		
Manual selection\Truck\Econic(956)	✓	✓	✓	✓		
Manual selection\Truck\Econic\MANULLY\ECONIC 957.5 - 957.6	✓	✓	✓	✓		
Manual selection\Truck\LK	✓	✓	✓	✓		
Manual selection\Truck\MK	✓	✓	✓	✓		
Manual selection\Truck\SK	✓	✓	✓	✓		
Manual selection\Truck\Zetros(949.016 -949.167)	✓	✓	✓	✓		
Manual selection\Truck\Vario 512\Vario 512 WDB930.0 - 934.0(16-pin socket)	✓	✓	✓	✓		
Manual selection\Truck\14PIN Socket\ACTROS	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\Actros MP11	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\ATEGO\ATEGO WDB970-976, NAB374.4	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\ATEGO\ATEGO NMB375.1	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\ATEGO\ATEGO 9EM958.0	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\AXOR\AXOR -R WDB950.5 - 954.6, NAB374.5	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\AXOR\AXOR NMB375.3	✓	✓	✓	✓		
Manual selection\Truck\16PIN Socket\AXOR\AXOR -C WDB940-944, NAB374.6	✓	✓	✓	✓		
Manual selection\Unimog\Unimogs	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2012\Diesel\MR Engine control	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003,	S0001, S0002, S0003, S0001, S0002, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0003, S0011, S0012, S0001, S0002, S0011, S0012, S0001, S0002,
Manual selection\Unimog\Unimog 437\2012\Brake\ABS	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047	
Manual selection\Unimog\Unimog 437\2012\Gearbox\GS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2012\Gearbox\KS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2012\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2012\Multifunction\FR	✓	✓	✓	✓	A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055	S0014, S0015, S0016, S0017, S0018, S0019, S0020, S0015, S0016, S0018, S0021, S0020
Manual selection\Unimog\Unimog 437\2012\Instrument\INS	✓	✓	✓	✓		S0013
Manual selection\Unimog\Unimog 437\2011\Diesel\MR Engine control	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003,	S0001, S0002, S0003, S0001, S0002, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0003, S0011, S0012, S0001, S0002, S0011, S0012, S0001, S0002,
Manual selection\Unimog\Unimog 437\2011\Brake\ABS	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047	
Manual selection\Unimog\Unimog 437\2011\Gearbox\GS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2011\Gearbox\KS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2011\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2011\Multifunction\FR	✓	✓	✓	✓	A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055	S0014, S0015, S0016, S0017, S0018, S0019, S0020, S0015, S0016, S0018, S0021, S0020
Manual selection\Unimog\Unimog 437\2011\Instrument\INS	✓	✓	✓	✓		S0013
Manual selection\Unimog\Unimog 437\2010\Diesel\MR Engine control	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0004, A0005, A0006, A0001, A0002, A0003, A0003, A0004, A0005, A0006, A0001, A0002, A0003,	S0001, S0002, S0003, S0001, S0002, S0004, S0005, S0006, S0007, S0008, S0009, S0010, S0003, S0011, S0012, S0001, S0002, S0011, S0012, S0001, S0002,
Manual selection\Unimog\Unimog 437\2010\Brake\ABS	✓	✓	✓	✓	A0042, A0043, A0044, A0045, A0046, A0047	
Manual selection\Unimog\Unimog 437\2010\Gearbox\GS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2010\Gearbox\KS	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2010\Multifunction\PSM	✓	✓	✓	✓		
Manual selection\Unimog\Unimog 437\2010\Multifunction\FR	✓	✓	✓	✓	A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0048, A0049, A0050, A0051, A0052, A0053, A0054, A0055	S0014, S0015, S0016, S0017, S0018, S0019, S0020, S0015, S0016, S0018, S0021, S0020

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

Manual selection\Bus\16-pin socket\OC500\OC500 LF LFA	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\BR400\Setra BR400 TopClass	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\BR400\Setra BR400 ComfortClass	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\BR400\Setra BR400 MultiClass	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\BR400\Setra BR400 MultiClass (NC)	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\BR400\Setra BR400 TopClass USA	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\TOURISMO 0403\TOURISMO (C632)	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\CONECTO 0345	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\CAPACITY	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\OF\OH\OF 1724	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\OF\OH\Other	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\INDIA Bus\EDC17CV44 with urea System not correctly identified	✓	✓	✓	✓		
Manual selection\Bus\16-pin socket\INDIA Bus\EDC17CV54 with EGR system not correctly identified	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\TRAVEGO	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\INTOURO\0560 INTOURO Euro III	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\INTOURO\INTOURO (C632)	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\INTEGRO\0550 INTEGRO	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\INTEGRO\INTEGRO (C633)	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\CITARO	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\CITO	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\OC500\OC500 LF LFA	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\CONECTO 0345\Euro III single node passenger	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\CONECTO 0345\Euro III articulated bus	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR300\Setra BR300 Kombibus Euro III	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR300\BR 300 Reisebus 3 Euro III	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\S315\S315 HD China Euro III	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR400\Setra BR400 TopClass	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR400\Setra BR400 ComfortClass	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR400\Setra BR400 MultiClass	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\BR400\Setra BR400 TopClass USA	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\TOURISMO 0403\TOURISMO (C632)	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\ZAFIRO\TORINO\BOXER	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\0500RS	✓	✓	✓	✓		
Manual selection\Bus\14-pin socket\0350\0403	✓	✓	✓	✓		

Special Function Table	
S0001	Cylinder Balancing
S0002	Injection time
S0003	Reading out additional information for SCR fault codes
S0004	Test of AdBlue delivery circuit
S0005	Test of AdBlue pump

S0006	Test of SCR compressed air switching valve
S0007	Test of AdBlue tank heater solenoid valve
S0008	Check metering quantity of AdBlue metering unit
S0009	Cleaning of AdBlue metering unit
S0010	Initial startup of SCR exhaust aftertreatment system
S0011	Reset of cylinder balancing
S0012	Compression test
S0013	Read vehicle control unit list
S0014	Selected Maximum Vehicle Speed Limit
S0015	Clutch calibration with lining change
S0016	Clutch calibration without lining change
S0017	Re-learn splitter ratio.Only on models without control unit GS.
S0018	Re-learn terminal W ratio
S0019	Clutch wear check, test
S0020	Measurment of all sensors
S0021	Actuation pf clutch operator.Only on models with control unit GS.

Active Test Table	
A0001	Shut-off cylinder 1
A0002	Shut-off cylinder 2
A0003	Shut-off cylinder 3
A0004	Shut-off cylinder 4
A0005	Shut-off cylinder 5
A0006	Shut-off cylinder 6
A0007	Proportional value 1, (100%)
A0008	Proportional value 2, (100%)
A0009	Proportional value 3, (100%)
A0010	Proportional value 4, (100%)
A0011	Proportional value 5, (100%)
A0012	Proportional value 6, (100%)
A0013	Proportional value 7, (100%)
A0014	Proportional value 8, (100%)
A0015	SCR proportional value 1,100%
A0016	SCR proportional value 2,100%
A0017	SCR proportional value 3,100%
A0018	Shut-off cylinder 7
A0019	Shut-off cylinder 8
A0020	Proportional valve 1, (100%)
A0021	Proportional valve 2, (100%)
A0022	Proportional valve 3, (100%)
A0023	Proportional valve 4, (100%)
A0024	Proportional valve 5, (100%)
A0025	Proportional valve 6, (100%)
A0026	Proportional valve 7, (100%)
A0027	Proportional valve 8, (100%)
A0028	SCR Proportional valve 1,100%
A0029	SCR Proportional valve 2,100%
A0030	SCR Proportional valve 3,100%
A0031	Proportional valve 1, (100%)
A0032	Proportional valve 2, (100%)
A0033	Proportional valve 3, (100%)
A0034	Proportional valve 4, (100%)
A0035	Proportional valve 5, (100%)
A0036	Proportional valve 6, (100%)
A0037	Proportional valve 7, (100%)
A0038	Proportional valve 8, (100%)
A0039	SCRProportional valve 1,100%
A0040	SCRProportional valve 2,100%
A0041	SCRProportional valve 3,100%
A0042	ABS solenoid valve with roller dynamometer
A0043	ABS solenoid valve without roller dynamometer
A0044	Rpm sensors without roller dynamometer
A0045	Rpm sensors at the front axle with roller dynamometer
A0046	Rpm sensors at the rear axle with roller dynamometer
A0047	Actuation of relay 'Lock shutoff' (K2/K9)
A0048	Constant throttle
A0049	Engine brake
A0050	Split low
A0051	Split high
A0052	D+ relay
A0053	Brake light relay
A0054	Reversing light relay
A0055	Engine oil replenishment relay