

# FUSO V14.95 Function List

**Note:**

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Australia\Automatic selection	✓	✓	✓	✓	Auto Scan	
Australia\Manual selection\Canter\ABS - Antilock brake system Control unit (A1)	✓	✓	✓	✓		
Australia\Manual selection\Canter\EEC - Engine Control unit (A4)	✓	✓	✓	✓	A0616, A0617	S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056, S0057, S0058
Australia\Manual selection\Canter\EZGO - Hill Start Assist Control unit (A2)	✓	✓	✓	✓		
Australia\Manual selection\Canter\HLAL - Control unit 'Automatic headlamp adjustment' (A6)	✓	✓	✓	✓	A0497	S0015, S0017
Australia\Manual selection\Canter\HVAC - Control and operating unit 'Automatic air conditioning' (A7)	✓	✓	✓	✓	A0498, A0499, A0500, A0501, A0502	
Australia\Manual selection\Canter\ICUC - Instrument panel (A11)	✓	✓	✓	✓	A0495	S0015
Australia\Manual selection\Canter\IMMO - Immobilizer Control unit (A12)	✓	✓	✓	✓	A0496	
Australia\Manual selection\Canter\ISS - Automatic engine start/stop Control unit (A13)	✓	✓	✓	✓	A0503, A0504, A0505, A0506, A0507, A0508, A0509, A0510	S0018, S0016
Australia\Manual selection\Canter\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Canter\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Canter\SRS - Supplemental restraint systemControl unit (A25)	✓	✓	✓			
Australia\Manual selection\Canter\SSAM - Single signal acquisition and actuation module (A20)	✓	✓	✓	✓	A0511, A0512, A0513, A0514	S0015
Australia\Manual selection\Canter\TCM - DUONIC Control unit (A28)	✓	✓	✓	✓	A0482, A0483, A0484, A0485, A0486, A0487, A0488, A0489, A0490, A0491, A0492, A0493, A0494	S0015, S0016, S0017, S0017, S0017, S0017
Australia\Manual selection\Canter\VRDU - Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\ABS - Antilock brake system Control unit (A1)	✓	✓	✓	✓	A0630, A0631	
Australia\Manual selection\Canter(20MODEL)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Canter(20MODEL)\EEC - Engine Control unit (A4)	✓	✓	✓	✓	A0616, A0617	S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056, S0057, S0058
Australia\Manual selection\Canter(20MODEL)\EEC2 - Engine Control unit For Euro VI Step-E only (A4)	✓	✓	✓	✓	A0618, A0619, A0620, A0621	
Australia\Manual selection\Canter(20MODEL)\EZGO - Hill Start Assist Control unit (A2)	✓	✓	✓	✓	A0632, A0633, A0634, A0635, A0636, A0637, A0638	
Australia\Manual selection\Canter(20MODEL)\HLAL - Control unit 'Automatic headlamp adjustment' (A6)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\HVAC - Control and operating unit 'Automatic air conditioning' (A7)	✓	✓	✓	✓	A0498, A0499, A0500, A0501, A0502	
Australia\Manual selection\Canter(20MODEL)\ICUC - Instrument panel (A11)	✓	✓	✓	✓	A0495	
Australia\Manual selection\Canter(20MODEL)\IMMO - Immobilizer Control unit (A12)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\ISS - Automatic engine start/stop Control unit (A13)	✓	✓	✓	✓	A0503, A0504, A0505, A0506, A0507, A0508, A0509, A0510	
Australia\Manual selection\Canter(20MODEL)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\SRR - Short range radar (A81)	✓	✓	✓	✓		
Australia\Manual selection\Canter(20MODEL)\SRS - Supplemental restraint systemControl unit (A25)	✓	✓	✓			
Australia\Manual selection\Canter(20MODEL)\SSAM - Single signal acquisition and actuation module (A20)	✓	✓	✓	✓	A0511, A0512, A0513, A0514	
Australia\Manual selection\Canter(20MODEL)\TCM - DUONIC Control unit (A28)	✓	✓	✓	✓	A0622, A0623, A0624, A0625, A0626, A0627, A0628, A0629	
Australia\Manual selection\Canter(20MODEL)\VRDU - Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Power transmission\Engine control module\Euro 2	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021,	

Australia\Manual selection\Fighter\Power transmission\Engine control module\Euro 3	✓	✓	✓	✓	A0098, A0099, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112, A0096, A0097, A0113, A0114, A0115, A0116,	S0001, S0002, S0002, S0001, S0003, S0004, S0001
Australia\Manual selection\Fighter\Power transmission\Engine control module\Euro 4	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0003, S0011, S0001,
Australia\Manual selection\Fighter\Power transmission\Engine control module\Euro 5	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0003, S0011, S0001,
Australia\Manual selection\Fighter\Power transmission\Transmission control module	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Power transmission\ISS (Idling Stop and Start System)	✓	✓	✓	✓	A0526, A0110, A0527, A0528, A0529, A0530, A0531, A0532	
Australia\Manual selection\Fighter\Power transmission\Integrated control	✓	✓	✓	✓	A0296, A0297, A0298, A0299, A0300, A0301	
Australia\Manual selection\Fighter\Power transmission\Motor control	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Power transmission\Battery control	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Power transmission\BlueTec/SCR (Selective Catalytic Reduction)	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Power transmission\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0515, A0516	S0019
Australia\Manual selection\Fighter\Chassis\Anti-lock braking system	✓	✓	✓	✓	A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322,	S0014
Australia\Manual selection\Fighter\Chassis\EZGO (WHEEL BRAKE SPECIAL SYSTEM)	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Chassis\MBECS (Motor vehicle Brake Energy Conservation System)	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Chassis\Retarder	✓	✓	✓	✓		S0044
Australia\Manual selection\Fighter\Car body\Immobilizer	✓	✓	✓	✓	A0480, A0481	
Australia\Manual selection\Fighter\Car body\SRS Airbag	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Car body\SWS (Smart Writing System)	✓	✓	✓	✓		
Australia\Manual selection\Fighter\Car body\Headlamp Auto-Leveling	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\ABS - Antilock brake system (A10e)	✓	✓	✓	✓		S0070
Australia\Manual selection\Fighter(19MODEL)\ACM - AdBlue exhaust aftertreatment unit (DCU) (A60)	✓	✓	✓	✓	A0702, A0703, A0704, A0705, A0706, A0707, A0708, A0709, A0710	S0074, S0075, S0099, S0076
Australia\Manual selection\Fighter(19MODEL)\ASAM - Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		S0071, S0072, S0073
Australia\Manual selection\Fighter(19MODEL)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Fighter(19MODEL)\ECMB - Combustion engine Control unit (4V20) (A4)	✓	✓	✓	✓	A0662, A0663, A0664, A0665, A0666, A0667, A0668, A0669, A0670, A0671, A0647, A0672, A0673, A0674	S0074, S0075, S0076
Australia\Manual selection\Fighter(19MODEL)\ECMD - Combustion engine Control unit (6M60) (A4)	✓	✓	✓	✓	A0675, A0676, A0677, A0678, A0679, A0680, A0681, A0682, A0683	S0077, S0078, S0079, S0080, S0081
Australia\Manual selection\Fighter(19MODEL)\FMSGW - Fleet management system (FMS) Gateway (X0289)	✓	✓	✓			
Australia\Manual selection\Fighter(19MODEL)\HLAL - Control unit 'Automatic headlamp adjustment' (A6)	✓	✓	✓	✓	A0684	S0082
Australia\Manual selection\Fighter(19MODEL)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0689	S0083, S0084
Australia\Manual selection\Fighter(19MODEL)\IMMO - Immobilizer Control unit (A12)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\MPC2 - Multifunction camera 2 (A84)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL)\SRRL - Short range radar Left (A148.1)	✓	✓	✓	✓		

Australia\Manual selection\Fighter(19MODEL~)\SRR – Short range radar (A81)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL~)\SRS – Supplemental restraint system (A40)	✓	✓	✓			
Australia\Manual selection\Fighter(19MODEL~)\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL~)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\Fighter(19MODEL~)\XMC – SAM with additional functions (A22)	✓	✓	✓	✓		
Australia\Manual selection\Super Great\MCM	✓	✓	✓			
Australia\Manual selection\Super Great\CPC	✓	✓	✓	✓	A0517	
Australia\Manual selection\Super Great\Transmission	✓	✓	✓	✓		
Australia\Manual selection\Super Great\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0515, A0516	S0019
Australia\Manual selection\Super Great\ABS	✓	✓	✓	✓	A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0324, A0325, A0326, A0327, A0328, A0329, A0334, A0335, A0330, A0331, A0336,	
Australia\Manual selection\Super Great\Retarder	✓	✓	✓	✓		S0044
Australia\Manual selection\Super Great(17MODEL~)\CGW – Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\ACM2.1 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\CLCS – Level control (A26)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\CPC3 – Common powertrain controller (A3)	✓	✓	✓	✓	A0517	
Australia\Manual selection\Super Great(17MODEL~)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Super Great(17MODEL~)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓	A0522, A0523, A0524, A0525, A0533, A0534	S0042, S0043, S0019
Australia\Manual selection\Super Great(17MODEL~)\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\RCM – Retarder (A11)	✓	✓	✓	✓		S0044
Australia\Manual selection\Super Great(17MODEL~)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\SRRL – Short range radar Left (A148.1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\SSAM – Single signal acquisition and actuation module (A7a)	✓	✓	✓			
Australia\Manual selection\Super Great(17MODEL~)\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\TCM – Transmission control (A5)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\TPM – Tire pressure monitor (A35)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(17MODEL~)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\Super Great(19.5MODEL~)\CGW – Central gateway (A2)	✓	✓	✓	✓		

Australia\Manual selection\Super Great (19.5MODEL)\ACM2.1 - BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\AP3 - Adaptive power steering (A73)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\ASAM - Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Australia\Manual selection\Super Great (19.5MODEL)\CLCS - Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Australia\Manual selection\Super Great (19.5MODEL)\CPC5 - Common powertrain controller 5 (A3)	✓	✓	✓			
Australia\Manual selection\Super Great (19.5MODEL)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Super Great (19.5MODEL)\DAGW - ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\EAPU - Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\EBS - Electronic brake system (A10b)	✓	✓	✓	✓		S0070
Australia\Manual selection\Super Great (19.5MODEL)\EIS - Electronic ignition lock (S1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Australia\Manual selection\Super Great (19.5MODEL)\PPC - Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\MCM2.1 - Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Australia\Manual selection\Super Great (19.5MODEL)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\MPC2 - Multifunction camera 2 (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\RCM - Retarder (A11)	✓	✓	✓	✓		S0044
Australia\Manual selection\Super Great (19.5MODEL)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\SRRL - Short range radar Left (A148.1)	✓	✓	✓	✓		S0091
Australia\Manual selection\Super Great (19.5MODEL)\TCC - Truck Control Center (A9)	✓	✓	✓	✓	A0689	
Australia\Manual selection\Super Great (19.5MODEL)\TCM - Transmission control (A5)	✓	✓	✓	✓		
Australia\Manual selection\Super Great (19.5MODEL)\TPM - Tire pressure monitor (A35)	✓	✓	✓			
Australia\Manual selection\Super Great (19.5MODEL)\VRDU - Driver assistance system (A53a)	✓	✓	✓			S0092
Australia\Manual selection\Super Great (19.5MODEL)\XMC - SAM with additional functions (A22)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\ACM3 - BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		S0093, S0094, S0095, S0096, S0097, S0098
Australia\Manual selection\Super Great 21M(MT)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Australia\Manual selection\Super Great 21M(MT)\CLCS - Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Australia\Manual selection\Super Great 21M(MT)\CPC3 - Common powertrain controller (A3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(MT)\DAGW - ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\EAPU - Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\EBS - Electronic brake system (A10b)	✓	✓	✓	✓		S0070
Australia\Manual selection\Super Great 21M(MT)\EIS - Electronic ignition lock (S1)	✓	✓	✓	✓		

Australia\Manual selection\Super Great 21M(MT)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Australia\Manual selection\Super Great 21M(MT)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Australia\Manual selection\Super Great 21M(MT)\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\PSM – Parameterizable special module (A22)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(MT)\SRRL – Short range radar Left (A148.1)	✓	✓	✓	✓		S0091
Australia\Manual selection\Super Great 21M(MT)\SSAM – Single signal acquisition and actuation module (A7a)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(MT)\TCC – Truck Control Center (A9)	✓	✓	✓	✓	A0689	
Australia\Manual selection\Super Great 21M(MT)\TPM – Tire pressure monitor (A35)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(MT)\VRDU – Driver assistance system (A53a)	✓	✓	✓			S0092
Australia\Manual selection\Super Great 21M(6S)\CGW – Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\ACM2.1 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\APS3 – Adaptive power steering (A73)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\ASAM – Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Australia\Manual selection\Super Great 21M(6S)\CLCS – Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Australia\Manual selection\Super Great 21M(6S)\CPC5 – Common powertrain controller 5 (A3)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(6S)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(6S)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		S0070
Australia\Manual selection\Super Great 21M(6S)\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Australia\Manual selection\Super Great 21M(6S)\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Australia\Manual selection\Super Great 21M(6S)\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\MPC2 – Multifunction camera 2 (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\SRR – Short range radar (A81)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\TCC – Truck Control Center (A9)	✓	✓	✓	✓	A0689	
Australia\Manual selection\Super Great 21M(6S)\TCM – Transmission control (A5)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6S)\TPM – Tire pressure monitor (A35)	✓	✓	✓			

Australia\Manual selection\Super Great 21M(6S)\VRDU – Driver assistance system (A53a)	✓	✓	✓			S0092
Australia\Manual selection\Super Great 21M(6S)\XMC – SAM with additional functions (A22)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\CGW – Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\ACM3 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\APS3 – Adaptive power steering (A73)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\ASAM – Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\CLCS – Level control (A26)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\CPC5 – Common powertrain controller 5 (A3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(6R)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\MPC2 – Multifunction camera 2 (A84)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\RCM – Retarder (A11)	✓	✓	✓			
Australia\Manual selection\Super Great 21M(6R)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\SRR – Short range radar (A81)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\TCM – Transmission control (A5)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\TPM – Tire pressure monitor (A35)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\Super Great 21M(6R)\XMC – SAM with additional functions (A22)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\CGW – Central gateway (A2)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\ACM3 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\APS3 – Adaptive power steering (A73)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\ASAM – Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\CLCS – Level control (A26)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\CPC5 – Common powertrain controller 5 (A3)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\CTP – Common Telematics Platform (A150)	✓	✓	✓			

Australia\Manual selection\SHOGUN\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\MPC2 – Multifunction camera 2 (A84)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\PDF – Radar sensor (A15)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\RCM – Retarder (A11)	✓	✓	✓			
Australia\Manual selection\SHOGUN\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\SRR – Short range radar (A81)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\TCM – Transmission control (A5)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\TPM – Tire pressure monitor (A35)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Australia\Manual selection\SHOGUN\XMC – SAM with additional functions (A22)	✓	✓	✓	✓		
Australia\Manual selection\ROSA\ABS-Antilock brake system Control unit	✓	✓	✓	✓	A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0324, A0325, A0326, A0327, A0328, A0329, A0334, A0335, A0330, A0331, A0336,	
Australia\Manual selection\ROSA\CTP-Common Telematics Platform	✓	✓	✓			
Australia\Manual selection\ROSA\EEC-Combustion engine Control unit	✓	✓	✓	✓	A0616, A0639, A0640, A0641, A0642, A0643, A0644, A0645, A0646, A0647, A0648, A0649, A0650, A0651, A0109, A0110, A0652, A0653, A0654, A0655, A0656,	S0032, S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0063, S0064, S0065, S0056, S0057, S0066, S0067, S0068, S0069
Australia\Manual selection\ROSA\EZGO-Hill Start Assist Control unit	✓	✓	✓	✓		
Australia\Manual selection\ROSA\ICUC-Instrument panel	✓	✓	✓	✓	A0495	
Australia\Manual selection\ROSA\ISS-Automatic engine start/stop Control unit	✓	✓	✓	✓		
Australia\Manual selection\ROSA\MPC – Multifunction camera	✓	✓	✓	✓		
Australia\Manual selection\ROSA\PDF-Radar sensor	✓	✓	✓	✓		
Australia\Manual selection\ROSA\SRS-Supplemental restraint system	✓	✓	✓			
Australia\Manual selection\ROSA\SSAM-Signal Actuator Module	✓	✓	✓	✓		
Australia\Manual selection\ROSA\TCM-DUONIC Control unit	✓	✓	✓	✓		
Australia\Manual selection\ROSA\VRDU-Driver assistance system	✓	✓	✓	✓		
Universal Area\Canter\ABS – Antilock brake system Control unit (A1)	✓	✓	✓	✓		
Universal Area\Canter\EEC – Engine Control unit (A4)	✓	✓	✓	✓	A0616, A0617	S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056, S0057, S0058
Universal Area\Canter\EZGO – Hill Start Assist Control unit (A2)	✓	✓	✓	✓		
Universal Area\Canter\HLAL – Control unit ‘Automatic headlamp adjustment’ (A6)	✓	✓	✓	✓	A0497	S0015, S0017
Universal Area\Canter\HVAC – Control and operating unit ‘Automatic air conditioning’ (A7)	✓	✓	✓	✓	A0498, A0499, A0500, A0501, A0502	
Universal Area\Canter\ICUC – Instrument panel (A11)	✓	✓	✓	✓	A0495	S0015

Universal Area\Canter\IMMO – Immobilizer Control unit (A12)	✓	✓	✓	✓	A0496	
Universal Area\Canter\ISS – Automatic engine start/stop Control unit (A13)	✓	✓	✓	✓	A0503, A0504, A0505, A0506, A0507, A0508, A0509, A0510	S0018, S0016
Universal Area\Canter\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Canter\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Canter\SRS – Supplemental restraint systemControl unit (A25)	✓	✓	✓			
Universal Area\Canter\SSAM – Single signal acquisition and actuation module (A20)	✓	✓	✓	✓	A0511, A0512, A0513, A0514	S0015
Universal Area\Canter\TCM – DUONIC Control unit (A28)	✓	✓	✓	✓	A0482, A0483, A0484, A0485, A0486, A0487, A0488, A0489, A0490, A0491, A0492, A0493, A0494	S0015, S0016, S0017, S0017, S0017, S0017
Universal Area\Canter\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\ABS – Antilock brake system Control unit (A1)	✓	✓	✓	✓	A0630, A0631	
Universal Area\Canter(20MODEL)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Canter(20MODEL)\EEC – Engine Control unit (A4)	✓	✓	✓	✓	A0616, A0617	S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056, S0057, S0058
Universal Area\Canter(20MODEL)\EEC2 – Engine Control unit For Euro VI Step-E only (A4)	✓	✓	✓	✓	A0618, A0619, A0620, A0621	
Universal Area\Canter(20MODEL)\EZGO – Hill Start Assist Control unit (A2)	✓	✓	✓	✓	A0632, A0633, A0634, A0635, A0636, A0637, A0638	
Universal Area\Canter(20MODEL)\HLAL – Control unit ‘Automatic headlamp adjustment’ (A6)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\HVAC – Control and operating unit ‘Automatic air conditioning’ (A7)	✓	✓	✓	✓	A0498, A0499, A0500, A0501, A0502	
Universal Area\Canter(20MODEL)\ICUC – Instrument panel (A11)	✓	✓	✓	✓	A0495	
Universal Area\Canter(20MODEL)\IMMO – Immobilizer Control unit (A12)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\ISS – Automatic engine start/stop Control unit (A13)	✓	✓	✓	✓	A0503, A0504, A0505, A0506, A0507, A0508, A0509, A0510	
Universal Area\Canter(20MODEL)\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\SRR – Short range radar (A81)	✓	✓	✓	✓		
Universal Area\Canter(20MODEL)\SRS – Supplemental restraint systemControl unit (A25)	✓	✓	✓			
Universal Area\Canter(20MODEL)\SSAM – Single signal acquisition and actuation module (A20)	✓	✓	✓	✓	A0511, A0512, A0513, A0514	
Universal Area\Canter(20MODEL)\TCM – DUONIC Control unit (A28)	✓	✓	✓	✓	A0622, A0623, A0624, A0625, A0626, A0627, A0628, A0629	
Universal Area\Canter(20MODEL)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\Fighter\Power transmission\Engine control module\Euro 2	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021,	
Universal Area\Fighter\Power transmission\Engine control module\Euro 3	✓	✓	✓	✓	A0098, A0099, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112, A0096, A0097, A0113, A0114, A0115, A0116,	S0001, S0002, S0002, S0001, S0003, S0004, S0001
Universal Area\Fighter\Power transmission\Engine control module\Euro 4	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0003, S0011, S0001,
Universal Area\Fighter\Power transmission\Engine control module\Euro 5	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0003, S0011, S0001,
Universal Area\Fighter\Power transmission\Transmission control module	✓	✓	✓	✓		
Universal Area\Fighter\Power transmission\ISS (Idling Stop and Start System)	✓	✓	✓	✓	A0526, A0110, A0527, A0528, A0529, A0530, A0531, A0532	
Universal Area\Fighter\Power transmission\Integrated control	✓	✓	✓	✓	A0296, A0297, A0298, A0299, A0300, A0301	
Universal Area\Fighter\Power transmission\Motor control	✓	✓	✓	✓		
Universal Area\Fighter\Power transmission\Battery control	✓	✓	✓	✓		
Universal Area\Fighter\Power transmission\BlueTec/SCR (Selective Catalytic Reduction)	✓	✓	✓	✓		
Universal Area\Fighter\Power transmission\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0515, A0516	S0019



Universal Area\Fighter\Chassis\Anti-lock braking system	✓	✓	✓	✓	A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322,	S0014
Universal Area\Fighter\Chassis\EZGO (WHEEL BRAKE SPECIAL SYSTEM)	✓	✓	✓	✓		
Universal Area\Fighter\Chassis\MBECS (Moter vehicle Brake Energy Conservation System)	✓	✓	✓	✓		
Universal Area\Fighter\Chassis\Retarder	✓	✓	✓	✓		S0044
Universal Area\Fighter\Car body\Immobilizer	✓	✓	✓	✓	A0480, A0481	
Universal Area\Fighter\Car body\SRS Airbag	✓	✓	✓	✓		
Universal Area\Fighter\Car body\SWS (Smart Writing System)	✓	✓	✓	✓		
Universal Area\Fighter\Car body\Headlamp Auto-Leveling	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\ABS - Antilock brake system (A10e)	✓	✓	✓	✓		S0070
Universal Area\Fighter(19MODEL)\ACM - AdBlue exhaust aftertreatment unit (DCU) (A60)	✓	✓	✓	✓	A0702, A0703, A0704, A0705, A0706, A0707, A0708, A0709, A0710	S0074, S0075, S0099, S0076
Universal Area\Fighter(19MODEL)\ASAM - Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		S0071, S0072, S0073
Universal Area\Fighter(19MODEL)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Fighter(19MODEL)\ECMB - Combustion engine Control unit (4V20) (A4)	✓	✓	✓	✓	A0662, A0663, A0664, A0665, A0666, A0667, A0668, A0669, A0670, A0671, A0647, A0672, A0673, A0674	S0074, S0075, S0076
Universal Area\Fighter(19MODEL)\ECMD - Combustion engine Control unit (6M60) (A4)	✓	✓	✓	✓	A0675, A0676, A0677, A0678, A0679, A0680, A0681, A0682, A0683	S0077, S0078, S0079, S0080, S0081
Universal Area\Fighter(19MODEL)\FMSGW - Fleet management system (FMS) Gateway (X0289)	✓	✓	✓			
Universal Area\Fighter(19MODEL)\HLAL - Control unit 'Automatic headlamp adjustment' (A6)	✓	✓	✓	✓	A0684	S0082
Universal Area\Fighter(19MODEL)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0689	S0083, S0084
Universal Area\Fighter(19MODEL)\IMMO - Immobilizer Control unit (A12)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\MPC2 - Multifunction camera 2 (A84)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\SRRL - Short range radar Left (A148.1)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\SRR - Short range radar (A81)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\SRS - Supplemental restraint system (A40)	✓	✓	✓			
Universal Area\Fighter(19MODEL)\TCC - Truck Control Center (A9)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\VRDU - Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\Fighter(19MODEL)\XMC - SAM with additional functions (A22)	✓	✓	✓	✓		
Universal Area\Super Great\MCM	✓	✓	✓			
Universal Area\Super Great\CPC	✓	✓	✓	✓	A0517	
Universal Area\Super Great\Transmission	✓	✓	✓	✓		
Universal Area\Super Great\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓	A0515, A0516	S0019
Universal Area\Super Great\ABS	✓	✓	✓	✓	A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322,	S0014

Universal Area\Super Great\Retarder	✓	✓	✓	✓		S0044
Universal Area\Super Great(17MODEL~)\CGW – Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\ACM2.1 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\CLCS – Level control (A26)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\CPC3 – Common powertrain controller (A3)	✓	✓	✓	✓	A0517	
Universal Area\Super Great(17MODEL~)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Super Great(17MODEL~)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓	A0522, A0523, A0524, A0525, A0533, A0534	S0042, S0043, S0019
Universal Area\Super Great(17MODEL~)\MPC – Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\RCM – Retarder (A11)	✓	✓	✓	✓		S0044
Universal Area\Super Great(17MODEL~)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\SRRL – Short range radar Left (A148.1)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\SSAM – Single signal acquisition and actuation module (A7a)	✓	✓	✓			
Universal Area\Super Great(17MODEL~)\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\TCM – Transmission control (A5)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\TPM – Tire pressure monitor (A35)	✓	✓	✓	✓		
Universal Area\Super Great(17MODEL~)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\CGW – Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\ACM2.1 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\APS3 – Adaptive power steering (A73)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\ASAM – Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Universal Area\Super Great(19.5MODEL~)\CLCS – Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Universal Area\Super Great(19.5MODEL~)\CPC5 – Common powertrain controller 5 (A3)	✓	✓	✓			
Universal Area\Super Great(19.5MODEL~)\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Super Great(19.5MODEL~)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL~)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		S0070

Universal Area\Super Great(19.5MODEL)\EIS - Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Universal Area\Super Great(19.5MODEL)\PPC - Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\MCM2.1 - Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Universal Area\Super Great(19.5MODEL)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\MPC2 - Multifunction camera 2 (A84)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\RCM - Retarder (A11)	✓	✓	✓	✓		S0044
Universal Area\Super Great(19.5MODEL)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\SRRL - Short range radar Left (A148.1)	✓	✓	✓	✓		S0091
Universal Area\Super Great(19.5MODEL)\TCC - Truck Control Center (A9)	✓	✓	✓	✓	A0689	
Universal Area\Super Great(19.5MODEL)\TCM - Transmission control (A5)	✓	✓	✓	✓		
Universal Area\Super Great(19.5MODEL)\TPM - Tire pressure monitor (A35)	✓	✓	✓			
Universal Area\Super Great(19.5MODEL)\VRDU - Driver assistance system (A53a)	✓	✓	✓			S0092
Universal Area\Super Great(19.5MODEL)\XMC - SAM with additional functions (A22)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\ACM3 - BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		S0093, S0094, S0095, S0096, S0097, S0098
Universal Area\Super Great 21M(MT)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Universal Area\Super Great 21M(MT)\CLCS - Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Universal Area\Super Great 21M(MT)\CPC3 - Common powertrain controller (A3)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Super Great 21M(MT)\DAGW - ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\EAPU - Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\EBS - Electronic brake system (A10b)	✓	✓	✓	✓		S0070
Universal Area\Super Great 21M(MT)\EIS - Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Universal Area\Super Great 21M(MT)\MCM2.1 - Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Universal Area\Super Great 21M(MT)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\PSM - Parameterizable special module (A22)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Super Great 21M(MT)\SRRL - Short range radar Left (A148.1)	✓	✓	✓	✓		S0091
Universal Area\Super Great 21M(MT)\SSAM - Single signal acquisition and actuation module (A7a)	✓	✓	✓			
Universal Area\Super Great 21M(MT)\TCC - Truck Control Center (A9)	✓	✓	✓	✓	A0689	

Universal Area\Super Great 21M(MT)\TPM - Tire pressure monitor (A35)	✓	✓	✓			
Universal Area\Super Great 21M(MT)\VRDU - Driver assistance system (A53a)	✓	✓	✓			S0092
Universal Area\Super Great 21M(6S)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\ACM2.1 - BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\APS3 - Adaptive power steering (A73)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\ASAM - Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		S0019
Universal Area\Super Great 21M(6S)\CLCS - Level control (A26)	✓	✓	✓	✓	A0690, A0691, A0692, A0693	
Universal Area\Super Great 21M(6S)\CPC5 - Common powertrain controller 5 (A3)	✓	✓	✓			
Universal Area\Super Great 21M(6S)\CTP - Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\Super Great 21M(6S)\DAGW - ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\EAPU - Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\EBS - Electronic brake system (A10b)	✓	✓	✓	✓		S0070
Universal Area\Super Great 21M(6S)\EIS - Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\ICUC - Instrument cluster (A1)	✓	✓	✓	✓	A0685, A0686, A0687, A0688, A0694	S0085, S0084
Universal Area\Super Great 21M(6S)\PPC - Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\MCM2.1 - Motor Control Module (A4)	✓	✓	✓	✓	A0518, A0695, A0696, A0697, A0698, A0699, A0700, A0701	S0086, S0087, S0088, S0089, S0090
Universal Area\Super Great 21M(6S)\MPC - Multifunction camera (A84)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\MPC2 - Multifunction camera 2 (A84)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\MS - Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\RDF - Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\SRR - Short range radar (A81)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\TCC - Truck Control Center (A9)	✓	✓	✓	✓	A0689	
Universal Area\Super Great 21M(6S)\TCM - Transmission control (A5)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6S)\TPM - Tire pressure monitor (A35)	✓	✓	✓			
Universal Area\Super Great 21M(6S)\VRDU - Driver assistance system (A53a)	✓	✓	✓			S0092
Universal Area\Super Great 21M(6S)\XMC - SAM with additional functions (A22)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\CGW - Central gateway (A2)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\ACM3 - BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\APS3 - Adaptive power steering (A73)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\ASAM - Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\CDS - Central data memory (A2 a1)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\CLCS - Level control (A26)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\CPC5 - Common powertrain controller 5 (A3)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\CTP - Common Telematics Platform (A150)	✓	✓	✓			

Universal Area\Super Great 21M(6R)\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\MPC2 – Multifunction camera 2 (A84)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\RDF – Radar sensor (A15)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\RCM – Retarder (A11)	✓	✓	✓			
Universal Area\Super Great 21M(6R)\SAS – Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\SRR – Short range radar (A81)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\TCC – Truck Control Center (A9)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\TCM – Transmission control (A5)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\TPM – Tire pressure monitor (A35)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\VRDU – Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\Super Great 21M(6R)\XMC – SAM with additional functions (A22)	✓	✓	✓	✓		
Universal Area\SHOGUN\CGW – Central gateway (A2)	✓	✓	✓	✓		
Universal Area\SHOGUN\ACM3 – BlueTec Aftertreatment system ECU (A60)	✓	✓	✓	✓		
Universal Area\SHOGUN\APS3 – Adaptive power steering (A73)	✓	✓	✓	✓		
Universal Area\SHOGUN\ASAM – Advanced signal acquisition and actuation module (A7)	✓	✓	✓	✓		
Universal Area\SHOGUN\CDS – Central data memory (A2 a1)	✓	✓	✓	✓		
Universal Area\SHOGUN\CLCS – Level control (A26)	✓	✓	✓	✓		
Universal Area\SHOGUN\CPC5 – Common powertrain controller 5 (A3)	✓	✓	✓	✓		
Universal Area\SHOGUN\CTP – Common Telematics Platform (A150)	✓	✓	✓			
Universal Area\SHOGUN\DAGW – ACTIVE ATTENTION ASSIST System (A37)	✓	✓	✓	✓		
Universal Area\SHOGUN\EAPU – Electronic Air-Processing Unit (A18)	✓	✓	✓	✓		
Universal Area\SHOGUN\EBS – Electronic brake system (A10b)	✓	✓	✓	✓		
Universal Area\SHOGUN\EIS – Electronic ignition lock (S1)	✓	✓	✓	✓		
Universal Area\SHOGUN\ICUC – Instrument cluster (A1)	✓	✓	✓	✓		
Universal Area\SHOGUN\PPC – Predictive Powertrain Control (A56)	✓	✓	✓	✓		
Universal Area\SHOGUN\MCM2.1 – Motor Control Module (A4)	✓	✓	✓	✓		
Universal Area\SHOGUN\MPC2 – Multifunction camera 2 (A84)	✓	✓	✓	✓		
Universal Area\SHOGUN\MS – Maintenance system (A2 a3)	✓	✓	✓	✓		
Universal Area\SHOGUN\RDF – Radar sensor (A15)	✓	✓	✓	✓		

Universal Area\SHOGUN\RCM - Retarder (A11)	✓	✓	✓			
Universal Area\SHOGUN\SAS - Steering wheel angle sensor (B66)	✓	✓	✓	✓		
Universal Area\SHOGUN\SRR - Short range radar (A81)	✓	✓	✓	✓		
Universal Area\SHOGUN\TCC - Truck Control Center (A9)	✓	✓	✓	✓		
Universal Area\SHOGUN\TCM - Transmission control (A5)	✓	✓	✓	✓		
Universal Area\SHOGUN\TPM - Tire pressure monitor (A35)	✓	✓	✓	✓		
Universal Area\SHOGUN\VRDU - Driver assistance system (A53a)	✓	✓	✓	✓		
Universal Area\SHOGUN\XMC - SAM with additional functions (A22)	✓	✓	✓	✓		
Universal Area\ROSA\ABS-Antilock brake system Control unit	✓	✓	✓	✓	A0324, A0325, A0326, A0327, A0328, A0329, A0330, A0331, A0332, A0333, A0324, A0325, A0326, A0327, A0328, A0329, A0334, A0335, A0330, A0331, A0336,	
Universal Area\ROSA\CTP-Common Telematics Platform	✓	✓	✓			
Universal Area\ROSA\EEC-Combustion engine Control unit	✓	✓	✓	✓	A0616, A0639, A0640, A0641, A0642, A0643, A0644, A0645, A0646, A0647, A0648, A0649, A0650, A0651, A0109, A0110, A0652, A0653, A0654, A0655, A0656,	S0032, S0045, S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0063, S0064, S0065, S0056, S0057, S0066, S0067, S0068, S0069
Universal Area\ROSA\EZGO-Hill Start Assist Control unit	✓	✓	✓	✓		
Universal Area\ROSA\ICUC-Instrument panel	✓	✓	✓	✓	A0495	
Universal Area\ROSA\ISS-Automatic engine start/stop Control unit	✓	✓	✓	✓		
Universal Area\ROSA\MPC - Multifunction camera	✓	✓	✓	✓		
Universal Area\ROSA\RDF-Radar sensor	✓	✓	✓	✓		
Universal Area\ROSA\SRS-Supplemental restraint system	✓	✓	✓			
Universal Area\ROSA\SSAM-Signal Actuator Module	✓	✓	✓	✓		
Universal Area\ROSA\TCM-DUONIC Control unit	✓	✓	✓	✓		
Universal Area\ROSA\VRDU-Driver assistance system	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\Engine control module\Euro 2	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021,	
Euro 2/3/4\Power transmission\Engine control module\Euro 3	✓	✓	✓	✓	A0098, A0099, A0100, A0101, A0102, A0103, A0104, A0105, A0106, A0107, A0108, A0109, A0110, A0111, A0112, A0096, A0097, A0113, A0114, A0115, A0116,	S0001, S0002, S0002, S0001, S0003, S0004, S0001
Euro 2/3/4\Power transmission\Engine control module\Euro 4	✓	✓	✓	✓	A0135, A0136, A0137, A0138, A0104, A0139, A0140, A0141, A0127, A0142, A0143, A0015, A0144, A0098, A0145, A0146, A0147, A0127, A0148, A0138, A0149,	S0005, S0006, S0007, S0008, S0009, S0003, S0010, S0011, S0003, S0010, S0008, S0009, S0008, S0009, S0008, S0003, S0011, S0001, S0001, S0003, S0011, S0001, S0001,
Euro 2/3/4\Power transmission\Transmission control module	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\ISS(Idling Stop and Start System)	✓	✓	✓	✓	A0526, A0110, A0527, A0528, A0529, A0530, A0531, A0532	
Euro 2/3/4\Power transmission\Integrated control	✓	✓	✓	✓	A0296, A0297, A0298, A0299, A0300, A0301	
Euro 2/3/4\Power transmission\Motor control	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\Battery control	✓	✓	✓	✓		
Euro 2/3/4\Power transmission\BlueTec/SCR(Selective Catalytic Reduction)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\Air Suspension	✓	✓	✓	✓	A0535, A0536, A0537, A0538, A0539, A0540, A0541, A0542, A0543, A0346, A0347, A0542, A0543, A0544, A0545, A0546, A0547, A0548, A0549, A0550, A0551,	
Euro 2/3/4\Chassis\Anti-lock braking system	✓	✓	✓	✓	A0302, A0303, A0304, A0305, A0306, A0307, A0308, A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320, A0321, A0322,	S0014
Euro 2/3/4\Chassis\EZGO (WHEEL BRAKE SPECIAL SYSTEM)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\MBECS(Moter vehicle Brake Energy Conservation System)	✓	✓	✓	✓		
Euro 2/3/4\Chassis\Retarder	✓	✓	✓	✓		S0044
Euro 2/3/4\Car body\Immobilizer	✓	✓	✓	✓	A0480, A0481	
Euro 2/3/4\Car body\SRS Airbag	✓	✓	✓	✓		

Euro 2/3/4\Car body\SWS(Smart Writing System)	✓	✓	✓	✓		
Euro 2/3/4\Car body\MDAS(Mitsubishi Driver's Attention monitoring System)	✓	✓	✓	✓		
Euro 2/3/4\Car body\Distance Warning	✓	✓	✓	✓		
Euro 2/3/4\Car body\MILS(Mitsubishi Intelligent Load monitoring System)	✓	✓	✓			
Euro 2/3/4\Car body\Headlamp Auto-Leveling	✓	✓	✓	✓		
India Bus\India bus(CAN)	✓	✓	✓	✓	A0607, A0608, A0142, A0609, A0610, A0611, A0612, A0613, A0614, A0615	
India Bus\India bus(KWP)	✓	✓	✓	✓		
HDT Euro V\CPC-Common powertrain controller(CPC)Control unit (A3)	✓	✓	✓	✓	A0517	
HDT Euro V\MR2-Combustion engine Control unit (A6)	✓	✓	✓	✓	A0518, A0519, A0520	S0020, S0021, S0022, S0023
Service\DPF(Diesel Particulate Filter)\ENGINE\Euro 4	✓	✓	✓	✓		S0008, S0003, S0003, S0008, S0003, S0008, S0003, S0011, S0003, S0011, S0003, S0011, S0008, S0003, S0011, S0003, S0011, S0003, S0011, S0003, S0011,
Service\DPF(Diesel Particulate Filter)\EEC-Combustion engine Control unit	✓	✓	✓	✓	A0521, A0521, A0521, A0521, A0521, A0521	S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0024, S0025, S0026, S0028, S0029, S0031, S0032, S0024, S0025, S0026, S0028, S0029, S0030, S0024,
Service\DPF(Diesel Particulate Filter)\MCM	✓	✓	✓	✓	A0522, A0523, A0524, A0525	S0034, S0035, S0036, S0037
Service\DPF(Diesel Particulate Filter)\ACM-AdBlue exhaust aftertreatment unit	✓	✓	✓	✓		S0038, S0039, S0040, S0041
Service\Engine Oil\EEC-Combustion engine Control unit	✓	✓	✓	✓		S0059, S0060, S0061, S0060, S0061, S0060, S0061
Service\Injector Coding\EEC-Combustion engine Control unit	✓	✓	✓	✓		S0062, S0062

Special Function Table	
S0001	A/T Communication Record Reset
S0002	Supply Pump Initialization
S0003	DPF Regeneration(Manual)
S0004	Diesel Particulate filter (DPF) reset
S0005	VIN information
S0006	Write VIN
S0007	Program
S0008	ECU Reset
S0009	Coding
S0010	Supply Pump Learned Value -Initialization
S0011	DPF Related Information Reset
S0012	Write injector data
S0013	Reset ECU
S0014	ECU RESET
S0015	Sachunmmmer Mitsubishi
S0016	Coding Tool
S0017	Manual settings
S0018	Teach-in processes
S0019	RESET
S0020	000 Injection value unit pumps
S0021	001 Ignition angle
S0022	002 SCR Calibration
S0023	003 SCR Calibration 2
S0024	004 Lambda control tester
S0025	005 Air mass flow rate / Intake air temperature sensor
S0026	008 Exhaust gas recirculation valve
S0027	010 BlueTec
S0028	011 Diesel particulate filter
S0029	012 Differential pressure sensor of diesel particular filter
S0030	017 Status of exhaust aftertreamnet
S0031	018 Flight recorder
S0032	DPF Regeneration
S0033	015 Resetting of learned values of Combustion engine Control unit(Adblue system Error and Scr Group Fault)
S0034	DPF RESET
S0035	EGR RESET
S0036	VGT RESET
S0037	NOx RESET
S0038	AdBlue system
S0039	AdBlue quality
S0040	SCR Calalytic Converter
S0041	AdBlue metering Device
S0042	Injector Codes
S0043	VIN
S0044	ECU Restart
S0045	Reset of oil monitoring
S0046	Reset of fuel injector learned value
S0047	Reset of pressure limiting valve in rail learned value
S0048	Reset of rail pressure sensor learned value
S0049	Reset of lambda control tester learned value

S0050	Reset of air mass flow rate/intake air temperature sensor learned value
S0051	Reset of turbocharger learned value
S0052	Reset of EGR valve learned value
S0053	Reset of starter learned value
S0054	Reset of AdBlue metering device value
S0055	Resetting of learned values of component 'SCR catalytic converter'
S0056	Reset of DPF learned value
S0057	Reset of differential pressure sensor of DPF learned value
S0058	Reset of learned values of combustion engine control unit (Fault in AdBlue system)
S0059	000 Engine oil
S0060	000-1 Engine oil Reset
S0061	000-2 Fix oil change interval Setting
S0062	Injector Coding
S0063	Reset of starter learned value
S0064	Reset of AdBlue metering device value
S0065	Reset of SCR catalytic converter
S0066	Cancellation of limitation of engine starts
S0067	Reset of learned values of combustion engine control unit (Fault in AdBlue system)
S0068	Regeneration of diesel particulate filter
S0069	DPF
S0070	ESP teach-in process
S0071	001 Level calibration
S0072	002 Disassembly of outside remote control
S0073	003 Adjustment values for level calibration
S0074	Measures on completion of repairs
S0075	Initialization after replacement of components
S0076	Special procedures
S0077	010 Teach-in process of component 'Combustion engine Control unit (6M60)'
S0078	011 Calibration of component 'Fuel system high pressure pump'
S0079	012 Resetting learned values 'Number of engine starts'
S0080	013 Resetting of learned values of component 'Diesel particulate filter'
S0081	014 Resetting of learned values of component 'SCR catalytic converter'
S0082	Initial Setting
S0083	Control unit list
S0084	Vehicle equipment
S0085	Control unit test
S0086	004 AdBlue system
S0087	005 EIS Authentication
S0088	006 MIL Resetting the frequency counters
S0089	007 BI Counter
S0090	010 Engine number
S0091	Calibration by means of test drive
S0092	Delete permanent error
S0093	002 Ash content
S0094	003 Soot content
S0095	006 Cancellation of limitation of engine starts
S0096	007 AdBlue quality FAULT DEACTIVATED
S0097	008 Pairing of control units 'ACM3' and 'MCM2.1'
S0098	009 DPF EXCESS TEMPERATURE
S0099	Function running when fault occurred

### Active Test Table

A0001	Fuel leak test
A0002	SGV Driving
A0003	EGR M/V - A
A0004	EGR M/V - B
A0005	VGT M/V - Boost
A0006	VGT M/V - Vent
A0007	POWERTARD M/V
A0008	EXH. BRAKE M/V
A0009	Sub Brake S/L
A0010	Cruise light
A0011	Diagnosis Lamp ( R )
A0012	Diagnosis Lamp ( U )
A0013	A/C SIG
A0014	Idle Up Stop Switch
A0015	Fuel Leak Check
A0016	TWV - 1# STOP
A0017	TWV - 2# STOP
A0018	TWV - 3# STOP
A0019	TWV - 4# STOP
A0020	TWV - 5# STOP
A0021	TWV - 6# STOP
A0022	Sub brake P/L
A0023	91 Silencers M / V
A0024	94 exhaust brake M / V
A0025	97 DIAG light (R)
A0026	98 DIAG light (U)
A0027	99 A / C signal
A0028	9A Idle boost cancel
A0029	9B SPV
A0030	9C TCV-OFF
A0031	9D TCV-ON
A0032	Exhaust Bypass Relay
A0033	ISS Intake Shutter
A0034	ISS Air Conditioner Fan Relay
A0035	ISS Buzzer Cut
A0036	ISS Lamp Cut



A0037	Intake Sliencer M/V
A0038	PS Cut Relay
A0039	ISS Operation P/L
A0040	Idle Up CAN cel switch
A0041	Cruise Sub S/L
A0042	Cruise P/L
A0043	Cruise Retarder Switch 1
A0044	Cruise Retarder Switch 2
A0045	Cruise Retarder Switch 3
A0046	Cruise Retarder Switch 4
A0047	EGR E-VRV M/V
A0048	Intake Metering M/V
A0049	Powertard M/V -R
A0050	Powertard M/V-L
A0051	Pre-Heat Lamp
A0052	HEATER RELAY
A0053	OVER HEAT BUZ
A0054	AB DIAG light ( R )
A0055	AC DIAG light ( U )
A0056	AD A / C signal
A0057	AE Idle boost Cancel
A0058	IDLE UP Cancel
A0059	SPV
A0060	TCV-OFF
A0061	TCV-ON
A0062	Actuation Test(Chinese mainland)
A0063	Actuation Test(Other regions)
A0064	EGR M/V - A( R )
A0065	EGR M/V - B( R )
A0066	EGR M/V - A( L )
A0067	EGR M/V - B( L )
A0068	A0 EGR M/V-A
A0069	A1 EGR M/V-B
A0070	A3 VGT M/V-Boost
A0071	A4 VGT M/V-Exhaust
A0072	A6 Power delay M/V
A0073	A7 Exhaust brake M/V
A0074	A9 ASC lights
A0075	B2 Fuel leakage detection
A0076	EGR ADVANCE
A0077	EXH BRAKE SOL
A0078	W/LAMP(AMBER)
A0079	EXH LAMP
A0080	W/LAMP(RED)
A0081	TDC CHECK
A0082	EGR M/V - C
A0083	Powertard M/V - R
A0084	Exhaust Brake M/V
A0085	Sub Brake P/L
A0086	Cruise Lamp
A0087	Air Conditioner Signal
A0088	ISS IND Lamp
A0089	ISS Evaporator Pan Relay
A0090	ISS Starter Relay(M)
A0091	ISS Starter Relay(S)
A0092	ISS H/LP Cut
A0093	ISS ENG INFO
A0094	Diagnosis Lamp(R)
A0095	Diagnosis Lamp(U)
A0096	Fuel Leaking Check
A0097	VGT Test
A0098	EGR 1
A0099	Intake Metering Valve 1
A0100	VGT M/V1
A0101	VGT M/V2
A0102	VGT M/V3
A0103	Auxiliary Brake M/V 1
A0104	Auxiliary Brake Indicator Lamp
A0105	Glow Relay Driving Relay
A0106	Glow Indicator Lamp
A0107	Starter continous Electrical Current Protection Relay
A0108	EDU Relay
A0109	MIL Lamp
A0110	Diagnosis Lamp
A0111	Air Conditioning Switch 1
A0112	Idle Up Cancele Switch
A0113	Injector Test 1
A0114	Injector Test 2
A0115	Injector Test 3
A0116	Injector Test 4
A0117	EGR 2
A0118	EGR 3
A0119	Auxiliary Brake M/V1
A0120	Sub Brake M/V2
A0121	Glow Relay Indicator Light
A0122	Injector Test 5
A0123	Injector Test 6
A0124	Supply Pump Learned Value - Initialization
A0125	W/G M/V
A0126	Starter Continous Electrical Current Protection Relay

A0127	EDU Relay
A0128	MIL lamp
A0129	Diagnostic Lamp
A0130	DPF Forced Regeneration Lamp
A0131	Powertard M/V
A0132	ISS Intake Shutter M/V
A0133	EDU relay
A0134	Idle Up Cancele Switch
A0135	EGR
A0136	Air Intake Throttle
A0137	VGT
A0138	auxiliary brake M/V 1
A0139	Relay for Glow Relay
A0140	glow indicator lamp
A0141	starter safety relay
A0142	MIL
A0143	diagnosis lamp
A0144	Injector test
A0145	Wastegate M/V
A0146	Intake metering valve 1
A0147	DPF Lamp
A0148	Exhaust Brake M/V 1 + M/V 2
A0149	Auxiliary brake M/V 2
A0150	Glow Relay Indicator Lamp
A0151	Air Conditioner Switch 1
A0152	Injector Test
A0153	Intake throttle 1
A0154	Starter Safety Relay
A0155	VGT 1
A0156	DPF Regeneration(Manual)
A0157	AC switch
A0158	GCU (GLOW PLUG)
A0159	VGT 2
A0160	VGT 3
A0161	Sub Brake M/V
A0162	Air Heater Relay Driving Relay
A0163	Air heater indicator lamp
A0164	ISS intake shutter
A0165	No. of urea remaining-warning lamp
A0166	No. of urea determination-warning lamp
A0167	SCR warning Buzzer
A0168	SCR warning lamp
A0169	DPF Indicator Lamp
A0170	01 Exhaust Flap actuator
A0171	02 VGT actuator
A0172	03 EGR valve actuator
A0173	11 Cylinder shut off
A0174	21 MIL Lamp
A0175	22 Diagnosis Lamp
A0176	23 Glow indicator Lamp
A0177	24 Auxiliary brake indicator Lamp
A0178	31 Glow plug
A0179	41 MeUn Zero delivery
A0180	42 PCV Opening
A0181	51 Urea Dosing Valve
A0182	A1 DPF Regeneration
A0183	A2 Urea leakage test
A0184	A3 Urea dosing test
A0185	A5 Emptying Urea lines
A0186	B1 VGT offset learning
A0187	EGR 1,3
A0188	Second DPF M/V
A0189	Auxiliary brake M/V 1
A0190	Diagnosis lamp
A0191	idel up Cancele switch
A0192	A1 EGR
A0193	A2 DPF Regeneration
A0194	A4 Intake throttle 1
A0195	A5 VGT
A0196	A6 Auxiliary Brake M/V 1
A0197	A7 Auxiliary Brake M/V 2
A0198	A8 Auxiliary Brake Indicator Lamp
A0199	A9 Relay for Glow Relay
A0200	AA Glow Indicator Lamp
A0201	AB Starter Safety Relay
A0202	AC EDU Relay
A0203	AD MIL Lamp
A0204	AE Diagnosis Lamp
A0205	AF DPF Indicator Lamp
A0206	B0 Air Conditioner SW
A0207	B1 Idle Up Cancel SW
A0208	B2 fuel leak check
A0209	B3 Injector Test 1
A0210	B4 Injector Test 2
A0211	B5 Injector Test 3
A0212	B6 Injector Test 4
A0213	EGR 1.3
A0214	Auxiliary Brake M/V 2
A0215	Air Conditioner Switch
A0216	Intake Throttle

A0217	Idel Up Cancel Switch
A0218	AC Auxiliary Brake M/V 1
A0219	AE Auxiliary Brake Indicator Lamp
A0220	B1 Starter Safety Relay
A0221	B3 MIL Lamp
A0222	B4 Diagnostic lights
A0223	B6 air conditioning switch 1
A0224	B9 Fuel leak inspection
A0225	BB Injector Test 1
A0226	BC Injector Test 2
A0227	BD Injector Test 3
A0228	BE Injector Test 4
A0229	BF Injector Test 5
A0230	C0 Injector Test 6
A0231	C2 Pump Adjustment Value Clear
A0232	A1 VGT M/V1
A0233	A2 VGT M/V2
A0234	A3 VGT M/V3
A0235	A5 EDU Relay
A0236	A7 Auxiliary Brake Indicator Lamp
A0237	A8 Relay for Glow Relay
A0238	A9 Glow Indicator Lamp
A0239	AA Starter Safety Relay
A0240	AB MIL Lamp
A0241	AC Diagnosis Lamp
A0242	AD Air Conditioner SW 1
A0243	AE Fuel Leak Check
A0244	AF Injector Test 1
A0245	B0 Injector Test 2
A0246	B1 Injector Test 3
A0247	B2 Injector Test 4
A0248	B3 Injector Test 5
A0249	B4 Injector Test 6
A0250	B5 Pump Adjustment Value Clear
A0251	B6 VGT adjustment
A0252	BA Refreshing mode for urea deposit
A0253	VGT M/V 1
A0254	VGT M/V 2
A0255	VGT M/V 3
A0256	DPF Lamp(Auto Reg)
A0257	Oil Level Warning Lamp
A0258	Idel Up Cancele Switch
A0259	A1 EGR 1,3
A0260	A3 W/G M/V
A0261	A5 DPF Regeneration (Manual)
A0262	A7 Intake throttle 1
A0263	A8 DPF Lampy
A0264	A9 EDU Relay
A0265	AA DPF Outlet M/V
A0266	AF Relay for Glow Relay
A0267	BO Glow Indicator Lamp
A0268	B8 Idle Up Cancel SW
A0269	AC Auxiliary Brake MA/1
A0270	DPF Regeneration Lamp
A0271	2nd Shift
A0272	3rd Shift
A0273	4th Shift
A0274	5th Shift
A0275	Neutral
A0276	EZGO M/V 1 ON
A0277	EZGO M/V 1 OFF
A0278	EZGO M/V 2 ON
A0279	EZGO M/V 2 OFF
A0280	EZGO Operation Lamp
A0281	EZGO W/L
A0282	Warning Buzzer
A0283	6th Shift
A0284	8th Shift
A0285	7th Shift
A0286	9th Shift
A0287	10th Shift
A0288	L/R Solenoid
A0289	U/D Solenoid
A0290	2nd Solenoid
A0291	O/D Solenoid
A0292	D/C Solenoid
A0293	ELC Solenoid
A0294	Exhaust Brake Relay
A0295	INVECS-II :Compulsory Stop
A0296	Cruise lights ON
A0297	Cruise lights OFF
A0298	Speed limit lights ON
A0299	Speed limit lights OFF
A0300	System warning light ON
A0301	System warning light OFF
A0302	01 ABS Lamp
A0303	02 ASR Lamp
A0304	03 Reducer relay
A0305	04 Outlet valve FL
A0306	05 Inlet valve FL

A0307	06 Outlet valve FR
A0308	07 FR inlet valve
A0309	08 Outlet valve RL
A0310	09 Inlet valve RL
A0311	10 Outlet valve RR
A0312	11 RR Inlet valve
A0313	12 ASR valve
A0314	16 ASR engine control
A0315	17 Rolling tester ASR inaction
A0316	21 Valve Test 1 FL
A0317	22 Valve Test 1 FR
A0318	23 Valve Test 1 RL
A0319	24 valve Test 1 RR
A0320	25 Valve test 2 FL
A0321	26 Valve test 2 FR
A0322	27 Valve test 2 RL
A0323	28 valve Test 2 RR
A0324	F CV Exhaust ON
A0325	F CV Intake ON
A0326	RL CV Exhaust ON
A0327	RL CV Intake ON
A0328	RR CV Exhaust ON
A0329	RR CV Intake ON
A0330	Warning ON
A0331	Warning OFF
A0332	Safety Relay ON
A0333	Safety Relay OFF
A0334	ASR Valve L ON
A0335	ASR Valve R ON
A0336	INA Lamp ON
A0337	INA Lamp OFF
A0338	FR Valve + Motor
A0339	FL Valve + Motor
A0340	RR Valve + Motor
A0341	RL Valve + Motor
A0342	FL Valve ON
A0343	FR Valve ON
A0344	RL Valve ON
A0345	RR Valve ON
A0346	Valve Relay ON
A0347	Valve Relay OFF
A0348	Motor Relay ON
A0349	Motor Relay OFF
A0350	ABS W/L ON
A0351	Exhaust Brake Relay ON
A0352	Exhaust Brake Relay OFF
A0353	ASR Cut Valve ON
A0354	ASR Cut Valve OFF
A0355	ASR Charge ON
A0356	ASR Charge OFF
A0357	ASR Lamp ON
A0358	ASR Motor ON
A0359	RL ASR Brake
A0360	RR ASR Brake
A0361	Before -HV ON
A0362	Rear left -HV ON
A0363	Rear right -HV ON
A0364	Front -DV ON
A0365	Rear left -DV ON
A0366	Rear right -DV ON
A0367	EXB relay ON
A0368	EXB relay OFF
A0369	Anti-lock braking system lights ON
A0370	Anti-lock braking system lights OFF
A0371	F Protection Maintain Valve ON
A0372	RL Protection Valve ON
A0373	RR Protection Valve ON
A0374	F Exhaust Valve ON
A0375	RL Exhaust Valve ON
A0376	RR Exhaust Valve ON
A0377	EXB Cut Relay ON
A0378	EXB Cut Relay OFF
A0379	ABS Warning ON
A0380	ABS Warning OFF
A0381	ASR Exhaust Valve ON
A0382	INA Lmap ON
A0383	INA Lmap OFF
A0384	Engine Control
A0385	FL Protection Maintain Valve ON
A0386	FR Protection Maintain Valve ON
A0387	RL Protection Maintain Valve ON
A0388	RR Protection Maintain Valve ON
A0389	FL Exhaust Valve ON
A0390	FR Exhaust Valve ON
A0391	Slip Detection Convert
A0392	ASR Valve ON
A0393	ASR Lamp OFF
A0394	AUS F M/V ON
A0395	AUS F M/V OFF
A0396	AUS R M/V ON

A0397	AUS R M/V OFF
A0398	PSS Over-Pressure
A0399	PSS Decompression-Pressure
A0400	AUS Lamp ON
A0401	AUS Lamp OFF
A0402	FL ABS M/V ON
A0403	FR ABS M/V ON
A0404	RL ABS M/V ON
A0405	RR ABS M/V ON
A0406	Parking Lamp ON
A0407	Parking Lamp OFF
A0408	ABS LAMP ON
A0409	ABS LAMP OFF
A0410	EZGO Lamp ON
A0411	EZGO Lamp OFF
A0412	Buzzer ON
A0413	Exhaust Brake Cut - ON
A0414	Exhaust Brake Cut - OFF
A0415	PSS/LB Over-Pressure
A0416	PSS/LB Decompression-Pressure
A0417	LB READY ON
A0418	LB READY OFF
A0419	LB HOLD ON
A0420	LB HOLD OFF
A0421	Horn ON
A0422	ABS Lamp ON
A0423	ABS Lamp OFF
A0424	Exhaust Brake Cut-ON
A0425	Exhaust Brake Cut-OFF
A0426	FL ABS MV ON
A0427	FR ABS MV ON
A0428	RL ABS MV ON
A0429	RR ABS MV ON
A0430	PARKING LAMP
A0431	EXB CUT ON
A0432	EXB CUT OFF
A0433	AUS Valve Front ON
A0434	AUS Valve Front OFF
A0435	AUS Valve Rear ON
A0436	AUS Valve Rear OFF
A0437	AUS Operation Lamp ON
A0438	AUS Operation Lamp OFF
A0439	ABS Valve FL ON
A0440	ABS Valve FR ON
A0441	ABS Valve RL ON
A0442	ABS Valve RR ON
A0443	ABS Warning Lamp ON
A0444	ABS Warning Lamp OFF
A0445	EZGO Warning Lamp ON
A0446	EZGO Warning Lamp OFF
A0447	EZGO Buzzer
A0448	Exhaust Brake Cut Relay ON
A0449	Exhaust Brake Cut Relay OFF
A0450	ASR M/V ON
A0451	ASR Engine Control
A0452	Solenoid Relay ON
A0453	Solenoid Relay OFF
A0454	FL ABS MV OFF
A0455	FR ABS MV OFF
A0456	RL ABS MV OFF
A0457	RR ABS MV OFF
A0458	AUS F MV ON
A0459	AUS F MV OFF
A0460	AUS R MV ON
A0461	AUS R MV OFF
A0462	RL ASR MV ON
A0463	RL ASR MV OFF
A0464	RR ASR MV ON
A0465	RR ASR MV OFF
A0466	Engine Control ON
A0467	Engine Control OFF
A0468	FL Protection Valve ON
A0469	FR Protection Valve ON
A0470	Front right ABS MV ON
A0471	Front left ABS MV ON
A0472	Rear right ABS MV ON
A0473	Rear left ABS MV ON
A0474	ABS motor ON
A0475	ABS warning light ON
A0476	Motor ON
A0477	Exhaust Brake Cut ON
A0478	Front Pressurization
A0479	Rear Pressurization
A0480	Internal FET action
A0481	Light action
A0482	000 Shift Gear
A0483	001 Pressure line High
A0484	002 Pressure line Low
A0485	003 Oil cooler ON
A0486	004 Oil cooler OFF

A0487	005 Internal clutch plate ON
A0488	006 External clutch plate ON
A0489	007 Deactivation of shift lock
A0490	008 Electric motor Cooling Control valve ON
A0491	009 Blower motor Relays ON
A0492	010 Electric motor RUNNING (Discharging mode)
A0493	011 Electric motor RUNNING (Charging mode)
A0494	012 Turtle Warning lamp
A0495	Instrument cluster
A0496	Transponder key Teach-in process
A0497	Electric motor Automatic headlamp adjustment
A0498	Compressor
A0499	Actuator motor for fresh air/recirculated air flap
A0500	Actuator motor for blend air flap
A0501	Blower motor
A0502	Mode setting Electric motor
A0503	Control value "Rear axle service brake"
A0504	Control value "Front axle service brake"
A0505	Actuation of component load cut indicator
A0506	Actuation of component Automatic engine start/stop Indicator lamp
A0507	Actuation of component Warning lamp
A0508	Actuation of component Blower motor Relays
A0509	Actuation of component Headlamps and foglamps
A0510	Actuation of component Warning buzzer
A0511	Exterior illumination
A0512	Actuation of pump for windshield washer system 'Windshield'
A0513	Status of integrated ignition module
A0514	Air conditioning
A0515	000 SCR catalytic converter
A0516	001 Proportioning values
A0517	Actuation of digital outputs
A0518	000 Cylinder shutoff
A0519	002 Proportioning values
A0520	003 Mechanical compression test
A0521	011 Regeneration of diesel particulate filter
A0522	TC Boost Pressure Adjustment
A0523	VGT Actuator test
A0524	Control EGR valve position
A0525	DPF Regeneration
A0526	System Operation Lamp
A0527	Load Cut Relay 1
A0528	Load Cut Relay 2
A0529	Load Cut Relay 3
A0530	Intake Air Shutter Magnetic Valve
A0531	ISS Warning Buzzer
A0532	Sub Battery Relay
A0533	Desired Rail Pressure
A0534	Cylinder Cutout Test
A0535	Vehicle Height Up
A0536	Vehicle Height Down
A0537	Axle-Weight Transfer ON
A0538	Axle-Weight Transfer OFF
A0539	Safety Relay ON
A0540	Safety Relay OFF
A0541	Neutral Reset
A0542	Kneeling
A0543	Kneeling Reset
A0544	S/A SOFT
A0545	S/A MEDIUM
A0546	S/A HARD
A0547	Compressor A ON
A0548	Compressor A OFF
A0549	Compressor B ON
A0550	Compressor B OFF
A0551	Compressor C ON
A0552	Compressor C OFF
A0553	M/V Cut Relay ON
A0554	M/V Cut Relay OFF
A0555	FR Inlet M/V ON
A0556	FR Inlet M/V OFF
A0557	FR outlet M/V ON
A0558	FR outlet M/V OFF
A0559	FL Inlet M/V ON
A0560	FL Inlet M/V OFF
A0561	FL outlet M/V ON
A0562	FL outlet M/V OFF
A0563	Rear inlet M/V ON
A0564	Rear inlet M/V OFF
A0565	RR outlet M/V ON
A0566	RR outlet M/V OFF
A0567	RL outlet M/V ON
A0568	RL outlet M/V OFF
A0569	NR Valve ON
A0570	NR Valve OFF
A0571	Spring Inlet
A0572	Spring Outlet
A0573	Warning Lamp ON
A0574	Warning Lamp OFF
A0575	Vehicle Height Down
A0576	Vehicle Height Down Reset

A0577	Ferry On Board
A0578	Ferry On Board Reset
A0579	Air Cut M/V ON
A0580	Air Cut M/V OFF
A0581	Cylinder MV F ON
A0582	Cylinder MV F OFF
A0583	Cylinder MV R ON
A0584	Cylinder MV R OFF
A0585	Outlet MV F ON
A0586	Outlet MV F OFF
A0587	Outlet MV R ON
A0588	Outlet MV R OFF
A0589	Inlet MV F ON
A0590	Inlet MV F OFF
A0591	Inlet MV R ON
A0592	Inlet MV R OFF
A0593	Vehicle Height Lamp ON
A0594	Kneeling Lamp ON
A0595	Ferry Lamp ON
A0596	Malfunction Lamp F ON
A0597	Malfunction Lamp H ON
A0598	ECS Correction Soft
A0599	ECS Correction Hard
A0600	Vehicle Height Up Reset
A0601	W/P Release ON
A0602	W/P release OFF
A0603	Air Cylinder M/V ON
A0604	Air Cylinder M/V OFF
A0605	Air Cylinder Outlet ON
A0606	Air Cylinder Outlet OFF
A0607	Water In Fuel
A0608	Grid Heater Lamp
A0609	High Coolant Lam
A0610	System Lamp
A0611	Oil Pressure Lamp
A0612	EGR Actuator
A0613	EGR Valve Learn
A0614	Cylinder Shut off
A0615	Exhaust
A0616	Cold start
A0617	Regeneration of diesel particulate filter
A0618	000 Cold start
A0619	001 FMU (Fuel Metering device)
A0620	002 Pressure regulating valve in rail
A0621	003 Injection valve
A0622	Shift Gear
A0623	Pressure line High
A0624	Pressure line Low
A0625	Oil cooler ON
A0626	Oil cooler OFF
A0627	Internal clutch plate ON
A0628	External clutch plate ON
A0629	Deactivation of shift lock
A0630	Solenoid values
A0631	Manual bleeding
A0632	Control value'Rear axle service barke'
A0633	Control value'Front axle service barke'
A0634	Lock Barke Readiness indicator
A0635	Lock Brake Indicator lamps
A0636	Lock Brake Relays
A0637	Warning buzzer
A0638	Fanfare horns
A0639	Fuel metering device
A0640	Pressure regulating valve in rail
A0641	Injection valve
A0642	Boost pressure control
A0643	ERG Actuator
A0644	Engine brake Solenoid valve
A0645	Test of AdBlue metering amount
A0646	AdBlue Leak tester
A0647	AdBlue delivery pump
A0648	Exhaust Flap actuator
A0649	VGT actuator
A0650	EGR valve actuator
A0651	Cylinder shut off
A0652	Glow indicator Lamp
A0653	Auxiliary brake indicator Lamp
A0654	Glow plug
A0655	MeUn Zero delivery
A0656	PCV Opening
A0657	Urea Dosing Valve
A0658	FMU(Fuel metering device)
A0659	Exhaust recirculation actuator
A0660	Fan clutch 1
A0661	Fan clutch 2
A0662	Signal of switch 'Air conditioning'
A0663	Relay 'Exhaust gas recirculation Drive unit'
A0664	Relay 'Power supply of component 'Intake air Heating''
A0665	Circuit breaker (Starter relay)
A0666	Relay 'AdBlue heating element'

A0667	AdBlue tank Heating Solenoid valve
A0668	AdBlue switchover valve
A0669	Exhaust gas recirculation valve
A0670	Exhaust flap
A0671	AdBlue metering valve
A0672	Shutting off the injection of individual cylinders
A0673	Leak test of high-pressure fuel circuit
A0674	Leak test of the AdBlue system
A0675	011 Relay 'Power supply of component 'Drive unit''
A0676	012 Relay 'Shutoff of component 'Starter Switches''
A0677	014 Relay 'Retarder operation RECOGNIZED'
A0678	020 Turbocharger Valves
A0679	024 Exhaust flap
A0680	041 Shutting off the injection of individual cylinders
A0681	042 Leak test of high-pressure fuel circuit
A0682	043 Turbocharger
A0683	044 Regeneration of diesel particulate filter
A0684	Electric motor 'Automatic headlamp adjustment'
A0685	Background illumination
A0686	Pointer
A0687	Actuations of multifunction display
A0688	Indicator lamps
A0689	Actuation of speakers
A0690	Driving height Rear axle
A0691	Vehicle level Left rear axle
A0692	Vehicle level Right rear axle
A0693	Vent values
A0694	Actuations of speakers
A0695	001 Y616(Fan clutch solenoid valve)
A0696	002 Y621(Exhaust gas recirculation controller)
A0697	003 Y624(Engine brake Solenoid valve)
A0698	004 Y627(AdBlue heater coolant solenoid valve)
A0699	005 Y628(Fuel metering valve)
A0700	006 Y629(Fuel shutoff valve)
A0701	010 Diesel fuel metering device VENTILATION
A0702	015 Relay 'Power supply of NOx sensors'
A0703	016 AdBlue heating elements
A0704	022 AdBlue switchover valve
A0705	032 AdBlue tank Heating Solenoid valve
A0706	033 AdBlue metering valve
A0707	034 AdBlue delivery pump
A0708	051 Leak test of the AdBlue system
A0709	052 Test of AdBlue metering amount
A0710	053 AdBlue injection nozzle