

# ISUZU V14.55 Function List

**Note:**

✓ Functions marked with ✓ is fully supported.

System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
Enter by region\Automatic selection	✓	✓	✓			
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0272, A0274, A0275, A0276, A0135, A0277, A0278,	S0139, S0140, S0141, S0142, S0146, S0144, S0147, S0160, S0152, S0143, S0149, S0165, S0200
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0303, A0295, A0299, A0300, A0301, A0302, A0592, A0593, A0594	
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\Mimamori ECU	✓	✓	✓	✓	A0244, A0248, A0249, A0250, A0595, A0596	
Enter by region\ISUZU (North America)\2022\5. 2L Diesel (4HK1)N-Series\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2022\6. 0L Gas N-Series\AUTO\Engine	✓			✓	A0325, A0597, A0330, A0355, A0598, A0270, A0599, A0600, A0601, A0602, A0313, A0603, A0604, A0605, A0326, A0328, A0327, A0329, A0316, A0606, A0319,	
Enter by region\ISUZU (North America)\2022\6. 0L Gas N-Series\AUTO\Powertrain Interface Module (PIM)	✓	✓	✓			
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)F-Series\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0152, S0011
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)F-Series\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)F-Series\AUTO\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)F-Series\AUTO\Mimamori ECU	✓	✓	✓	✓	A0244, A0248, A0249, A0250, A0595, A0596	
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)F-Series\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0272, A0274, A0275, A0276, A0135, A0277, A0278,	S0139, S0140, S0141, S0142, S0146, S0144, S0147, S0160, S0152, S0143, S0149, S0165, S0200
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0303, A0295, A0299, A0300, A0301, A0302, A0592, A0593, A0594	
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\Mimamori ECU	✓	✓	✓	✓	A0244, A0248, A0249, A0250, A0595, A0596	
Enter by region\ISUZU (North America)\2021\5. 2L Diesel (4HK1)N-Series\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2021\6. 6L Gas N-Series\AUTO\Engine	✓	✓	✓	✓	A0325, A0309, A0310, A0608, A0312, A0315, A0609, A0316, A0319, A0317, A0320, A0610, A0611, A0322, A0323, A0324, A0612, A0326, A0327, A0328, A0329,	
Enter by region\ISUZU (North America)\2021\6. 6L Gas N-Series\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350, A0351	
Enter by region\ISUZU (North America)\2021\6. 6L Gas N-Series\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2021\6. 6L Gas N-Series\AUTO\Powertrain Interface Module (PIM)	✓	✓	✓	✓	A0379	
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)FTR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0152, S0011
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)FTR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)FTR\AUTO\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)FTR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	S0153
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)FTR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)N-Series\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0266, A0270, A0271, A0266, A0267, A0268, A0269, A0272, A0274, A0275, A0276, A0135, A0277, A0278,	S0139, S0140, S0141, S0142, S0146, S0144, S0147, S0160, S0152, S0143, S0149, S0165, S0200
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)N-Series\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)N-Series\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0303, A0295, A0299, A0300, A0301, A0302, A0592, A0593, A0594	
Enter by region\ISUZU (North America)\2020\5. 2L Diesel (4HK1)N-Series\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062

Enter by region\ISUZU (North America)\2020\5.2L Diesel (4HK1)\N-Series\AUTO\Mimamori ECU	✓	✓	✓	✓	A0244, A0248, A0249, A0250, A0595, A0596	
Enter by region\ISUZU (North America)\2020\5.2L Diesel (4HK1)\N-Series\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2020\6.0L Gas NPR\AUTO\Engine	✓	✓	✓	✓	A0309, A0310, A0311, A0312, A0313, A0314, A0315, A0316, A0317, A0318, A0319, A0320, A0270, A0321, A0322, A0323, A0083, A0324, A0325, A0326, A0327,	S0200
Enter by region\ISUZU (North America)\2020\6.0L Gas NPR\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350, A0351	
Enter by region\ISUZU (North America)\2020\6.0L Gas NPR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2020\6.0L Gas NPR\AUTO\Powertrain Interface Module (PIM)	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2020\6.6L Gas N-Series\AUTO\Engine	✓	✓	✓	✓	A0325, A0309, A0310, A0608, A0312, A0315, A0609, A0316, A0319, A0317, A0320, A0610, A0611, A0322, A0323, A0324, A0612, A0326, A0327, A0328, A0329,	
Enter by region\ISUZU (North America)\2020\6.6L Gas N-Series\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350, A0351	
Enter by region\ISUZU (North America)\2020\6.6L Gas N-Series\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2020\6.6L Gas N-Series\AUTO\Powertrain Interface Module (PIM)	✓	✓	✓	✓	A0379	
Enter by region\ISUZU (North America)\2019\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0152, S0011
Enter by region\ISUZU (North America)\2019\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2019\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	S0153
Enter by region\ISUZU (North America)\2019\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0156, S0157, S0158, S0152, S0159, S0011, S0160,
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2019\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2018\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0152, S0011
Enter by region\ISUZU (North America)\2018\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2018\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	S0153
Enter by region\ISUZU (North America)\2018\FTR w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2018\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0139, S0140, S0141, S0142, S0



Enter by region\ISUZU (North America)\2016\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2016\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2016\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2016\N-Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	
Enter by region\ISUZU (North America)\2016\N-Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	
Enter by region\ISUZU (North America)\2016\N-Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2016\N-Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2016\N-Series w/6.0L Propane\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓		✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0139, S0140, S0141, S0142, S0143, S0144, S0166, S0167, S0146, S0168, S0149, S0150, S0169, S0170, S0171, S0011, S0160
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2016\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓		✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0139, S0140, S0141, S0142, S0172, S0143, S0173, S0174, S0175, S0166, S0167, S0176, S0177, S0178, S0179, S0180, S0146, S0168, S0149, S0181, S0150,
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2016\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	S0154
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2015\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2015\N-Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	
Enter by region\ISUZU (North America)\2015\N-Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	
Enter by region\ISUZU (North America)\2015\N-Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2015\N-Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2015\N-Series w/6.0L Propane\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	
Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0139, S0140, S0141, S0142, S0143, S0144, S0166, S0167, S0146, S0168, S0149, S0150, S0169, S0170, S0171, S0011, S0160
Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	

Enter by region\ISUZU (North America)\2015\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0139, S0140, S0141, S0142, S0172, S0143, S0173, S0174, S0175, S0166, S0167, S0176, S0177, S0178, S0179, S0180, S0146, S0168, S0149, S0181, S0150,
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291, A0292	
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2015\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0201, S0202, S0203, S0204, S0143, S0144, S0166, S0167, S0146, S0168, S0149, S0150, S0182, S0169, S0184, S0185, S0187, S0189, S0158, S0170, S0171,
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2014\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0264, A0265, A0266, A0267, A0268, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0276, A0277, A0278,	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2014\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2014\N-Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	S0011
Enter by region\ISUZU (North America)\2014\N-Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	
Enter by region\ISUZU (North America)\2014\N-Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2014\N-Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2014\N-Series w/6.0L Propane\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	S0011
Enter by region\ISUZU (North America)\2014\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A03	

Enter by region\ISUZU (North America)\2013\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2013\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2013\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2013\N-Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270, A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	S0011
Enter by region\ISUZU (North America)\2013\N-Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2013\N-Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2013\N-Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277, A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	S0201, S0202, S0203, S0204, S0143, S0144, S0166, S0167, S0146, S0168, S0149, S0150, S0182, S0169, S0184, S0185, S0187, S0189, S0158, S0170, S0171,
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2013\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277, A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302, A0303	S0139, S0140, S0141, S0142, S0143, S0173, S0174, S0175, S0166, S0167, S0176, S0177, S0178, S0179, S0180, S0146, S0168, S0149, S0181, S0150, S0182,
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2013\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\FMS CAN Converter (If Equipped)	✓	✓	✓	✓	A0252	
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0274, A0272, A0275, A0276, A0135, A0277, A0278, A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160, S0165
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0274, A0272, A0275, A0276, A0135, A0277, A0278, A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160, S0165
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓		
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU (North America)\2012\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU (North America)\2012\N-Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270, A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	S0011
Enter by region\ISUZU (North America)\2012\N-Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2012\N-Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2012\N-Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2012\N-Series w/6.0L Propane\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270, A0335, A0336, A0337, A0338, A0339, A0340, A0341, A0295, A0296, A0342, A0343, A0344, A0345, A0346, A0347, A0348, A0349, A0350	S0011
Enter by region\ISUZU (North America)\2012\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277, A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	S0201, S0202, S0203, S0204, S0143, S0144, S0146, S0168, S0149, S0150, S0189, S0011, S0160
Enter by region\ISUZU (North America)\2012\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2012\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	

Enter by region\ISUZU(North America)\2012\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU(North America)\2012\Stripped Chassis w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU(North America)\2012\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0201, S0202, S0203, S0204, S0143, S0144, S0166, S0167, S0146, S0168, S0149, S0150, S0182, S0169, S0189, S0158, S0170, S0171, S0011, S0160
Enter by region\ISUZU(North America)\2012\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU(North America)\2012\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU(North America)\2012\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU(North America)\2012\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU(North America)\2011\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0304, A0265, A0266, A0267, A0305, A0269, A0270, A0271, A0135, A0272, A0273, A0274, A0275, A0306, A0307, A0277,	S0201, S0202, S0203, S0204, S0143, S0144, S0146, S0168, S0149, S0150, S0189, S0011, S0160
Enter by region\ISUZU(North America)\2011\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU(North America)\2011\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU(North America)\2011\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU(North America)\2011\N-Series w/3.0L Diesel (4JJ1)\12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0274, A0272, A0275, A0276, A0135, A0277, A0278,	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160, S0165
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0273, A0262, A0263, A0264, A0265, A0270, A0271, A0266, A0267, A0268, A0269, A0274, A0272, A0275, A0276, A0135, A0277, A0278,	S0201, S0202, S0203, S0204, S0143, S0144, S0145, S0146, S0147, S0148, S0149, S0150, S0151, S0155, S0152, S0011, S0160, S0165
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Diesel Exhaust Fluid Control Module	✓	✓	✓	✓	A0280, A0281, A0282, A0283, A0284, A0285, A0286, A0287, A0288, A0289, A0290, A0291	
Enter by region\ISUZU(North America)\2011\N-Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Mimamori ECU	✓	✓	✓	✓	A0242, A0243, A0244, A0245, A0246, A0247, A0248, A0249, A0250, A0251, A0252	
Enter by region\ISUZU(North America)\2010\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0383, A0304, A0265, A0384, A0385, A0267, A0268, A0270, A0271, A0135, A	

Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2009\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2009\C-Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2009\N/W Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	S0011
Enter by region\ISUZU (North America)\2009\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422, A0343	
Enter by region\ISUZU (North America)\2009\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2009\N/W Series w/6.0L Gas\AUTO\Powertrain Interface Module (PIM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2009\N/W Series w/6.0L Propane\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	S0011
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215



Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008i\C-Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0383, A0304, A0265, A0384, A0385, A0267, A0268, A0270, A0271, A0135, A0272, A0277, A0276, A0273, A0274	S0201, S0202, S0203, S0204, S0143, S0146, S0205, S0149, S0011
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Transmission		✓	✓	✓	A0293, A0049, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0383, A0304, A0265, A0384, A0385, A0267, A0268, A0270, A0271, A0135, A0272, A0277, A0276, A0273, A0274	S0201, S0202, S0203, S0204, S0143, S0146, S0205, S0149, S0011
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0049, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0383, A0304, A0265, A0384, A0385, A0267, A0268, A0270, A0271, A0135, A0272, A0277, A0276, A0273, A0274	S0201, S0202, S0203, S0204, S0143, S0146, S0205, S0149, S0011
Enter by region\ISUZU (North America)\2008\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0207, S0208, S0209, S0210, S0211, S0212, S0172, S0159, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		

Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0217, S0207, S0208, S0209, S0210, S0211, S0212, S0172, S0159, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2008\C-Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2008\N/W Series w/6.0L Gas\AUTO\Engine	✓	✓	✓	✓	A0013, A0310, A0311, A0049, A0352, A0353, A0354, A0317, A0355, A0356, A0357, A0358, A0359, A0360, A0361, A0362, A0363, A0330, A0364, A0313, A0270,	S0011
Enter by region\ISUZU (North America)\2008\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422, A0343	
Enter by region\ISUZU (North America)\2008\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2008\N/W Series w/6.0L Gas\AUTO\Powertrain Interface Module (PTM)		✓	✓	✓	A0374, A0375, A0263, A0376, A0377, A0378, A0379, A0380, A0381	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0217, S0207, S0208, S0209, S0210, S0211, S0212, S0172, S0159, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007i\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0387, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0207, S0208, S0209, S0210, S0211, S0212, S0146, S0216, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0049, A0261, A0050, A0267, A0265, A0386, A0268, A0270, A0271, A0135, A0388, A0389, A0277, A0276	S0206, S0143, S0149, S0217, S0207, S0208, S0209, S0210, S0211, S0212, S0172, S0159, S0146, S0213, S0201, S0202, S0203, S0204, S0214, S0215
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007i\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			

Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine		✓	✓	✓	A0049, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0149, S0146
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission		✓	✓	✓	A0293, A0335, A0295, A0296, A0425, A0422	
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Engine		✓	✓	✓	A0049, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0149, S0146
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Engine	✓	✓	✓	✓	A0049, A0260, A0261, A0262, A0263, A0383, A0304, A0265, A0384, A0385, A0267, A0268, A0270, A0271, A0135, A0272, A0277, A0276, A0273, A0274	S0201, S0202, S0203, S0204, S0143, S0146, S0205, S0149, S0011
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Transmission	✓	✓	✓	✓	A0293, A0049, A0294, A0295, A0296, A0297, A0298, A0299, A0300, A0301, A0302	
Enter by region\ISUZU (North America)\2007\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0382, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2007\N/W Series w/6.0L Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0375, A0428, A0270, A0083, A0323, A0366, A0321	
Enter by region\ISUZU (North America)\2007\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2007\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine		✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0216, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine		✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0216, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Engine		✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0216, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0336, A0337, A0340, A0390, A0295, A0296, A0297, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0401, A0402, A0403	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Engine		✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0216, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2007\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Engine		✓	✓	✓	A0049, A0376, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0217, S0149, S0157, S0146

Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\Transmission		✓	✓	✓	A0293, A0335, A0295, A0296, A0425, A0422	
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\MANUAL\Engine		✓	✓	✓	A0049, A0376, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0217, S0149, S0157, S0146
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Engine		✓	✓	✓	A0049, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0149, S0146
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\Transmission		✓	✓	✓	A0293, A0335, A0295, A0296, A0425, A0422	
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\Engine		✓	✓	✓	A0049, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0149, S0146
Enter by region\ISUZU (North America)\2006\N/W Series w/5.2L Diesel (4HK1)\Non-12,000 lb GVWR\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2006\N/W Series w/6.0L Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0375, A0428, A0270, A0083, A0323, A0366, A0321	
Enter by region\ISUZU (North America)\2006\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2006\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0340, A0390, A0429, A0430, A0431, A0391, A0392	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2006\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0340, A0390, A0429, A0430, A0431, A0391, A0392	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2006\H/C Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			

Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\Transmission	✓	✓	✓	✓	A0335, A0340, A0390, A0429, A0430, A0431, A0391, A0392	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2005i\F/T Series w/7.8L Diesel\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Transmission	✓	✓	✓	✓	A0335, A0340, A0390, A0429, A0430, A0431, A0391, A0392	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2005i\H/C Series w/7.8L Diesel\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2005\N/W Series w/5.2L Diesel\AUTO\Engine		✓	✓	✓	A0049, A0376, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0217, S0157, S0149, S0146
Enter by region\ISUZU (North America)\2005\N/W Series w/5.2L Diesel\AUTO\Transmission		✓	✓	✓	A0293, A0335, A0295, A0296, A0425, A0422	
Enter by region\ISUZU (North America)\2005\N/W Series w/5.2L Diesel\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2005\N/W Series w/5.2L Diesel\MANUAL\Engine		✓	✓	✓	A0049, A0376, A0262, A0263, A0423, A0383, A0304, A0267, A0265, A0050, A0404, A0135, A0270, A0424, A0276	S0201, S0202, S0203, S0204, S0143, S0206, S0217, S0157, S0149, S0146
Enter by region\ISUZU (North America)\2005\N/W Series w/5.2L Diesel\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2005\N/W Series w/6.0L Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0375, A0428, A0270, A0083, A0323, A0366, A0321	
Enter by region\ISUZU (North America)\2005\N/W Series w/6.0L Gas\AUTO\Transmission	✓	✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2005\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2005\F/T Series w/7.8L Diesel\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2005\F/T Series w/7.8L Diesel\AUTO\Transmission	✓	✓	✓	✓	A0335, A0340, A0390, A0429, A0430, A0431, A0391, A0392	
Enter by region\ISUZU (North America)\2005\F/T Series w/7.8L Diesel\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2005\F/T Series w/7.8L Diesel\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	



Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0213, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2004i\C-Series w/7.8L Diesel\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2004\N/W Series w/6.0L Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0270, A0083, A0323, A0366, A0321, A0364, A0317	
Enter by region\ISUZU (North America)\2004\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2004\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2004\N/W Series w/4.8L Diesel (4HE1)\AUTO\Engine	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004\N/W Series w/4.8L Diesel (4HE1)\AUTO\Transmission	✓	✓	✓		A0433, A0434, A0295, A0296, A0435, A0436, A0437, A0438, A0439, A0426	
Enter by region\ISUZU (North America)\2004\N/W Series w/4.8L Diesel (4HE1)\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2004\N/W Series w/4.8L Diesel (4HE1)\MANUAL\Engine	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004\N/W Series w/4.8L Diesel (4HE1)\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0432, A0340, A0390, A0429, A0430, A0431	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2004\C-Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0432, A0340, A0390, A0429, A0430, A0431	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	

Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2004\F/T Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (CAL) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0270, A0083, A0323, A0440, A0321, A0267, A0265, A0317	
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (CAL) Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (CAL) Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (FED) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0441, A0361, A0427, A0270, A0083, A0323, A0440, A0321, A0267, A0265	
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (FED) Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2003\N/W Series w/5.7L (FED) Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2003\N/W Series w/6.0L Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0270, A0083, A0323, A0366, A0321, A0364, A0317	
Enter by region\ISUZU (North America)\2003\N/W Series w/6.0L Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2003\N/W Series w/6.0L Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2003\N/W Series w/4.8L Diesel (4HE1)\AUTO\Engine	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2003\N/W Series w/4.8L Diesel (4HE1)\AUTO\Transmission	✓	✓	✓		A0433, A0434, A0295, A0296, A0435, A0436, A0437, A0438, A0439, A0426	
Enter by region\ISUZU (North America)\2003\N/W Series w/4.8L Diesel (4HE1)\AUTO\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2003\N/W Series w/4.8L Diesel (4HE1)\MANUAL\Engine	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2003\N/W Series w/4.8L Diesel (4HE1)\MANUAL\ABS		✓	✓	✓	A0426, A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Transmission	✓	✓	✓	✓	A0335, A0432, A0442, A0429, A0430, A0431, A0391, A0392, A0393, A0394, A0395, A0396, A0397, A0398, A0399, A0400, A0403	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\AUTO\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\Engine	✓	✓	✓	✓	A0267, A0050, A0049, A0135, A0404, A0423, A0270, A0387	S0201, S0202, S0203, S0204, S0214, S0215, S0208, S0143, S0206, S0207, S0149, S0211, S0146
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\ABS	✓	✓	✓	✓	A0404, A0405, A0406, A0407, A0369, A0408, A0409, A0410, A0411, A0412, A0413, A0414, A0415	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\Instrument Panel Cluster	✓	✓	✓	✓	A0416, A0417	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\Radio	✓	✓	✓	✓		
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\Chime Module (If Equipped)	✓	✓	✓	✓	A0418	
Enter by region\ISUZU (North America)\2003\C-Series w/7.8L Diesel (6HK1)\MANUAL\Serial Data Gateway Module (If Equipped)	✓	✓	✓			
Enter by region\ISUZU (North America)\2002\N/W Series w/5.7L (CAL) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0361, A0427, A0270, A0083, A0323, A0440, A0321, A0267, A0265, A0317	
Enter by region\ISUZU (North America)\2002\N/W Series w/5.7L (CAL) Gas\AUTO\Transmission		✓	✓	✓	A0335, A0420, A0421, A0340, A0422	
Enter by region\ISUZU (North America)\2002\N/W Series w/5.7L (CAL) Gas\AUTO\ABS		✓	✓	✓	A0121, A0368, A0369, A0370, A0123, A0371, A0124, A0372, A0125, A0373, A0126	





Enter by region\ISUZU(North America)\1999\N/W Series w/4.8L Diesel (4HE1)\AUTO\Engine	✓	✓	✓	✓		
Enter by region\ISUZU(North America)\1999\N/W Series w/4.8L Diesel (4HE1)\AUTO\Transmission	✓	✓	✓		A0433, A0434, A0295, A0296, A0435, A0436, A0437, A0438, A0439, A0426	
Enter by region\ISUZU(North America)\1999\N/W Series w/4.8L Diesel (4HE1)\MANUAL\Engine	✓	✓	✓	✓		
Enter by region\ISUZU(North America)\1998\N/W Series w/5.7L (CAL) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0267, A0361, A0427, A0270, A0321, A0083, A0323, A0265, A0443	
Enter by region\ISUZU(North America)\1998\N/W Series w/5.7L (CAL) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(North America)\1998\N/W Series w/5.7L (FED) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0354, A0267, A0361, A0427, A0270, A0321, A0083, A0323, A0265, A0444, A0443	
Enter by region\ISUZU(North America)\1998\N/W Series w/5.7L (FED) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(North America)\1997\N/W Series w/5.7L (CAL) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0267, A0361, A0427, A0083, A0323, A0444	
Enter by region\ISUZU(North America)\1997\N/W Series w/5.7L (CAL) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(North America)\1997\N/W Series w/5.7L (FED) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0267, A0361, A0427, A0083, A0323, A0444	
Enter by region\ISUZU(North America)\1997\N/W Series w/5.7L (FED) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(North America)\1996\N/W Series w/5.7L (CAL) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0267, A0361, A0427, A0083, A0323, A0444	
Enter by region\ISUZU(North America)\1996\N/W Series w/5.7L (CAL) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(North America)\1996\N/W Series w/5.7L (FED) Gas\AUTO\Engine		✓	✓	✓	A0049, A0013, A0353, A0267, A0361, A0427, A0083, A0323, A0444	
Enter by region\ISUZU(North America)\1996\N/W Series w/5.7L (FED) Gas\AUTO\Transmission		✓	✓	✓		
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1-TC(Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1(with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT(Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1-TC(Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1(with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT(Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(Australia 1)\(J)2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228

Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 1)\(J)2018\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\F series\6HK1\ZF9S1110\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(J)2018\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MY\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\MZ\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MY)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoothen (MZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoother (MZZ)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4HK1\Smoother (MZZ)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\MYY\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(J)2018\N series\4JJ1\Smoother (MYY)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(H)2017\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022

Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (H) 2017\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0244, S0245, S0246, S0247, S0248, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Engine\ecostop	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0244, S0245, S0246, S0247, S0248, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Transmission\Smoothner (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Transmission\Smoothner (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\Smoothner (MZW)\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(G)2016\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MYY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MY\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MY\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\MZZ\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MY)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4HK1\Smoothen (MZZ)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4JJ1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(G)2016\N series\4JJ1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS \ ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS \ ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ ABS \ ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Chassis \ ABS \ ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Option \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Chassis \ ABS / ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041

Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Option \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ MYT \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MYT) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Manual Selection \ Information \ Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(E)2014\F series\6HK1\MZW\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 1) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (D) 2013\FXFYGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (D) 2013\FXFYGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1) \ (D) 2013\FXFYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 1) \ (D) 2013\FXFYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228

Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(D)2013\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\4HK1\Smoothing (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228

Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(C)2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	



Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (C) 2012\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Transmission\Smooother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MY)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MZZ)\Manual Selection\Transmission\Smooother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MZZ)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (B) 2011\N series\4HK1\Smooother (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041

Enter by region\ISUZU (Australia 1)\(B)2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(B)2011\N series\4JJ1\Smoother (MYY)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\4HK1\Smooother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(9)2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	



Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\Smoother (MZW) \Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\Smoother (MZW) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\Smoother (MZW) \Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\Smoother (MZW) \Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\4HK1\Smoother (MZW) \Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\Smoothing (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1)\(8)2008\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Transmission\Smoothen (MYY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MYY)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Transmission\Smoothen (MZZ)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008\N series\4HK1\Smoothen (MZZ)\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS / ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS / ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 1) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Engine \ ECM : Engine Control Module	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Engine \ IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Engine \ ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Transmission \ AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Transmission \ Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Transmission \ TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Body \ WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Chassis \ EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Chassis \ Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Chassis \ SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Chassis \ SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Information \ AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ AWR6B45 \ Euro5 \ Manual Selection \ Information \ CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ MVL \ Euro5 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \ 2023 \ TF series \ 4JJ3 \ MVL \ Euro5 \ Manual Selection \ Engine \ ECM : Engine Control Module	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344

Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\4JJ3\MVL\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\ECM : Engine Control Module	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			

Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\AWR6B45\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Engine\ECM : Engine Control Module	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\TF series\RZ4E\MVL\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\ECM : Engine Control Module	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2023\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\AWR6B45\Euro5/6\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		



Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\TF Series\4JJ3\MVL\Euro5/6\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Engine\RZ4E	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\SRP (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Chassis\SRP (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\AWR6B45\Euro5\Manual Selection\Information\WIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Engine\RZ4E	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Chassis\SRP (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Chassis\SRP (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\TF Series\RZ4E\MVL\Euro5\Manual Selection\Information\WIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\AT	✓	✓	✓			

Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2022\UC series\4JJ3\AWR6B45\Euro5\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			

Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336, S0341, S0342, S0343, S0344
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓			

Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Australia 2)\2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2020\TF series\4JJ3\MVL\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234



Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2019\UC series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2018\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228

Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017.5\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254



Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 2)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\MUL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Australia 2) \2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2014\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Australia 2) \2014\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234



Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2014\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\MUL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2)\2012\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 2) \2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0245, S0246, S0247, S0248, S0268, S0043, S0269, S0234, S0270, S0030
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Engine\ecostop	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS\ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0245, S0246, S0247, S0248, S0268, S0043, S0269, S0234, S0270, S0030
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Engine\ISS/HSA(ecostop)/HSA/BLS/VCM)	✓	✓	✓	✓		S0353, S0354, S0234, S0345, S0355, S0352
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Transmission\Smoothing-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Meter	✓					

Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0030
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\CAN Converter (Engine)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Transmission\Allison 2500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 2500\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0030
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Engine\CAN Converter (Engine)	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3060\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0030
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Engine\CAN Converter (Engine)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3)\2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\Allison 3560\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0030
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Engine\CAN Converter (Engine)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Engine\ecostop	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓		✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0030
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\CAN Converter (Engine)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\ecostop	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356

Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS\ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		S0395
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Engine\6UZ1-TC	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0268, S0234, S0030
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Chassis\ABS6/IESC	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Engine\6UZ1-TC	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0268, S0234, S0030
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\RT011908/11909\Euro5\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Engine\6UZ1-TC	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0268, S0234, S0030
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2022\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer Control Device (stand-alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\MY\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0268, S0234, S0030
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\MY\No Options\Manual Selection\Engine\ISS/HSA (ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\MY\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0268, S0234, S0030
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\ISS/HSA(ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0268, S0234, S0030
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Engine\ISS/HSA(ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Transmission\Smother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0268, S0234, S0030
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MZZ)\No Options\Manual Selection\Engine\ISS/HSA(ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3)\2021\N series\4HK1\Smother (MZZ)\No Options\Manual Selection\Transmission\Smother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242

Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4HK1\Smoother (MZZ) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Engine\4JJ1-TC	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0270, S0030
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Engine\ISS/HSA(ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\MYV\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Engine\4JJ1-TC	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234, S0270, S0030
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Engine\ISS/HSA(ecostop/HSA)	✓	✓	✓			S0354, S0234, S0345, S0353
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \2021\N series\4JJ1\Smoother (MYV) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0245, S0246, S0247, S0248, S0268, S0043, S0269, S0234, S0270, S0244



Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0245, S0246, S0247, S0248, S0268, S0043, S0269, S0234, S0270, S0244
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479, A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0229, S0228, S0219
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479, A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0229, S0228, S0219

Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479, A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0229, S0228, S0219
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479, A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0229, S0228, S0219
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479, A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0229, S0228, S0219
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (K) 2019\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018\N series\4HK1\MYY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ MZZ \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334

Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (J) 2018 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ WIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Transmission \ AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Chassis \ ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Chassis \ Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Information \ Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Information \ Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Chassis \ ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Chassis \ Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Information \ Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Information \ Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ F series \ 6HK1 \ MZW \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ FXFYGX series \ 6UZ1 \ Allison 4430 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (H) 2017 \ FXFYGX series \ 6UZ1 \ Allison 4430 \ Manual Selection \ Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228

Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (H) 2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0244, S0245, S0246, S0247, S0248, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Engine\ecostop	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\MTMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device (stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smoothing (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smoothing (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0271, A0229, A0485, A0385, A0066, A0172, A0456	S0243, S0244, S0245, S0246, S0247, S0248, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022

Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\4HK1\Smooother (MZW) \Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 8		✓	✓		A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022



Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW) R8	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\FXFYGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\FXFYGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228

Enter by region\ISUZU (Australia 3) \ (G) 2016\FXYGX series\6UZI\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (G) 2016\FXYGX series\6UZI\Allison 4430\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\FXYGX series\6UZI\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\FXYGX series\6UZI\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MYT\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\MZZ\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MYT)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016\N series\4HK1\Smoothing (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4HK1 \ Smoother (MZZ) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (G) 2016 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ Euro5 with DPD \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ MZZ \ No Options \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ Euro5 with DPD \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4HK1 \ Smoother (MZZ) \ No Options \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ Hill Hold Assist	✓	✓	✓			S0389, S0356
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ MY \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS / ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (F) 2015 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014 \ F series \ 4HK1 \ MZW \ Auto scan	✓	✓	✓			

Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Information\CAN Converter(FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0480	S0230

Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Transmission\Smoothing-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\Smoothing (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		S0231, S0228
Enter by region\ISUZU (Australia 3) \ (E) 2014\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\RT011908/11909\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (D) 2013\FXYFGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228



Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022

Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022



Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro4 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Manual Selection \ Transmission \ Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (C) 2012 \ N series \ 4JJ1 \ Smoother (MY) \ Euro5 with DPD \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Chassis \ Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ MZW \ Manual Selection \ Information \ Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Transmission \ Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Transmission \ Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Chassis \ ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Chassis \ Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 4HK1 \ Smoother (MZW) \ Manual Selection \ Information \ Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 6HK1 \ Allison 2500 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011 \ F series \ 6HK1 \ Allison 2500 \ Manual Selection \ Transmission \ AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228

Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\RT011908/11909\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (B) 2011\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\4HK1\Smooother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228

Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (9) 2009\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\4HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8)2008\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228

Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008\N series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MY) \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Transmission \ Smoother (MZ)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4HK1 \ Smoother (MZ) \ Manual Selection \ Body \ SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Chassis \ HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ MY \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Transmission \ Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Chassis \ ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Australia 3) \ (8) 2008 \ N series \ 4JJ1 \ Smoother (MY) \ Manual Selection \ Body \ Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJT \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJT \ Manual Selection \ Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJT \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJT \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJX16 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJX16 \ Manual Selection \ Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJX16 \ Manual Selection \ Body \ SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong) \ 2019 \ C&E series \ 6WG1 \ MJX16 \ Manual Selection \ Information \ MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong) \ 2019 \ FXFYGX series \ 6UZ1 \ Allison 4430 \ Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong) \ 2019 \ FXFYGX series \ 6UZ1 \ Allison 4430 \ Manual Selection \ Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247

Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\MJL\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228



Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\F series\6HK1\ES011306A\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\MAL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\MAL\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\MAL\Manual Selection\Information\CAN Converter(FMS)	✓	✓	✓	✓		S0231, S0228
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\MAL\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\MAL\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Manual Selection\Transmission\T310 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Manual Selection\Information\CAN Converter(FMS)	✓	✓	✓	✓		S0231, S0228
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\LT series\6HK1\T310\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\MZZ\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\MZZ\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Transmission\Smooter-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\N series\4HK1\Smooter (MZZ)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJT\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJT\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJX16\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJX16\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJX16\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\C&E series\6WG1\MJX16\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smooter (MZW)\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\F series\6HK1\ES011306A\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\MJL\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0066, A0172, A0485, A0385, A0229, A0271, A0456	S0273, S0274, S0246, S0229, S0247
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device(internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\MAL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\MAL\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\MAL\Manual Selection\Information\CAN Converter(FMS)	✓	✓	✓	✓		S0231, S0228
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\MAL\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\MAL\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Manual Selection\Transmission\T310 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Manual Selection\Information\CAN Converter(FMS)	✓	✓	✓	✓		S0231, S0228
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\LT series\6HK1\T310\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\MZZ\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Transmission\Smooter-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\N series\4HK1\Smooter (MZZ)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\MZZ\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Transmission\Smoothen (MZZ)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0234
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\4HK1\Smoothen (MZZ)\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZZ)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0234
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\Smoothen (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\Smoothen (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0479	S0218, S0229, S0228
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\Smoothen (MZW)\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2014\LT series\6HK1\Smoothen (MZW)\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2014\N series\4JJ1\TMM\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\N series\4JJ1\TMM\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0169, A0065, A0170, A0224, A0230, A0172	S0243, S0268, S0234
Enter by region\ISUZU (Hong Kong)\2014\N series\4JJ1\TMM\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJT\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJT\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJT\Manual Selection\Information\MMAMORI	✓	✓	✓	✓		



Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJX16\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJX16\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJX16\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJX16\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\MJX16\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Manual Selection\Transmission\Smother-G	✓	✓	✓	✓	A0047, A0100, A0080, A0561	S0282, S0234
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX12)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Manual Selection\Transmission\Smother-G	✓	✓	✓	✓	A0047, A0100, A0080, A0561	S0282, S0234
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\C&E series\6WG1\Smother-G (MJX16)\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\Allison 4430\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MAL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MAL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MAL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MAL\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MAL\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MJT\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MJT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\MJT\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228

Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2013\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2013\N series\4JJ1\TMM\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\N series\4JJ1\TMM\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0169, A0065, A0170, A0224, A0230, A0172	S0243, S0268, S0234
Enter by region\ISUZU (Hong Kong)\2013\N series\4JJ1\TMM\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276

Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\Smooter (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\MJT\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\MJT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smooter (MYY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smooter (MYY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smooter (MYY)\Manual Selection\Transmission\Smooter-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smooter (MYY)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MY) \Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MY) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MY) \Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4HK1\Smoothen (MZZ) \Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\N series\4JJ1\Smoothen (MY) \Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0228, S0043, S0276
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Hong Kong)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0238, S0240
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022



Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\MJT\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\MJT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\MZZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MY)\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\MYF\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2011\N series\4JJ1\Smoother (MYF)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\MJT\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\MJT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2010\FXYGX series\6UZ1\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022

Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2009\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\4HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 2500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Allison 3000/3500\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Fuller FS8209\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MLD\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\MZW\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smooter (MZW)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smooter (MZW)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smooter (MZW)\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smooter (MZW)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smoother (MZW)\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smoother (MZW)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smoother (MZW)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smoother (MZW)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\Smoother (MZW)\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\F series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\MZ\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Transmission\Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MY)\Manual Selection\Body\SRS	✓	✓	✓	✓		



Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Transmission\Smoother (MZZ)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4HK1\Smoother (MZZ)\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Manual Selection\Chassis\HSA	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\MYF\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Manual Selection\Transmission\Smoother (MYF)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Hong Kong)\2008\N series\4JJ1\Smoother (MYF)\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0166, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2020\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2020\P series\4JA1\MTA\Engine	✓	✓	✓	✓	A0111, A0232, A0574, A0267, A0049, A0260	S0283, S0284, S0228
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\SRP (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Chassis\SRP (Rear Right)	✓	✓	✓	✓		

Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\AWR6B45\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2020\TF series\4JJ3\MVL\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0166, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2019.5\F series\4HK1\MZZ\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2019.5\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0166, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Philippines)\2019\F series\4HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228

Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Philippines)\2019\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Engine	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MSG\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Engine	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JA1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		



Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018.5\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018.5\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228, S0043, S0285
Enter by region\ISUZU (Philippines)\2018.5\N series\4HK1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Philippines)\2018.5\N series\4HK1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Philippines)\2018.5\N series\4HK1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\QJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\QJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\QJT\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\QJT\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\MJX16\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\MJX16\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\MJX16\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Philippines)\2018\C&E series\6WG1\MJX16\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ES11109\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ES11109\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ES11109\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ES11109\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ES11109\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228

Enter by region\ISUZU (Philippines)\2018\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\F series\6HK1\ZF6S1000\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2018\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0228, S0043, S0285
Enter by region\ISUZU (Philippines)\2018\N series\4HK1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Philippines)\2018\N series\4HK1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Philippines)\2018\N series\4HK1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\N series\4JH1\MSB\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\N series\4JH1\MSB\Manual Selection\Engine	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583, A0584, A0585	S0234, S0268, S0286, S0287, S0288
Enter by region\ISUZU (Philippines)\2018\N series\4JH1\MSB\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Philippines)\2018\N series\4JH1\MSB\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Philippines)\2018\N series\4JH1\MSB\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\N series\4JJ1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\N series\4JJ1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0169, A0065, A0170, A0224, A0230, A0172	S0243, S0268, S0234
Enter by region\ISUZU (Philippines)\2018\N series\4JJ1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Philippines)\2018\N series\4JJ1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Philippines)\2018\N series\4JJ1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		

Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228

Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2018\UC series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.5\UC series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJT\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJT\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJX16\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJX16\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJX16\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by region\ISUZU (Philippines)\2017.C&E series\6WG1\MJX16\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.Q series\4JH1\MSB/JC52\Engine	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583, A0584, A0585	S0234, S0268, S0286, S0287, S0288
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MSG\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MTA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MTA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017.TF series\4JA1\MTA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254



Enter by region\ISUZU (Philippines)\2017\TF series\4JA1\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JA1\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JA1\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JA1\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					

Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\AUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228

Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\F series\4HK1\MZZ\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2016\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0228
Enter by region\ISUZU (Philippines)\2016\F series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Philippines)\2016\F series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Philippines)\2016\F series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	



Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MUA\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Philippines)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\AWR6B45\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2020\TF Series\4JJ3\MVL\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0234
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2019\F series\4HK1\MZW\Euro2\Euro3\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\ES11109\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\ES11109\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\ES11109\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\ES11109\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\MZW\Manual Selection\Body\Meter	✓					

Enter by region\ISUZU (Malaysia)\2019\F series\6HK1\MZW\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\FGX series\6NX1\MEB9\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\FGX series\6NX1\MEB9\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0169, A0065	S0218, S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Manual Selection\Transmission\Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2019\N series\4HK1\Smoother (MY)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2019\N series\4JJ1\Smoother (MY)\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Engine	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Engine	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JA1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		

Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		



Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\AWR6B45\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\MVL\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JJ1\TB-50LS\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\MUA\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		

Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\4JK1\TB-50LS\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\AWR6B45\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2019\UC series\RZ4E\MVL\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		

Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JA1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\TF series\R24E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\TF series\R24E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\TF series\R24E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\TF series\R24E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\TF series\R24E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254



Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\AWR6B45\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\MVL\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JJ1\TB-50LS\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\MUA\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2018\UC series\4JK1\TB-50LS\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017.5\UC series\4JK1\TB-50LS\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\FXFGX series\6UZ1\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (Malaysia)\2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2017\FXFGX series\6UZ1\ZF9S1310\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2017\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4HK1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\N series\4HK1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4HK1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2017\N series\4HL1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\N series\4HL1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0478, A0169, A0065	S0218, S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\N series\4HL1\MY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\N series\4HL1\MY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4HL1\MY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2017\N series\4JH1\MSB\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2017\N series\4JH1\MSB\Manual Selection\Engine	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583, A0584, A0585	S0234, S0268, S0286, S0287, S0288
Enter by region\ISUZU (Malaysia)\2017\N series\4JH1\MSB\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\N series\4JH1\MSB\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4JH1\MSB\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2017\N series\4JJ1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\N series\4JJ1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4JJ1\MYY\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\N series\4JJ1\MYY\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (Malaysia)\2017\N series\4JJ1\MYY\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MSG\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JAI\MTA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MUX\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\AY6\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\R24E\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\R24E\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\R24E\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\R24E\AWR6B45\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\R24E\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234

Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\TF series\RZ4E\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\AWR6B45\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		

Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\MVL\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\MTA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		



Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2017\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	

Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\TF series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\MUX\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\MUA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0532, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2016\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Manual Selection\Transmission\Allison 3000/3500	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\Allison 30000/3500\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2015\F&G series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2015\N series\4HK1\MY\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Malaysia)\2015\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2015\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2015\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\N series\4JH1\MSB\Engine	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583, A0584, A0585	S0234, S0268, S0286, S0287, S0288
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254

Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JJ1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228

Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\MTA\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2015\UC series\4JK1\TB-50LS\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2014\F&G series\4HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\FS05206B\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\FS05206B\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\FS05206B\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\FS05206B\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\FS05206B\Manual Selection\Information\Speedometer control device	✓			✓		S0228

Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2014\F&G series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2014\N series\4HK1\MY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2014\N series\4HK1\MY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2014\N series\4HK1\MY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2014\N series\4HK1\MY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2014\N series\4JH1\MSB\Engine	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583, A0584, A0585	S0234, S0268, S0286, S0287, S0288
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\F&G series\4HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\Allison 2500\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\FS05206B\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\FS05206B\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\FS05206B\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\FS05206B\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\FS05206B\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\MZW\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\MZW\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\MZW\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\MZW\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041

Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\MZW\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\ZF9S1110\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\ZF9S1110\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\ZF9S1110\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\ZF9S1110\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\F&G series\6HK1\ZF9S1110\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MAL\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MAL\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MAL\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MAL\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MAL\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MJT\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MJT\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MJT\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MJT\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\MJT\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\ZF9S1310\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\ZF9S1310\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\ZF9S1310\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\ZF9S1310\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\FXFGYX series\6UZI\ZF9S1310\Manual Selection\Information\Speedometer control device	✓			✓		S0228
Enter by region\ISUZU (Malaysia)\2013\N series\4HK1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\N series\4HK1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\N series\4HK1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\N series\4HK1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\N series\4JJ1\MYY\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\N series\4JJ1\MYY\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU (Malaysia)\2013\N series\4JJ1\MYY\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Malaysia)\2013\N series\4JJ1\MYY\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MTA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MTA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MTA\Manual Selection\Body\Meter	✓					



Enter by region\ISUZU (Malaysia)\2013\TF series\4JAI\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2013\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MSG\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MSG\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MSG\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MSG\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MUA\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JA1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\MUX\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JJ1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\MUA\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Malaysia)\2012\TF series\4JK1\TB-50LS\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1)\2009\F&G series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1)\2009\F&G series\4HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 1)\2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1)\2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1)\2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		



Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Transmission\Smoother (MZX)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234



Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Transmission\Smother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (South Africa 1) \2011\F series\4HK1\Smother (MZW) \No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2011\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JA1\MTA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JA1\MTA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JA1\MTA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JA1\MTA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\MTA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		



Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0619, A0620, A0621, A0622, A0320, A0623, A0624, A0625, A0626, A0627, A0628, A0629, A0324, A0325, A0330	S0290, S0291, S0292, S0293, S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234

Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Transmission\Smother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\Smother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2013\N series\4HK1\MYT\No Options\Auto scan	✓	✓	✓			

[illegible]

Enter by region\ISUZU(South Africa 1)\2014\N series\4HK1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2014\N series\4HK1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2014\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2015\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JA1\MOA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JA1\MOA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JA1\MOA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JA1\MOA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JA1\MOA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MOA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		



Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Transmission\Smoother (MZX)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\MLD\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

[illegible]



Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JA1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			

Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Transmission\Smooother (MZX)	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2017\F&G series\4HK1\Smooother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Transmission\Smooother (MZX)	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2017\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Transmission\Allison 4430(Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU(South Africa 1)\2017\FXFGYX series\6UZ1\Allison 4430\Euro3\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228

Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\MY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\MY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\Smoother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\N series\4HK1\Smoother (MY)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234

Enter by region\ISUZU(South Africa 1)\2017\N series\4HK1\Smoother (MY) \No Options\Manual Selection\Transmission\Smoother(MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU(South Africa 1)\2017\N series\4HK1\Smoother (MY) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4HK1\Smoother (MY) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4HK1\Smoother (MY) \No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Transmission\Smoother(MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 1)\2017\N series\4JJ1\Smoother (MY) \No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JA1\MTA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\9JS150TA-B\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\9JS150TA-B\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\9JS150TA-B\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 1) \2018\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		



Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0228
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\IBS(Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\IBS(Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Engine\IBS(Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234

Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255

Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		

Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS(Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517	S0229, S0228
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS(Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0234
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓	A0416, A0538	S0253, S0254
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System(Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU(South Africa 1)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 1)\2021\UC series\4JJ3\AWR6B45\No Options\Auto scan	✓	✓	✓			

Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓			
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 1) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MLD\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2009\F&G series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041





Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Transmission\Smoother (MZX)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2009\F&G series\4HK1\Smoother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MLD\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2009\F&G series\6HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

[illegible]

Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2009\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0586, A0587	S0268, S0234
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2010\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (South Africa 2) \2011\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2013\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228

Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385	S0218, S0219, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\F series\4HK1\MZZ\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\Smooother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\F series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2013\FXYGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\MYY\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Transmission\Smoothen (MYY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4HK1\Smoothen (MYY)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\Smoothen (MYY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2013\N series\4JJ1\Smoothen (MYY)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586	S0260, S0268, S0234







Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\MZZ\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZW) \No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Transmission\Smooother (MZX)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2016\F&G series\4HK1\Smooother (MZX) \No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\Allison 3000/3500\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\MLD\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU (South Africa 2) \2016\F&G series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Transmission\Smooother (MZX)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022, S0232, S0233
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\Smooother (MZX)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF6S1000\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0055, A0056, A0586, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU(South Africa 2)\2016\F&G series\6HK1\ZF9S1110\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588	S0260, S0268, S0234
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Transmission\Smooother (MZW)	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0562	S0275, S0234
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU(South Africa 2)\2017\F&G series\4HK1\Smooother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022



Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro3\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Transmission\Allison 4430 (Gen 5)	✓	✓	✓	✓	A0480	S0230
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\Allison 4430\Euro5\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Body\Airbag SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0588, A0589, A0056, A0586	S0268, S0234
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro3\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0486, A0066, A0271, A0487, A0488	S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (South Africa 2) \2017\FXFGX series\6UZ1\ZF9S1310\Euro5\Manual Selection\Information\Speedometer control device(stand alone)	✓			✓		S0228
Enter by region\ISUZU (South Africa 3) \2012\TF series\4JA1\4JA1\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓			



Enter by region\ISUZU (South Africa 3) \2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Powertrain Interface Module	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2012\TF series\Z24SED\FS02105\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JA1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2015\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263	S0229, S0228





Enter by region\ISUZU (South Africa 3) \2016\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2017\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2018\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2018\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JA1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MUX\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\TF series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0262, A0263, A0517, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			



Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0261, A0484, A0511, A0512, A0513, A0514, A0515, A0516, A0517, A0262, A0263, A0456, A0518, A0519	S0229, S0228
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\TPMS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\AWR6B45\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\4JJ3\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\PTM (Power Tailgate Module)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		

Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\EPS	✓	✓	✓			
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (South Africa 3) \2021\UC series\RZ4E\MVL\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\ES11109\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\MZW\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro2/Euro3, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro2/Euro3, Full air brake\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro2/Euro3, Full air brake\Manual Selection\Engine\4JJ1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro2/Euro3, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro2/Euro3, Full air brake\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro4 with DOC, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro4 with DOC, Full air brake\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro4 with DOC, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro4 with DOC, Full air brake\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2012\N series\4HK1\MYE\Euro4 with DOC, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia) \2013\F series\4HK1\MZZ\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia) \2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	S0219

Enter by region\ISUZU (Colombia)\2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2013\F series\6HK1\MZW\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2014\LV series\6WG1\MJT\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\LV series\6WG1\MJT\No Options\Manual Selection\Engine\6WG1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2014\LV series\6WG1\MJT\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\LV series\6WG1\MJT\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro5 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2014\N series\4JH1\MSB\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4JH1\MSB\No Options\Manual Selection\Engine\4JH1	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583	
Enter by region\ISUZU (Colombia)\2014\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MY\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MY\Euro4 with DOC\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0481	
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MY\Euro4 with DOC\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MY\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2014\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2015\N series\4JH1\MSB\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\N series\4JH1\MSB\No Options\Manual Selection\Engine\4JH1	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583	
Enter by region\ISUZU (Colombia)\2015\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0481	
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS/ASR	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2015\N series\4JJ1\MYY\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0335
Enter by region\ISUZU (Colombia)\2015\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Engine\Z24SED	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Powertrain Interface Module	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2015\TF series\Z24SED\FS02105\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0335
Enter by region\ISUZU (Colombia)\2016\N series\4HK1\MYY\Euro5 with DOC, Full air brake\Auto scan	✓	✓	✓			

Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0232	
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC, Full air brake\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0232	
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro5 with DOC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0232	
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Body\SRS(Denso)	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU(Colombia)\2016\N series\4HK1\MY\Euro4 with DOC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0335
Enter by region\ISUZU(Colombia)\2016\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\Z24SED\FS02105\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU(Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Engine\Z24SED	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU(Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\Powertrain Interface Module	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2016\TF series\Z24SED\FS02105\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0335
Enter by region\ISUZU (Colombia)\2017\N series\4HV1\MYF\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2017\N series\4HV1\MYF\No Options\Manual Selection\Engine\4HV1 CNG	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017\N series\4HV1\MYF\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓	A0416, A0538	S0335
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2017.5\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Manual Selection\Engine\6WG1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJT\Euro5\Manual Selection\Information\Speedometer Control Device	✓			✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Manual Selection\Engine\6WG1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\MJX16\Euro5\Manual Selection\Information\Speedometer Control Device	✓			✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Manual Selection\Engine\6WG1-TC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\C&E series\6WG1\RTL016918\Euro5\Manual Selection\Information\Speedometer Control Device	✓			✓		



Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0481	
Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2018\N series\4JJ1\MY\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\Euro5\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\N series\4HK1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Manual Selection\Engine\4JH1/4KH1	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583	
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2019\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\TF series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234

Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Engine\4JJ1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JJ1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\MUA\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\4JK1\TB-50LS\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Manual Selection\Engine\R24E	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\R24E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS/ESC R9	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2019\UC series\RZ4E\MVL\No Options\Manual Selection\Chassis\ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2020\N series\4HK1\MY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Manual Selection\Engine\4JH1/4KH1	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0270, A0581, A0582, A0583	
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2020\N series\4JH1\MSB\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275

Enter by region\ISUZU (Colombia)\2020\N Series\4JJ3\MSB\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\4JJ3\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\AWR6B45\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2020\TF Series\RZ4E\MVL\No Options\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0456, A0232	S0219
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2021\F series\4HK1\MZZ\Euro4 with DOC\Manual Selection\Information\Speedometer Control Device	✓			✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Engine\6HK1 (with DOC)	✓	✓	✓	✓	A0232	
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2021\F series\6HK1\ES11109\Euro4 with DOC\Manual Selection\Information\Speedometer Control Device	✓			✓		
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MYF\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1-TC	✓	✓	✓	✓	A0456, A0232	S0043, S0285, S0219
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		

Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0481	
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS 8		✓	✓			
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Colombia)\2021\N series\4JJ1\MYY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\AWR6B45\Euro4\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Engine\4JJ3	✓	✓	✓		A0456	S0337, S0338, S0043, S0339, S0340, S0268, S0030, S0336
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Engine\ISS	✓	✓	✓	✓		



Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Colombia)\2022\TF Series\4JJ3\MVL\Euro4\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2008\F series\4HK1\Smother (MZW)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2008\F series\4HK1\Smother (MZW)\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2008\F series\4HK1\Smother (MZW)\Euro4 with DPD\Manual Selection\Transmission\Smother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022



[illegible]

Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			

Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			

Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\Smooter (MZW)\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2010\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2011\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2011\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228



Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2011\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Smother (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Smother (MZW) \No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Smother (MZW) \No Options\Manual Selection\Transmission\Smother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2011\F series\6HK1\Smother (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041

Enter by region\ISUZU (Poland)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MYV)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2011\N series\4HK1\Smoother (MZZ)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\MYE\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\MYE\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\MYE\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\MYE\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\MYE\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro4 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro4 with DPD\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro5 with DPD\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2011\N series\4JJ1\Smoother (MYE)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234

Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\4HK1\Smoother (MZW) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234

Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2012\N series\4HK1\MYV\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2012\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2012\N series\4HK1\MYV\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041



Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2013\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2013\F series\4HK1\Smoothing (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\F series\4HK1\Smoothing (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland)\2013\F series\4HK1\Smoothing (MZW)\No Options\Manual Selection\Transmission\Smoothing-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242

Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2013\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2013\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		



Enter by region\ISUZU (Poland)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT (Aisin AW)	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT (Aisin AW)	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2014\F series\4HK1\MZW\No Options\Manual Selection\Information\MTMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2014\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Information\MTMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334

Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4HK1\Smoothen (MZZ) \Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoothen (MYY) \Euro6\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359

Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoother (MY) \Euro6\Manual Selection\Transmission\Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoother (MY) \Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoother (MY) \Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoother (MY) \Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\N series\4JJ1\Smoother (MY) \Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\With ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\Without ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\F series\4HK1\Smooter (MZW)\Without ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229

Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland)\2015\F series\4HK1\Smoother (MZW)\Without ESC\Manual Selection\Information\WIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year first half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2015\N series\4JJ1\MYV\Euro5, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275

Enter by region\ISUZU (Poland)\2015\N series\4JJ1\MYE\Euro5, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Transmission\Smooth (MYE)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Transmission\Smooth (MYE)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Transmission\Smooth-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Transmission\Smooth-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2015\N series\4JJ1\Smooth (MYE)\Euro5, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2016\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351



Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Information\WIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland) \2017\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Transmission\Smooter (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Information\WIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Poland) \2017\F series\4HK1\Smooter (MZW) \No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349

Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\MYY\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234

Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Transmission\Smoothen (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0200, S0241
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2017\N series\RZ4E\Smoothen (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2017\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372

Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234

Enter by region\ISUZU (Poland) \2018\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Transmission\Smoothing-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\F series\4HK1\Smoothing (MZW) \No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2018\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2018\N series\4HK1\Smoothing (MZZ) \No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\MYV\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2018\N series\4JJ1\Smoothing (MYV) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380

Enter by region\ISUZU (Poland)\2018\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2018\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2018\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland)\2018\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372



Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234

Enter by region\ISUZU (Poland) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2019\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2019\N series\4HK1\Smoothen (MZZ) \No Options\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓		✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		

Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Body\BAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\N series\4JJ1\Smoothing (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2020\N series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0688	
Enter by region\ISUZU (Poland)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Poland) \2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland) \2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380

Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothing-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\4HK1\Smoothing (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393



Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\MY\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Transmission\Smother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0688	
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland) \2021\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\MYF\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Transmission\Smother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Poland) \2022\N series\4JZ1\Smother (MYF)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	

Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓				S0030
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	S0254, S0253, S0392
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓				
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓		
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓				S0030
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	S0254, S0253, S0392
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓	
Enter by region\ISUZU (Poland) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓	

Enter by region\ISUZU (Poland)\2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		

Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Poland)\2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0456, A0232	
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\4HK1\Smoothen (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			



Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MLD\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MLD\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\MZW\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2008\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2009\F series\4HK1\Smoothen (MZW) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 2500\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234



Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Allison 3000/3500\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\FS8209\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smother (MZW)\Euro4 with DPD\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Transmission\Smoother (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\Smoother (MZW)\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2009\F series\6HK1\ZF9S1110\Euro4 with DPD\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		

Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2010\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			

Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267

Enter by region\ISUZU (Portugal)\2011\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\MY\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\MY\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\MY\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\MY\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\MY\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2011\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 2500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Transmission\AT (Allison)	✓	✓	✓	✓	A0489, A0490, A0491, A0492, A0493, A0295, A0494, A0495, A0496, A0497	S0228
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Allison 3000/3500\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\FS05206B\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			



Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\F series\6HK1\ZF9S1110\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MY\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\MZZ\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4HK1\Smoothen (MZZ)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\MYY\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\MYY\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\MYY\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\MYY\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\MYY\Euro5 with DPD\Manual Selection\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro4 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Engine\4JJ1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\N series\4JJ1\Smoothen (MY)\Euro5 with DPD\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\AY6\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2012\TF series\4JK1\TB-50LS\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Transmission\Smooter-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smooter (MZW)\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			

Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2013\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MLD\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Engine\6HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0385, A0456	S0218, S0219, S0268, S0043, S0285, S0234
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		S0040, S0041
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS 6	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\ABS\ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2013\F series\6HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT (Aisin AW)	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0456, A0518	S0229, S0268, S0043, S0276, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT (Aisin AW)	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2013\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\MZW\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2014\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal)\2014\N series\4HK1\MZZ\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\N series\4HK1\MZZ\Euro6\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2014\N series\4HK1\MZZ\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2014\N series\4HK1\MZZ\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\MZZ\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4HK1\Smoothen (MZZ)\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\MYY\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro5\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Manual Selection\Transmission\Smoothen (MYY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2014\N series\4JJ1\Smoothen (MYY)\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2014\N series\4JJ1\Smoother (MY)\Euro6\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\AY6\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2014\TF series\4JK1\TB-50LS\Manufactured until Sep. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\MZW\With ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\MZW\With ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\MZW\With ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\With ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\MZW\Without ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Chassis\ABS/ASR ADVICS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \Without ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Engine\4HK1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2015\F series\4HK1\Smoothen (MZW) \With ESC\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234



Enter by region\ISUZU (Portugal)\2015\F series\4HK1\Smoother (MZW)\With ESC\Manual Selection\Chassis\EBRS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\Smoother (MZW)\With ESC\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\F series\4HK1\Smoother (MZW)\With ESC\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\MZZ\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351

Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4HK1\Smoother (MZZ)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\MY\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242

Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Transmission\Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year first half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Transmission\Smoother (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro6, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Engine\4JJ1 Euro5	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2015\N series\4JJ1\Smoother (MY)\Euro5, 2015 model year second half\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\AY6\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Engine\4JK1	✓	✓	✓	✓	A0456, A0269, A0508, A0509, A0510, A0483, A0484, A0511, A0512, A0513, A0514, A0515, A0517, A0518	S0043, S0276, S0229, S0268, S0234
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0543, A0523, A0524, A0544, A0545, A0546	S0256, S0234
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2015\TF series\4JK1\TB-50LS\IUPR compliant, manufactured from Oct. 2013\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2016\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal)\2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	

Enter by region\ISUZU (Portugal) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\MZW\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen (MZW)	✓	✓	✓	✓		S0225, S0226, S0227, S0020, S0022
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by region\ISUZU (Portugal) \2017\F series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2017\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoothen (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Transmission\Smoothen (MY)	✓	✓	✓	✓		S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoothen (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349

Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2017\N series\RZ4E\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2017\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoothing (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoothing (MZW)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoothing (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357



Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device (internal speedometer)	✓			✓		S0228
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		



Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\MVC\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Transmission\Smooter-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2018\N series\RZ4E\Smooter (MY) \No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349

Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2018\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\Smoother (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357

Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Transmission\Smoother-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\CAN Converter (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2019\F series\4HK1\Smoother (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\17 MITAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349

Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4HK1\Smoother (MZZ)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\MY\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Engine\4JJ1-TC with Urea SCR	✓	✓	✓	✓	A0265, A0269, A0691, A0483, A0481, A0271, A0485, A0574, A0267, A0306, A0172, A0616, A0617, A0618	S0358, S0356, S0357, S0359
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Transmission\Smoother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275

Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\N series\4JJ1\Smoother (MY)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0520, A0521, A0522, A0523, A0524, A0525, A0526, A0527, A0528	S0252, S0234
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\ISS	✓	✓	✓	✓		S0356, S0373
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Transmission\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\BCM	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		S0349
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\Passive Entry and Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2019\TF series\RZ4E\MVL\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0688	
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275



Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\AWR6B45\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Portugal)\2020\TF Series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓			

Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2020\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2021\F Series\4HK1\MZW\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234

Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\MZW\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Transmission\Smoothen-Fx	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Camera (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Meter	✓					
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\RADAR (VAT)	✓					S0349
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Body\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\EBS (Knorr)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Chassis\HSA (ISS&HSA)	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\CAN Converter (FMS)	✓	✓		✓		
Enter by region\ISUZU (Portugal)\2021\F Series\4HK1\Smoothen (MZW)\No Options\Manual Selection\Information\Speedometer Control Device	✓			✓		S0228
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\I7 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357

Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\MZZ\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\No Options\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\4HK1	✓	✓	✓	✓	A0061, A0455, A0167, A0111, A0232, A0170, A0171, A0172, A0169, A0065, A0573, A0385, A0456	S0218, S0229
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Chassis\CAN GND Short Detection Unit	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\4HK1\Smoothen (MZZ)\Euro6, Full air brake\Manual Selection\Information\CAN Converter (Camera)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		

Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\MY\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Transmission\Smother-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\4JZ1\Smother (MY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Transmission\AT	✓	✓	✓	✓	A0688	
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\AWR6B45\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Engine\RZ4E	✓	✓	✓	✓	A0445, A0563, A0564, A0450, A0269, A0172, A0565, A0566, A0567, A0498, A0485, A0568, A0569, A0570, A0571, A0053, A0572	S0360, S0042, S0101, S0361, S0362, S0363, S0364, S0365, S0366, S0367, S0368, S0369, S0370, S0371, S0372
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓	A0416, A0562	S0271, S0272, S0234, S0275

Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2021\N series\RZ4E\MVC\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\MYY\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Engine\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Engine\EDU	✓	✓	✓	✓		S0349, S0030
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Engine\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Transmission\Smoothen-Ex	✓	✓	✓	✓		S0234, S0235, S0236, S0227, S0237, S0238, S0239, S0240, S0241, S0242
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Body\17 BCM	✓	✓	✓	✓	A0697, A0698, A0598, A0699, A0696	S0391, S0349, S0030, S0390
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Body\Auto Light	✓	✓	✓	✓	A0701, A0702, A0703, A0700	S0356, S0357, S0393
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Body\Immobilizer	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Body\SRS (Denso)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Chassis\ABS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Chassis\ABS/ESC/AEBS	✓	✓	✓	✓	A0416, A0562	S0234, S0275, S0271, S0272
Enter by region\ISUZU (Portugal)\2022\N series\4JZ1\Smoothen (MYY)\No Options\Manual Selection\Information\17 MIMAMORI	✓	✓	✓	✓		S0349, S0030, S0374, S0375, S0376, S0377, S0378, S0379, S0380
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCM	✓	✓	✓			
Enter by region\ISUZU (Portugal)\2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	

Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2022\TF Series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					

Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\AT	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\AWR6B45\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Auto scan	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\IBS (Intelligent Battery System)	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\ISS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\RZ4E	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Engine\Urea SCR	✓	✓	✓		A0692	
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Transmission\Diff Lock ECU	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Transmission\TCCM	✓	✓	✓			
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\BCM	✓	✓	✓	✓	A0693	
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\CGW (Central GateWay)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\HVAC (Auto A/C)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Meter	✓					S0030
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\SRS	✓	✓	✓	✓		



Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\Stereo Camera	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Body\WAM (Wireless Access Module)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\ABS/ESC	✓	✓	✓	✓		S0254, S0253, S0392
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\EPS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Information\AECS	✓	✓	✓	✓		
Enter by region\ISUZU (Portugal) \2023\TF series\RZ4E\MVL\Euro6\Manual Selection\Information\CENTER UNIT (NAVI)	✓					
Enter by region\ISUZU (TAIWAN) \NL\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by region\ISUZU (TAIWAN) \NL\4JJ1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \NL\4JJ1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \Nm\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by region\ISUZU (TAIWAN) \Nm\4JJ1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \Nm\4JJ1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \NP\4HK1-TC Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by region\ISUZU (TAIWAN) \NP\4HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \NP\4HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \NP\ABS (North America)	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (TAIWAN) \ELF\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by region\ISUZU (TAIWAN) \ELF\4JJ1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \ELF\4JJ1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \POWERTRAIN		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0634, A0170, A0224, A0066, A0172	S0002, S0042, S0294, S0043, S0295
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS/ASR (Euro IV)	✓	✓	✓			
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS1		✓	✓	✓	A0635, A0636, A0028, A0637, A0638, A0639, A0640	
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS2	✓	✓	✓	✓	A0641, A0642, A0028, A0029, A0030, A0031, A0032, A0033, A0035, A0034, A0640	S0022
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS8		✓	✓	✓	A0034, A0039, A0040, A0041, A0120	
Enter by region\ISUZU (TAIWAN) \6WG1-TC (after 2007) \ABS\ABS3	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by system\Auto Search All System\Engine	✓	✓	✓	✓	A0269, A0053, A0482, A0483, A0481, A0056, A0587, A0588, A0055, A0586, A0589, A0051, A0233, A0234, A0235, A0236, A0237, A0238, A0239	S0260, S0268, S0234, S0002, S0125, S0126, S0127
Enter by system\Auto Search All System\Smooter	✓	✓	✓	✓		S0072, S0073, S0074, S0075, S0076, S0077, S0078, S0079, S0080, S0081, S0082, S0083, S0234, S0249, S0227, S0237, S0238, S0239, S0020, S0241, S0225,
Enter by system\Auto Search All System\AT		✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by system\Auto Search All System\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0267
Enter by system\Auto Search All System\Urea SCR	✓	✓	✓	✓	A0688, A0689, A0690	S0356, S0357
Enter by system\Auto Search All System\BCM	✓	✓	✓	✓		S0040, S0041
Enter by system\Auto Search All System\Immobiliser	✓	✓	✓	✓		

Enter by system\Auto Search All System\Meter	✓					
Enter by system\Auto Search All System\SRS	✓	✓	✓	✓		
Enter by system\Auto Search All System\MIMAMORI	✓	✓	✓	✓		S0328, S0329, S0330, S0331, S0332, S0333, S0334
Enter by system\Auto Search All System\TPMS	✓	✓	✓	✓		
Enter by system\Auto Search All System\Speedometer Control Device	✓			✓		S0228
Enter by system\Auto Search All System\Air Suspension	✓	✓	✓	✓	A0047, A0100, A0561	S0277, S0278, S0279, S0280, S0281
Enter by system\Auto Search All System\ISS	✓	✓	✓	✓		S0345, S0346, S0347, S0234
Enter by system\Auto Search All System\Passive Entry And Start System (Push Type)	✓	✓	✓	✓	A0539, A0540, A0541, A0542	S0255
Enter by system\Auto Search All System\VAT	✓	✓	✓	✓		S0349, S0348, S0350, S0351
Enter by system\Auto Search All System\Camera (VAT)	✓					S0349
Enter by system\Auto Search All System\RADAR (VAT)	✓					S0349
Enter by system\Auto Search All System\CAN Converter (FMS)	✓	✓	✓	✓		S0231, S0228
Enter by system\Auto Search All System\Powertrain Interface Module	✓	✓	✓			
Enter by system\Auto Search All System\Head Lamp Auto Leveling	✓	✓	✓	✓		
Enter by system\Auto Search All System\Idling Stop	✓			✓		S0012, S0013, S0014
Enter by system\Auto Search All System\Driving Safety Advisor	✓	✓	✓	✓	A0048	S0038, S0039
Enter by system\Auto Search All System\Vehicle Control Module	✓	✓	✓	✓		S0357, S0355, S0356
Enter by system\Auto Search All System\Retarder	✓	✓	✓	✓		
Enter by system\Auto Search All System\TCCM	✓	✓	✓	✓	A0529, A0530, A0531, A0532, A0533, A0534, A0535, A0536, A0537	
Enter by system\Auto Search All System\SRS (Denso)	✓	✓	✓	✓		
Enter by system\Auto Search All System\Millimeter wavelength radar cruise	✓					
Enter by system\Powertrain\4HE1-TC	✓	✓	✓	✓		
Enter by system\Powertrain\4HF1\4HF1	✓	✓	✓	✓		S0059
Enter by system\Powertrain\4HF1\4HF1 (CNG)	✓	✓	✓	✓	A0058, A0089, A0090	S0004
Enter by system\Powertrain\4HG1\4HG1	✓	✓	✓	✓		S0059
Enter by system\Powertrain\4HG1\4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by system\Powertrain\4HJ1\engine	✓	✓	✓	✓		S0059
Enter by system\Powertrain\4HJ1\VIM (Vehicle Interface Module)	✓			✓		S0061, S0045
Enter by system\Powertrain\4HK1-TC\4HK1-TC Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by system\Powertrain\4HK1-TC\4HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\4HK1-TC\4HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\4HK1-TC\4HK1-TC Euro 6	✓	✓	✓	✓	A0269, A0053, A0482, A0547, A0548, A0549, A0550, A0551, A0552, A0553, A0554, A0485, A0066, A0172, A0484, A0271, A0555, A0385	S0257, S0042, S0258, S0259, S0063, S0229, S0260
Enter by system\Powertrain\4HL1\4HL1\4HL1 engine	✓	✓	✓	✓	A0643, A0644, A0118, A0645, A0112	S0002, S0044, S0045, S0060
Enter by system\Powertrain\4HL1\4HL1\VIM (Vehicle Interface Module)	✓			✓		S0061, S0045
Enter by system\Powertrain\4HL1\4HL1-TC\4HL1-TC (K-LINE)		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045
Enter by system\Powertrain\4HL1\4HL1-TC\4HL1-TC (CAN-LINE)	✓	✓	✓	✓	A0269, A0053, A0482, A0547, A0548, A0549, A0550, A0551, A0552, A0553, A0554, A0485, A0484, A0271	S0259, S0063, S0260, S0229

Enter by system\Powertrain\4HL1\4HL1-NA		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0042, S0043, S0002, S0044, S0045
Enter by system\Powertrain\4HV1 (CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by system\Powertrain\4JB1\4JB1-TC		✓	✓	✓		
Enter by system\Powertrain\4JB1\4JB1-TCT/TC1 type (100P)	✓	✓	✓	✓		S0296
Enter by system\Powertrain\4JB1\4JB1CN(National 4 100P)	✓	✓	✓	✓	A0646, A0647, A0648, A0649, A0650, A0651, A0652, A0653, A0654	S0297, S0298, S0299, S0300
Enter by system\Powertrain\4JB1\4JB1 engine (Bosch diesel)		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301
Enter by system\Powertrain\4JG2\Isuzu 4JG2 engine system		✓	✓	✓		
Enter by system\Powertrain\4JG2\Isuzu 4JG2 (LPG) engine systems	✓	✓	✓	✓	A0058, A0059	S0004
Enter by system\Powertrain\4JJ1\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by system\Powertrain\4JJ1\4JJ1-TC Euro 4	✓	✓	✓	✓	A0269, A0551, A0552, A0553, A0554, A0482, A0053, A0547, A0548, A0549, A0550, A0484, A0271, A0485, A0385, A0066, A0172, A0148, A0149, A0150, A0151,	S0101, S0103, S0108, S0264, S0394, S0095, S0096, S0097, S0098, S0099, S0100, S0102
Enter by system\Powertrain\4JJ1\4JJ1-TC Euro 5	✓	✓	✓	✓	A0556, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0557, A0558, A0163, A0559, A0269, A0551, A0552, A0553,	S0101, S0108, S0264, S0394, S0095, S0096, S0097, S0098, S0099, S0100, S0102
Enter by system\Powertrain\4JJ1\4JJ1-TC (commonrail_PNLT)	✓	✓	✓	✓	A0165, A0166, A0167, A0168, A0111, A0169, A0065, A0170, A0171, A0172, A0173	S0103, S0104, S0105, S0106, S0107, S0108, S0109
Enter by system\Powertrain\4JJ1\4JJ1-TC (3.0L)		✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by system\Powertrain\4JJ1\4JJ1 (3.0 Delphi)		✓	✓	✓		S0002
Enter by system\Powertrain\4JJ3\Engine control unit	✓	✓	✓	✓	A0445, A0484, A0485, A0498, A0269, A0172, A0499, A0500, A0501, A0502, A0503, A0504, A0505, A0506, A0507	S0250, S0251
Enter by system\Powertrain\4JJ3\Transmission\AT	✓	✓	✓			
Enter by system\Powertrain\4JJ3\Transmission\TCM	✓	✓	✓			
Enter by system\Powertrain\4JJ3\Chassis\ABS/ESC	✓	✓	✓	✓		
Enter by system\Powertrain\4JJ3\Chassis\EPS	✓	✓	✓			
Enter by system\Powertrain\4JJ3\Chassis\Parking Aid	✓	✓	✓	✓		
Enter by system\Powertrain\4JJ3\Chassis\SRR (Rear Left)	✓	✓	✓	✓		
Enter by system\Powertrain\4JJ3\Chassis\SRR (Rear Right)	✓	✓	✓	✓		
Enter by system\Powertrain\4JJ3\Body\BCM	✓	✓	✓			
Enter by system\Powertrain\4JJ3\Body\SRS	✓	✓	✓			
Enter by system\Powertrain\4JJ3\Body\Stereo Camera	✓	✓	✓	✓		
Enter by system\Powertrain\4JJ3\Body\Head Light Auto Leveling	✓	✓	✓	✓		
Enter by system\Powertrain\4JH1\4JH1-TC1		✓	✓	✓		
Enter by system\Powertrain\4JH1\4JH1-TC2		✓	✓	✓	A0668, A0669, A0670	
Enter by system\Powertrain\4JH1\4JH1-T Denso		✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	
Enter by system\Powertrain\4JH1\4JH1-TC DENSO	✓	✓	✓	✓	A0023, A0670, A0671, A0672, A0027	S0302, S0303, S0304, S0305
Enter by system\Powertrain\4JH1\4JH1\4KH1 (2012)	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0585, A0270, A0581, A0582, A0583	S0001, S0002, S0003
Enter by system\Powertrain\4JK1-TC\4JK1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by system\Powertrain\4JK1-TC\4JK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\4JK1-TC\4JK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\4JK1-TC\4JK1-TC (2.5L)		✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by system\Powertrain\4JX1 (3.0 L4)\4JX1 (3.0 L4) engine	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058

Enter by system\Powertrain\4JX1 (3.0 L4)\Chassis\ABS		✓	✓	✓	A0174, A0175, A0176, A0177, A0178	
Enter by system\Powertrain\4JZ1	✓	✓	✓	✓	A0269, A0485, A0066, A0172, A0482, A0694, A0484, A0271, A0695	S0381, S0382, S0383, S0248, S0340, S0384, S0385, S0386, S0246, S0245, S0229, S0247, S0043, S0269, S0356, S0357, S0387
Enter by system\Powertrain\4KH1\4KH1-TCG40 (2012~)	✓	✓	✓	✓	A0057, A0575, A0576, A0577, A0578, A0579, A0483, A0404, A0580, A0585, A0270, A0581, A0582, A0583	S0001, S0002, S0003
Enter by system\Powertrain\4KH1\4KH1-TC Engine	✓	✓	✓	✓	A0023, A0670, A0671, A0672, A0027	S0302, S0303, S0304, S0305
Enter by system\Powertrain\4KH1\4KH1CN5\4KH1CN5 (EDC17C81) Engine	✓	✓	✓	✓	A0179, A0180, A0181, A0182, A0183, A0184, A0185, A0186, A0187, A0188, A0189, A0190, A0191, A0192, A0193, A0194, A0195, A0196, A0197, A0198, A0199,	S0110, S0111
Enter by system\Powertrain\4KH1\4KH1CN5\4KH1CN5HD\4K/4Z Delphi-country V diesel pickup	✓	✓	✓	✓	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214	S0112, S0113, S0114, S0115, S0116, S0117, S0118
Enter by system\Powertrain\4KH1\4KH1CN5\ABS\Asia-Pacific ABS system		✓	✓	✓		
Enter by system\Powertrain\4KH1\4KH1CT5\4KH1CT5H1\Delphi Common Rail System (Isuzu Engine China 5 DCM6.24)	✓	✓	✓	✓	A0215, A0216, A0217, A0218, A0209, A0219, A0220, A0212, A0213, A0221, A0222, A0223	S0119, S0120
Enter by system\Powertrain\4KH1\4KH1CT5\4K/4Z Delphi-country V diesel pickup	✓	✓	✓	✓	A0203, A0204, A0205, A0206, A0207, A0208, A0209, A0210, A0211, A0212, A0213, A0214	S0112, S0113, S0114, S0115, S0116, S0117, S0118
Enter by system\Powertrain\6HK1\6HK1 GEN (3Pin)		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0634, A0170, A0224, A0066, A0172	S0002
Enter by system\Powertrain\6HK1\6HK1E3S engine	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by system\Powertrain\6HK1\6HK1-TC engine	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by system\Powertrain\6HK1\6HK1-TC (after 2007)		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0634, A0170, A0224, A0066, A0172	S0002, S0042, S0294, S0043, S0295
Enter by system\Powertrain\6HK1\6HK1X2 engine system		✓	✓	✓		
Enter by system\Powertrain\6HK1\6HK1XR engine system		✓	✓	✓		
Enter by system\Powertrain\6HK1\6HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0630, A0631, A0155, A0156, A0157, A0158, A0632, A0633, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\6HK1\6HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0630, A0631, A0155, A0156, A0157, A0158, A0632, A0633, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\6HL1\6HL1 Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
Enter by system\Powertrain\6HL1\6HL1 Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0630, A0631, A0155, A0156, A0157, A0158, A0632, A0633, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\6HL1\6HL1 Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0630, A0631, A0155, A0156, A0157, A0158, A0632, A0633, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\6UZ1\6UZ1 Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0630, A0631, A0155, A0156, A0157, A0158, A0632, A0633, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
Enter by system\Powertrain\6UZ1\6UZ1-TC engine	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by system\Powertrain\6UZ1\6UZ1-TC common rail engine (CAN country 5)	✓	✓	✓	✓	A0061, A0225, A0167, A0226, A0111, A0227, A0228, A0229	
Enter by system\Powertrain\6UZ1\6UZ1 (Non North America)\C/E series\6UZ1\Engine	✓	✓	✓	✓	A0169, A0065, A0170, A0224, A0230, A0172, A0231, A0232, A0167, A0168, A0111	S0105, S0108
Enter by system\Powertrain\6UZ1\6UZ1 (Non North America)\C/E series\6UZ1\SRS	✓	✓	✓	✓		
Enter by system\Powertrain\6UZ1\6UZ1 (Non North America)\C/E series\6UZ1\Speedometer	✓			✓		S0122, S0123, S0124
Enter by system\Powertrain\6WF1\6WF1-TC	✓	✓	✓	✓	A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074, A0075, A0076, A0077, A0078, A0079	S0307, S0308
Enter by system\Powertrain\6WF1\6WF1-TC engine	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by system\Powertrain\6WG1\6WG1-C/Rail	✓	✓	✓	✓	A0051, A0233, A0234, A0235, A0236, A0237, A0056, A0238, A0239	S0002, S0125, S0126, S0127
Enter by system\Powertrain\6WG1\6WG1-TC(after 2007)		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0634, A0170, A0224, A0066, A0172	S0002, S0042, S0294, S0043, S0295
Enter by system\Powertrain\other engine\SCR	✓	✓	✓	✓	A0240, A0148, A0241	S0128, S0129, S0130, S0131, S0132, S0133, S0134
Enter by system\Powertrain\other engine\AT_JR405E		✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by system\Powertrain\other engine\Chaoyang Diesel Engine (Bosch diesel) _24V		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301
Enter by system\Powertrain\other engine\Cummins unit pump diesel engine _24V		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301
Enter by system\Powertrain\other engine\Isuzu alarm	✓	✓	✓	✓		
Enter by system\Powertrain\other engine\Large diesel engines (Bosch diesel)		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301

Enter by system\Powertrain\other engine\Perkins diesel engine _24V		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301
Enter by system\Powertrain\other engine>Weifang Diesel Engine	✓	✓	✓	✓	A0675, A0676, A0677	S0110
Enter by system\Powertrain\other engine\Wuxi Diesel Engine (Bosch diesel) _24V		✓	✓	✓	A0179, A0655, A0656, A0657, A0658, A0659, A0660, A0661, A0185, A0662, A0663, A0664, A0665, A0666, A0667	S0301
Enter by system\Transmission\Smoother\Smoother-G (AMT) \Enter	✓	✓	✓	✓	A0132, A0133, A0134, A0135, A0136, A0137, A0138, A0139, A0140, A0141, A0142, A0143, A0144, A0145, A0146, A0147	S0092, S0093, S0094
Enter by system\Transmission\Smoother\Smoother-EX (Light duty)	✓	✓	✓	✓		S0072, S0073, S0074, S0075, S0076, S0077, S0078, S0079, S0080, S0081, S0082, S0083, S0015, S0016, S0084, S0085
Enter by system\Transmission\Smoother\Smoother (Medium/Heavy duty)	✓	✓	✓	✓	A0127, A0128, A0045, A0129, A0130, A0131	S0091
Enter by system\Transmission\Smoother\Smoother (3pin)		✓	✓	✓	A0132, A0133, A0134, A0135, A0136, A0137, A0138, A0139, A0140, A0141, A0142, A0143, A0144, A0145, A0146, A0147	S0092, S0093, S0094
Enter by system\Transmission\AT	✓	✓	✓			
Enter by system\Transmission\4HK1_TC (AT)		✓	✓	✓	A0003, A0678, A0679, A0680, A0681, A0682, A0683, A0684, A0685, A0686, A0438, A0687	
Enter by system\Transmission\AT (North America)	✓	✓	✓	✓	A0293, A0335, A0295, A0296, A0425, A0422	
Enter by system\Chassis\ABS\ABS	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by system\Chassis\ABS\ABS/ASR (Euro IV)	✓	✓	✓			
Enter by system\Chassis\ABS\ABS1		✓	✓	✓	A0635, A0636, A0028, A0637, A0638, A0639, A0640	
Enter by system\Chassis\ABS\ABS2	✓	✓	✓	✓	A0641, A0642, A0028, A0029, A0030, A0031, A0032, A0033, A0035, A0034, A0640	S0022
Enter by system\Chassis\ABS\ABS8		✓	✓	✓	A0034, A0039, A0040, A0041, A0120	
Enter by system\Chassis\ABS\ABS3	✓	✓	✓	✓	A0121, A0122, A0123, A0124, A0125, A0126	S0062
Enter by system\Chassis\ABS\Asia-Pacific ABS system		✓	✓	✓		
Enter by system\Chassis\HSA/CFS	✓	✓	✓	✓		S0221, S0222, S0223, S0224
Enter by system\Chassis\Chassis ESC (with EBS)		✓	✓	✓		
Enter by system\Chassis\Wabco EBS	✓	✓	✓	✓		
Enter by system\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by system\Car body\BCM	✓	✓	✓	✓		S0309, S0310, S0311, S0312, S0313, S0314, S0315, S0316, S0317, S0318
Enter by system\Car body\BCM (MIMAMORI)	✓	✓	✓	✓		S0135
Enter by system\Car body\SRS Airbag	✓	✓	✓	✓		
Enter by system\Car body\Anti-theft devices	✓	✓	✓	✓		S0011, S0322, S0323
Enter by system\Car body\Blocker	✓	✓	✓	✓		
Enter by system\Car body\PESS (Passive entry and start system)	✓	✓	✓		A0253, A0254, A0255, A0256, A0257, A0258, A0259	
Enter by system\Car body\PIM (Powertrain interface module)	✓	✓	✓			S0136, S0137, S0138
Enter by system\Information\MIMAMORI	✓	✓	✓	✓		S0289
Enter by system\Information\CAN Converter (FMS)	✓	✓	✓	✓		S0231, S0228
Enter by system\Information\Meter	✓			✓		
Enter by system\Information\SCD (Speedometer control device)	✓			✓		S0228
Enter by system\Information\SCD (Speedometer control device stand alone)	✓			✓		S0228
Enter by year (1998~2012) \ (C) 2012\N Series Truck\Power system\4HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\N Series Truck\Power system\4JH1/4KH1	✓	✓	✓	✓		S0001, S0002, S0003
Enter by year (1998~2012) \ (C) 2012\N Series Truck\Power system\4JJ1-TC (C/Rail)	✓	✓	✓	✓		

Enter by year (1998~2012) \ (C) 2012\N Series Truck\Power system\Smoother(TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\N Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Power system\6UZ1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Power system\Smoother(TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\C&E Series Truck\Power system\6UZ1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (C) 2012\C&E Series Truck\Power system\Smoother-G (AMT)	✓	✓	✓	✓	A0047, A0100, A0080, A0561	S0282, S0234
Enter by year (1998~2012) \ (C) 2012\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (C) 2012\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\2.4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\2.5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\2.5L 4JK1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\3.0L 4JJ1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\3.0L 4JJ1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Power system\AT JR405E	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Chassis\ABS	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Locking device (2.4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Blocker (Transtron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Airbag	✓					
Enter by year (1998~2012) \ (C) 2012\TF/UC Series\Body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\2.4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\2.5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\2.5L 4JK1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\3.0L 4JJ1-TC (Delphi)	✓	✓	✓			

Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\3.0L 4JJ1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Chassis\ABS 8	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Blocker	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Airbag SIEMENS	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Airbag	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Locking device (2.4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Blocker (Transtron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\TF/UC Series\Car body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HG1 (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HK1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HK1/4JJ1 (C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0005
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HK1/4JJ1 (C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4HV1 (CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4JJ1-TC (C/Rail_Mexico)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4JJ1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\4JJ1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\AT_A460	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\Smoother/Smoother-Ex	✓	✓	✓	✓		S0015, S0016, S0017, S0018, S0019, S0020, S0021
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Power system\Smoother (TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Chassis\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Car body\Blocker	✓	✓	✓	✓		

Enter by year (1998~2012) \ (B) 2011\N Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\N Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0032, S0033, S0034, S0035, S0036
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6HK1-TC(C/Rail)	✓	✓	✓			
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6UZ1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\Smoother/Smoother-Fx	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\Smoother(TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Information system\Speedometer control equipment				✓		
Enter by year (1998~2012) \ (B) 2011\F&G Series Truck\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6UZ1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6WG1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6WG1-TC(C/Rail_NST)	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\6W*1-TC(C/Rail_LC 3Pin)	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Power system\Smoother-G (AMT)	✓	✓	✓	✓	A0047, A0100, A0080, A0561	S0282, S0234
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\ABS/IESC	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0044, A0043	S0037
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\Hydraulic retarder	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\Millimeter wavelength radar cruise	✓					
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\ESC(with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	



Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Car body\Driving safety reference	✓	✓	✓	✓	A0048	S0038, S0039
Enter by year (1998~2012) \ (B) 2011\C&E Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0319, S0320, S0321
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro2)	✓					
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (B) 2011\LV/LT Series Bus\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\2. 4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\2. 5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\2. 5L 4JK1-TC (TransIron)	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\3. 0L 4JJ1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\3. 0L 4JJ1-TC (TransIron)	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\3. 5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\AT JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Chassis\ABS 8	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Blocker	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Airbag SIEMENS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Airbag	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Locking device (2. 4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Blocker (Transtron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\TF/UC Series\Car body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (A) 2010\Industrial Engine(Off-Road)\Power system\4JJ1-TC(C/Rail_Tier3)	✓					

Enter by year (1998~2012) \ (A) 2010\Industrial Engine(Off-Road)\Power system\4HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (A) 2010\Industrial Engine(Off-Road)\Power system\6HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (A) 2010\Industrial Engine(Off-Road)\Power system\6UZ1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (A) 2010\Industrial Engine(Off-Road)\Power system\6WG1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HE1-TC(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HG1(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HK1/4JJ1(C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0005
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HK1/4JJ1(C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4HV1(CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4JJ1-TC(C/Rail_Mexico)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4JJ1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\4JJ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\AT A460	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\Smoother/Smoother-Ex	✓	✓	✓	✓		S0015, S0016, S0017, S0018, S0019, S0020, S0021
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Power system\Smoother(TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Chassis\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\N Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0032, S0033, S0034, S0035, S0036
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\4HK1/6HK1(C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\4HK1/6HK1(C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6HK1-TC(C/Rail)	✓	✓	✓			
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6HP1-TC(CNG)	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6UZ1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\6UZ1-TC(C/Rail_Euro3)	✓					

Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\Smoother/Smoother-Fx	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\Smoother(TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Information system\Speedometer control equipment				✓		
Enter by year (1998~2012) \ (A) 2010\F&G Series Truck\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\6WG1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\6WG1-TC(C/Rail_NST)	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\6W*1-TC(C/Rail_LC 3Pin)	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Power system\Smoother-G (AMT)	✓	✓	✓	✓	A0047, A0100, A0080, A0561	S0282, S0234
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\ABS/IESC	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0044, A0043	S0037
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\Hydraulic retarder	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\Millimeter wavelength radar cruise	✓					
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\ESC(with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Car body\Driving safety reference	✓	✓	✓	✓	A0048	S0038, S0039
Enter by year (1998~2012) \ (A) 2010\C&E Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0319, S0320, S0321
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro2)	✓					
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (A) 2010\LV/LT Series Bus\Information system\MIMAMORI	✓					

Enter by year (1998~2012) \ (9) 2009\Component\Power system\4HK1-TC (C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (9) 2009\Component\Power system\6HF1-TC (CNG)	✓					
Enter by year (1998~2012) \ (9) 2009\Component\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (9) 2009\Component\Power system\6HK1-TC (C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (9) 2009\Component\Power system\6UZ1-TC (C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\2. 4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\2. 5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\2. 5L 4JK1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\3. 0L 4JJ1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\3. 0L 4JJ1-TC (TransTron)	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\3. 5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\AT JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Chassis\ABS 8	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Blocker	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Airbag SIEMENS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Airbag	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Locking device (2. 4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Blocker (Transtron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\TF/UC Series\Car body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (9) 2009\Industrial Engine (Off-Road) \Power system\4JJ1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (9) 2009\Industrial Engine (Off-Road) \Power system\4HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (9) 2009\Industrial Engine (Off-Road) \Power system\6HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (9) 2009\Industrial Engine (Off-Road) \Power system\6UZ1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (9) 2009\Industrial Engine (Off-Road) \Power system\6WG1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HG1 (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HK1-TC (C/Rail)	✓	✓	✓	✓		

Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HK1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HK1/4JJ1 (C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0005
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HK1/4JJ1 (C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4HV1 (CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4JJ1-TC (C/Rail_Mexico)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4JJ1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\4JJ1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\AT A460	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\Smoother/Smoother-Ex	✓	✓	✓	✓		S0015, S0016, S0017, S0018, S0019, S0020, S0021
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Power system\Smoother (TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Chassis\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\N Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0032, S0033, S0034, S0035, S0036
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\4HK1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\4HK1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6HK1-TC (C/Rail)	✓	✓	✓			
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6HK1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6HFI-TC (CNG)	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6UZ1-TC (C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6UZ1-TC (C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\6UZ1-TC (C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\Smoother/Smoother-Fx	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\Smoother (TransTron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	

Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Information system\Speedometer control equipment				✓		
Enter by year (1998~2012) \ (9) 2009\F&G Series Truck\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Power system\6WG1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Power system\6WG1-TC(C/Rail_NST)	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Power system\6W*1-TC(C/Rail_LC 3Pin)	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\ABS/IESC	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0044, A0043	S0037
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\Hydraulic retarder	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\Millimeter wavelength radar cruise	✓					
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\ESC(with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Car body\Driving safety reference	✓	✓	✓	✓	A0048	S0038, S0039
Enter by year (1998~2012) \ (9) 2009\C&E Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0319, S0320, S0321
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro2)	✓					
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (9) 2009\LV/LT Series Bus\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (8) 2008\Component\Power system\4HK1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (8) 2008\Component\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (8) 2008\Component\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (8) 2008\Component\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (8) 2008\Component\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (8) 2008\TF/UC Series\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (8) 2008\TF/UC Series\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (8) 2008\TF/UC Series\Power system\2. XL L4 HV240	✓	✓	✓	✓		

Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\2.4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\2.5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\2.5L 4JK1-TC (TransIron)	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\3.0L 4JJ1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\3.0L 4JJ1-TC (TransIron)	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\AT JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Power system\AW30~40LE	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Chassis\ABS 8	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Blocker	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Airbag SIEMENS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Airbag	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Locking device (2.4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Blocker (Transtron)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\TF\UC Series\Car body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (8) 2008\Industrial Engine(Off-Road)\Power system\4JJ1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (8) 2008\Industrial Engine(Off-Road)\Power system\4HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (8) 2008\Industrial Engine(Off-Road)\Power system\6HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (8) 2008\Industrial Engine(Off-Road)\Power system\6UZ1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (8) 2008\Industrial Engine(Off-Road)\Power system\6WG1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HE1-TC(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HG1(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HK1/4JJ1(C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0005
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HK1/4JJ1(C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4HV1(CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4JJ1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\4JJ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014

Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\AT A460	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Power system\Smoother\Smoother-Ex	✓	✓	✓	✓		S0015, S0016, S0017, S0018, S0019, S0020, S0021
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Chassis\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Car body\Blocker	✓					
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\N Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0032, S0033, S0034, S0035, S0036
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro2)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\4HK1/6HK1 (C/Rail_Euro3)	✓	✓	✓	✓	A0011, A0012	S0002, S0006
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\6HK1-TC(C/Rail)		✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0634, A0170, A0224, A0066, A0172	S0002, S0042, S0294, S0043, S0295
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\Smoother\Smoother-Fx	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Car body\Anti-theft devices	✓	✓	✓	✓		S0011, S0322, S0323
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Car body\Body Control Module	✓	✓	✓	✓		S0040, S0041
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Information system\Meter	✓			✓		
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Information system\SCD(Speedometer control device)	✓			✓		S0228
Enter by year (1998~2012) \ (8) 2008\F&G Series Truck\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Power system\6WG1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Power system\6WG1-TC(C/Rail_NST)	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Power system\6W*1-TC(C/Rail_LC 3Pin)	✓					



Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\ABS\IESC	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0044, A0043	S0037
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\Hydraulic retarder	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\Millimeter wavelength radar cruise	✓					
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\ESC(with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Car body\Driving safety reference	✓	✓	✓	✓	A0048	S0038, S0039
Enter by year (1998~2012) \ (8) 2008\C&E Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0319, S0320, S0321
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (8) 2008\LV/LT Series Bus\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\2. 4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\2. 5L 4JK1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\3. 0L 4JJ1-TC (Delphi)	✓	✓	✓			
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\3. 5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\AT JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Power system\AW30~40LE	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Chassis\ABS 8	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Blocker	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Airbag SIEMENS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Airbag	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Locking device (2. 4L LG1 Euro3)	✓					
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Blocker (Delphi)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF/UC Series\Car body\Blocker (Transtron)	✓	✓	✓	✓		

Enter by year (1998~2012) \ (7) 2007\TF\UC Series\Car body\Locking device (V6 engine)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\TF\UC Series\Car body\Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (7) 2007\Industrial Engine(Off-Road)\Power system\4JJ1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (7) 2007\Industrial Engine(Off-Road)\Power system\4HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (7) 2007\Industrial Engine(Off-Road)\Power system\6HK1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (7) 2007\Industrial Engine(Off-Road)\Power system\6UZ1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (7) 2007\Industrial Engine(Off-Road)\Power system\6WG1-TC(C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4HE1-TC(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4HG1(Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4HK1-TC(C/Rail)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4HV1(CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4JJ1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\4JJ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\AT A460	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Power system\Smoother/Smoother-Ex	✓	✓	✓	✓		S0015, S0016, S0017, S0018, S0019, S0020, S0021
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Chassis\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Car body\Body Control Module	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Car body\Blocker	✓					
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\N Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0023, S0024, S0025, S0026, S0027, S0028, S0029, S0030, S0031, S0032, S0033, S0034, S0035, S0036
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\4HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\6HK1-TC(C/Rail)	✓	✓	✓			
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\Idle stop (BCM)	✓			✓		S0012, S0013, S0014
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\Smoother/Smoother-Fx	✓					
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Car body\Body Control Module	✓					

Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Car body\Blocker	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Information system\Speedometer control equipment				✓		
Enter by year (1998~2012) \ (7) 2007\F&G Series Truck\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Power system\6UZ1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Power system\6WG1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Power system\6WG1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Power system\6WG1-TC(C/Rail_NST)	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Power system\6W*1-TC(C/Rail_LC 3Pin)	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\ABS/IESC	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0044, A0043	S0037
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\Hydraulic retarder	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\Millimeter wavelength radar cruise	✓					
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\ESC(with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\Air Suspension	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Car body\Driving safety reference	✓	✓	✓	✓	A0048	S0038, S0039
Enter by year (1998~2012) \ (7) 2007\C&E Series Truck\Information system\MIMAMORI	✓	✓	✓	✓		S0319, S0320, S0321
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\6HK1-TC(C/Rail)	✓					
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\Automatic Transmission	✓	✓	✓	✓		
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_NLT)	✓					
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\6HF1-TC(CNG)	✓					
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\6HK1-TC(C/Rail_Euro3)	✓	✓	✓	✓	A0673, A0674	S0004, S0306
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Power system\6UZ1-TC(C/Rail_Euro3)	✓					
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (7) 2007\LV/LT Series Bus\Information system\MIMAMORI	✓					
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4J11-TC Bosch	✓					
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2. 4L LG1 Euro3	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2. 5L 4J11-TC	✓	✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3. 0L 4JJ1-TC	✓	✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3. 5L V6 6VEL Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\V6 engine	✓					
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\Automatic Transmission	✓					
Enter by year (1998~2012) \ (6) 2006\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004

Enter by year (1998~2012) \ (6) 2006 \ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo \ Power system \ AW30-40LE	✓					
Enter by year (1998~2012) \ (6) 2006 \ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo \ Chassis \ ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006 \ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo \ Car body \ Powertrain Interface Module	✓					
Enter by year (1998~2012) \ (6) 2006 \ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo \ Car body \ Airbag	✓					
Enter by year (1998~2012) \ (6) 2006 \ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo \ Car body \ Blocker	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HL1-NA (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0042, S0043, S0002, S0044, S0045
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HL1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4HV1 (CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4JG2 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4JG2		✓	✓	✓	A0024	
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ 4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ MIMAMORI	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ Hybrid System	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ Smoother / Smoother-E Auto Shift	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Power system \ Smoother-E	✓					
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Chassis \ ABS / ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Chassis \ Clutch release system / HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006 \ (N*) ELF_NPR_NQR_VFR \ Car body \ SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006 \ (Off-Road) Industrial Engine \ Power system \ 4JJ1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (Off-Road) Industrial Engine \ Power system \ 4HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (Off-Road) Industrial Engine \ Power system \ 6HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (Off-Road) Industrial Engine \ Power system \ 6UZ1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (Off-Road) Industrial Engine \ Power system \ 6WG1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 4HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 6HL1-NA (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 6HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 6UZ1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 6WF1-TC (C/Rail)	✓	✓	✓	✓	A0067, A0068, A0069, A0070, A0071, A0072, A0073, A0074, A0075, A0076, A0077, A0078, A0079	S0002
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ 6WG1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ MIMAMORI	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ MIMAMORI (F**)	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Power system \ Smoother-F Auto Shift	✓					
Enter by year (1998~2012) \ (6) 2006 \ (C* E* L* F*) Heavy_medium Duty \ Chassis \ ESC (with EBS)	✓	✓	✓	✓		

Enter by year (1998~2012) \ (6) 2006\ (C*_E*_L*_F*)Heavy_medium Duty\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (6) 2006\ (C*_E*_L*_F*)Heavy_medium Duty\Chassis\ABS\ASR ADVICS	✓					
Enter by year (1998~2012) \ (6) 2006\ (C*_E*_L*_F*)Heavy_medium Duty\Chassis\Air Suspension(Export)	✓	✓	✓	✓	A0045, A0046, A0047	
Enter by year (1998~2012) \ (6) 2006\ (C*_E*_L*_F*)Heavy_medium Duty\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (6) 2006\ (C*_E*_L*_F*)Heavy_medium Duty\Car body\Driving safety reference	✓	✓	✓	✓	A0048	
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JAI-TC Bosch	✓					
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JHI-TC Bosch	✓					
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2.5L 4JK1-TC	✓	✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3.0L 4JJ1-TC	✓	✓	✓	✓	A0049, A0050, A0051, A0052, A0053, A0054, A0055, A0056	S0002
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3.5L V6 6VEL Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Car body\Airbag	✓					
Enter by year (1998~2012) \ (5) 2005\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1-NA (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0042, S0043, S0002, S0044, S0045
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4HV1 (CNG)	✓	✓	✓	✓	A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021, A0022	S0007, S0008, S0009, S0010
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2		✓	✓	✓	A0024	
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\4JHI-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\MIMAMORI	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\Smooter/Smooter-E Auto Shift	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Power system\Smooter-E	✓					
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Chassis\Clutch release system\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (N*)ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (Off-Road) Industrial Engine\Power system\4JJ1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (5) 2005\ (Off-Road) Industrial Engine\Power system\4HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (5) 2005\ (Off-Road) Industrial Engine\Power system\6HK1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (5) 2005\ (Off-Road) Industrial Engine\Power system\6UZ1-TC (C/Rail_Tier3)	✓					

Enter by year (1998~2012) \ (5) 2005\ (Off-Road) Industrial Engine\Power system\6WG1-TC (C/Rail_Tier3)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\4HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\6HL1-NA (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\6HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\6UZ1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\6WF1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\6WG1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\MIMAMORI	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\MIMAMORI (F**)	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\Smother-F Auto Shift	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Power system\AT Allison LCT		✓	✓	✓		S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Chassis\ESC (with EBS)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Chassis\ABS 6	✓	✓	✓	✓	A0036, A0037, A0038, A0034, A0039, A0040, A0041, A0042, A0043	
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Chassis\ABS/ASR ADVICS	✓					
Enter by year (1998~2012) \ (5) 2005\ (C*_E*_L*_F*) Heavy_medium Duty\Car body\Driving safety reference	✓	✓	✓	✓	A0048	
Enter by year (1998~2012) \ (4) 2004\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (4) 2004\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (4) 2004\ (UE) Rodeo/Amigo Wizard/MU\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (4) 2004\ (UE) Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (UE) Rodeo/Amigo Wizard/MU\Car body\Blocker	✓					
Enter by year (1998~2012) \ (4) 2004\ (UP) Axiom\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (4) 2004\ (UP) Axiom\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (UP) Axiom\Car body\Blocker	✓					
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\4JH1-T Denso	✓	✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	S0004
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Car body\Airbag	✓					
Enter by year (1998~2012) \ (4) 2004\ (TF/UC) LUV_Rodeo_Frontier_LAO_Rodeo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (4) 2004\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (N*) ELF_NPR_NQR_VFR\Power system\4HF1 (CNG)	✓	✓	✓	✓	A0058, A0089, A0090	S0004
Enter by year (1998~2012) \ (4) 2004\ (N*) ELF_NPR_NQR_VFR\Power system\4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004

Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1-NA (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0042, S0043, S0002, S0044, S0045
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1-TC (C/Rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2		✓	✓	✓	A0024	
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\MIMAMORI	✓					
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\Hybrid System	✓					
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\Smoothen\Smoothen-E Auto Shift	✓					
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Power system\Smoothen-E	✓					
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Chassis\Clutch release system\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (N*)ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Power system\6HL1-NA (C/Rail)	✓					
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Power system\6HK1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Power system\6WF1-TC (C/Rail)	✓					
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Power system\MIMAMORI (F**)	✓					
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Power system\AT Allison LCT		✓	✓	✓		S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Chassis\ABS/ASR ADVICS	✓	✓	✓		A0030, A0031, A0032, A0033, A0034	
Enter by year (1998~2012) \ (4) 2004\ (C* E* L* F*)Heavy_medium Duty\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (UB)Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (3) 2003\ (UB)Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (3) 2003\ (UB)Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (3) 2003\ (UB)Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (3) 2003\ (UB)Trooper Bighorn Jackaroo\Car body\Blocker (DDS)	✓					
Enter by year (1998~2012) \ (3) 2003\ (UE)Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (3) 2003\ (UE)Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (3) 2003\ (UE)Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (3) 2003\ (UE)Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (UE)Rodeo/Amigo Wizard/MU\Car body\Blocker	✓					
Enter by year (1998~2012) \ (3) 2003\ (UP) Axiom\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (3) 2003\ (UP) Axiom\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (UP) Axiom\Car body\Blocker	✓					
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JH1-T Denso	✓	✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	S0004
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\2. XL L4 HV240	✓	✓	✓	✓		

Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3.5L V6 6VE1 Hitachi	✓	✓	✓			
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Car body\Airbag	✓					
Enter by year (1998~2012) \ (3) 2003\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (3) 2003\TBR. \Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\Denso 4H* (ECD-V4)	✓	✓	✓	✓		S0059
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4HF1 (CNG)	✓	✓	✓	✓	A0058, A0089, A0090	S0004
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1/4HJ1 (common fuel rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045, S0060
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4HL1/4HJ1 (Vehicle Interface Module)	✓			✓		S0061, S0045
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4JG2		✓	✓	✓	A0024	
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Chassis\Clutch release system\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (N*)ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (3) 2003\ (C*_E*_L*_F*)Heavy_medium Duty\Power system\AT Allison LCT		✓	✓	✓		S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056
Enter by year (1998~2012) \ (3) 2003\ (C*_E*_L*_F*)Heavy_medium Duty\Chassis\EBS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (UB)Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (2) 2002\ (UB)Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (2) 2002\ (UB)Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (2) 2002\ (UB)Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (2) 2002\ (UB)Trooper Bighorn Jackaroo\Car body\Blocker (DDS)	✓					
Enter by year (1998~2012) \ (2) 2002\ (UE)Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (2) 2002\ (UE)Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (2) 2002\ (UE)Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (2) 2002\ (UE)Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (UE)Rodeo/Amigo Wizard/MU\Car body\Blocker	✓					
Enter by year (1998~2012) \ (2) 2002\ (UP) Axiom\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (2) 2002\ (UP) Axiom\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JH1-T Denso	✓	✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	S0004
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\4JH1-TC Bosch	✓					



Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0100, A0080, A0101, A0082, A0102	
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AT_JR405E	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010	S0004
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) LUV_Rodeo_Frontier_LAO Rodeo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (2) 2002\ (TF/UC) Thailand\Power system\4JH1-T Denso	✓	✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	S0004
Enter by year (1998~2012) \ (2) 2002\ TBR. \Power system\2. XL L4 HV240	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\Denso 4H* (ECD-V4)	✓	✓	✓	✓		S0059
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4HF1 (CNG)	✓	✓	✓	✓	A0058, A0089, A0090	S0004
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4HG1 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4HL1/4HJ1 (common fuel rail)	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0066	S0002, S0044, S0045, S0060
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4HL1/4HJ1 (Vehicle Interface Module)	✓			✓		S0061, S0045
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4JG2 (LPG)	✓	✓	✓	✓	A0057, A0058, A0059, A0060	S0004
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Chassis\Clutch release system/HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (N*) ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (2) 2002\ (C* E*_L*_F*) Heavy_medium Duty\Power system\AT Allison LCT		✓	✓	✓		S0046, S0047, S0048, S0049, S0050, S0051, S0052, S0053, S0054, S0055, S0056
Enter by year (1998~2012) \ (1) 2001\ (UB) Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (1) 2001\ (UB) Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (1) 2001\ (UB) Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (1) 2001\ (UB) Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (1) 2001\ (UB) Trooper Bighorn Jackaroo\Car body\Blocker (DDS)	✓					
Enter by year (1998~2012) \ (1) 2001\ (UE) Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (1) 2001\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (1) 2001\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (1) 2001\ (UE) Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (1) 2001\ (UE) Rodeo/Amigo Wizard/MU\Car body\Blocker	✓					
Enter by year (1998~2012) \ (1) 2001\ (UG) V-Cross\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (1) 2001\ (UG) V-Cross\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (1) 2001\ (UC) Frontier_LAO Rodeo\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (1) 2001\ (TF/UC) Thailand\Power system\4JH1-T Denso	✓	✓	✓	✓	A0084, A0085, A0052, A0086, A0087, A0088	S0004
Enter by year (1998~2012) \ (1) 2001\ (TF) LUV\Power system\4JA1-TC Bosch	✓					
Enter by year (1998~2012) \ (1) 2001\ (TF) LUV\Power system\4JH1-TC Bosch	✓					
Enter by year (1998~2012) \ (1) 2001\ (TF) LUV\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (1) 2001\ (TF) LUV\Power system\AW30-40LE	✓					

Enter by year (1998~2012) \ (I) 2001\ (TF) LUV\Car body\Blocker	✓					
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Power system\Denso 4H* (ECD-V4)	✓	✓	✓	✓		S0059
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Power system\4JH1-TC Bosch	✓	✓	✓	✓	A0023, A0024, A0025, A0026, A0027	S0011
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Chassis\Clutch release system/HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (I) 2001\ (N*) ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (Y) 2000\ (UB) Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (Y) 2000\ (UB) Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (Y) 2000\ (UB) Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (Y) 2000\ (UB) Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (Y) 2000\ (UE) Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (Y) 2000\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (Y) 2000\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (Y) 2000\ (UE) Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (Y) 2000\ (UG) V-Cross\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (Y) 2000\ (UG) V-Cross\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (Y) 2000\ (UC) Frontier_LAO Rodeo\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (Y) 2000\ (UC) Frontier_LAO Rodeo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (Y) 2000\ (TF) LUV\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (Y) 2000\ (TF) LUV\Power system\AW30-40LE	✓					
Enter by year (1998~2012) \ (Y) 2000\ (N*) ELF_NPR_NQR_VFR\Power system\Denso 4H* (ECD-V4)	✓	✓	✓	✓		S0059
Enter by year (1998~2012) \ (Y) 2000\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (Y) 2000\ (N*) ELF_NPR_NQR_VFR\Chassis\ABS/ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (Y) 2000\ (N*) ELF_NPR_NQR_VFR\Chassis\Clutch release system/HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (Y) 2000\ (N*) ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (X) 1999\ (UB) Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (X) 1999\ (UB) Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (X) 1999\ (UB) Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (X) 1999\ (UB) Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (X) 1999\ (UE) Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (X) 1999\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (X) 1999\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (X) 1999\ (UE) Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (X) 1999\ (UG) V-Cross\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (X) 1999\ (UG) V-Cross\Power system\3.5L V6 6VE1	✓	✓	✓			

Enter by year (1998~2012) \ (X) 1999\ (UC) Frontier_LAO Rodeo\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (X) 1999\ (TF) LUV\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (X) 1999\ (N*) ELF_NPR_NQR_VFR\Power system\Denso 4H* (ECD-V4)	✓	✓	✓	✓		S0059
Enter by year (1998~2012) \ (X) 1999\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (X) 1999\ (N*) ELF_NPR_NQR_VFR\Chassis\ABS\ASR	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Enter by year (1998~2012) \ (X) 1999\ (N*) ELF_NPR_NQR_VFR\Chassis\Clutch release system\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (X) 1999\ (N*) ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Enter by year (1998~2012) \ (W) 1998\ (UB) Trooper Bighorn Jackaroo\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (W) 1998\ (UB) Trooper Bighorn Jackaroo\Power system\3.5L V6 6VE1	✓	✓	✓			
Enter by year (1998~2012) \ (W) 1998\ (UB) Trooper Bighorn Jackaroo\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (W) 1998\ (UB) Trooper Bighorn Jackaroo\Car body\Blocker	✓					
Enter by year (1998~2012) \ (W) 1998\ (UE) Rodeo/Amigo Wizard/MU\Power system\2.2L L4 X22SE	✓	✓	✓			
Enter by year (1998~2012) \ (W) 1998\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.2L V6 6VD1	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (W) 1998\ (UE) Rodeo/Amigo Wizard/MU\Power system\3.0L L4 4JX1	✓	✓	✓	✓	A0091, A0092, A0093, A0094, A0095, A0096, A0097, A0098, A0099	S0057, S0058
Enter by year (1998~2012) \ (W) 1998\ (UE) Rodeo/Amigo Wizard/MU\Chassis\ABS	✓	✓	✓	✓		
Enter by year (1998~2012) \ (W) 1998\ (UC) Frontier_LAO Rodeo\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (W) 1998\ (TF) LUV\Power system\3.2L V6 6VD1 Hitachi	✓	✓	✓	✓	A0049, A0080, A0081, A0082, A0083	
Enter by year (1998~2012) \ (W) 1998\ (N*) ELF_NPR_NQR_VFR\Power system\4HE1-TC (Diesel)	✓	✓	✓	✓		
Enter by year (1998~2012) \ (W) 1998\ (N*) ELF_NPR_NQR_VFR\Chassis\Clutch release system\HSA	✓	✓	✓	✓		
Enter by year (1998~2012) \ (W) 1998\ (N*) ELF_NPR_NQR_VFR\Car body\SRS airbags	✓	✓	✓	✓		
Engine (construction machinery)\AUTO Engine-KWP	✓	✓	✓	✓	A0103, A0104, A0105, A0106, A0107	S0002
Engine (construction machinery)\4HK1 Tier4 (CAN)	✓	✓	✓	✓	A0269, A0481, A0482, A0053, A0483, A0484, A0485, A0066, A0172, A0456	S0388, S0358, S0262, S0261
Engine (construction machinery)\4JJ1 Tier4 (CAN)	✓	✓	✓	✓	A0108, A0109, A0110, A0111, A0066, A0560, A0112	S0139, S0140, S0141, S0142, S0216, S0261, S0262, S0263, S0264
Engine (construction machinery)\6HK1 Tier4 (CAN)	✓	✓	✓	✓		S0213, S0139, S0140, S0141, S0142, S0265, S0266, S0264
Engine (construction machinery)\6WG1 GB3 (CAN)	✓	✓	✓	✓	A0108, A0109, A0110, A0111, A0066, A0112	S0002
Engine (construction machinery)\6UZ1 Tier4 (CAN)	✓	✓	✓	✓	A0269, A0053, A0704, A0705, A0485, A0066, A0172, A0484, A0706	S0358
Engine (construction machinery)\Urea SCR (4HK1)\Start Test	✓	✓	✓	✓	A0616, A0617, A0618	
Engine (construction machinery)\Urea SCR (6UZ1)	✓	✓	✓	✓	A0688	S0396, S0030
ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 2/3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102

ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF400\POWERTRAIN\4HK1_TC(North America)	✓	✓	✓	✓	A0445, A0446, A0447, A0448, A0449, A0304, A0450, A0050, A0404, A0135, A0451, A0452, A0453, A0454	S0146
ELF Series\ELF400\ABS(North America)	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF500\POWERTRAIN\4HK1_TC(North America)	✓	✓	✓	✓	A0445, A0446, A0447, A0448, A0449, A0304, A0450, A0050, A0404, A0135, A0451, A0452, A0453, A0454	S0146
ELF Series\ELF500\ABS(North America)	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 2/Euro 3	✓	✓	✓	✓	A0061, A0062, A0063, A0064, A0050, A0065, A0170, A0224, A0066, A0172	S0042, S0043, S0002, S0121, S0006
ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 4	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 5	✓	✓	✓	✓	A0148, A0149, A0150, A0151, A0152, A0153, A0154, A0155, A0156, A0157, A0158, A0159, A0160, A0161, A0162, A0163, A0164	S0095, S0096, S0097, S0098, S0099, S0100, S0101, S0102
ELF Series\ELF600\POWERTRAIN\4HK1_TC(North America)	✓	✓	✓	✓	A0445, A0446, A0447, A0448, A0449, A0304, A0450, A0050, A0404, A0135, A0451, A0452, A0453, A0454	S0146
ELF Series\ELF600\ABS(North America)	✓	✓	✓	✓	A0028, A0029, A0030, A0031, A0032, A0033, A0034, A0035	S0022
Service\DPF(Diesel Particulate Filter)\Enter by system\4HK1-TC\4HK1-TC Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\4HK1-TC\4HK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\4HK1-TC\4HK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\4HL1-NA engine						S0042, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\4JJ1\4JJ1-TC\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\4JJ1\4JJ1-TC\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\4JJ1\4JJ1-TC\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\4JK1-TC\4JK1-TC\4JK1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\4JK1-TC\4JK1-TC\4JK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\4JK1-TC\4JK1-TC\4JK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6HK1\6HK1 GEN(3Pin)						S0042, S0294, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\6HK1\6HK1-TC (after 2007)						S0042, S0294, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\6HK1\6HL1 Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6HK1\6HL1 Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6HL1\6HL1 Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\Enter by system\6HL1\6HL1 Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6HL1\6HL1 Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6UZ1\6UZ1 Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\Enter by system\6WG1\6WG1-TC(after 2007)						S0042, S0294, S0043
Service\DPF(Diesel Particulate Filter)\ISUZU(Non North America)\Engine						S0264, S0324, S0325, S0326, S0327
Service\DPF(Diesel Particulate Filter)\ISUZU(Non North America)\Hong Kong after 2017 Engine						S0264
Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2018\FTR w/5.2L Diesel (4HK1)\Engine					A0272, A0274, A0277	
Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2018\N-Series w/5.2L Diesel (4HK1)\Engine					A0272, A0274, A0277	



Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2007i\F/T Series w/7.8L Diesel (6HK1)\Engine(AUTO)					A0388, A0389, A0277	
Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2007i\F/T Series w/7.8L Diesel (6HK1)\Engine(MANUAL)					A0388, A0389, A0277	
Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2007i\H/C Series w/7.8L Diesel (6HK1)\Engine(AUTO)					A0388, A0389, A0277	
Service\DPF(Diesel Particulate Filter)\ISUZU(North America)\Manual selection\2007i\H/C Series w/7.8L Diesel (6HK1)\Engine(MANUAL)					A0388, A0389, A0277	
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NL\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NL\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NL\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\Nm\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\Nm\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\Nm\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NP\4HK1-TC Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NP\4HK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\NP\4HK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\ELF\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\ELF\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ISUZU(TAIWAN)\ELF\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 2/3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 2/Euro 3						S0042, S0043
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 4						S0095, S0096, S0097, S0098
Service\DPF(Diesel Particulate Filter)\ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 5						S0095, S0096, S0097, S0098
Service\Engine Oil\Enter by system\Powertrain\4JJ1\4JJ1-TC\POWERTRAIN\4JJ1-TC Euro 4						S0099
Service\Engine Oil\Enter by system\Powertrain\4JJ1\4JJ1-TC\POWERTRAIN\4JJ1-TC Euro 5						S0099
Service\Engine Oil\Enter by system\Powertrain\4JK1-TC\4JK1-TC\POWERTRAIN\4JK1-TC Euro 4						S0099
Service\Engine Oil\Enter by system\Powertrain\4JK1-TC\4JK1-TC\POWERTRAIN\4JK1-TC Euro 5						S0099
Service\Engine Oil\Enter by system\Powertrain\6HK1\POWERTRAIN\6HK1-TC Euro 4						S0099



Service\Engine Oil\ELF Series\ELF200\POWERTRAIN\4JJ1-TC Euro 5						S0099
Service\Engine Oil\ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 4						S0099
Service\Engine Oil\ELF Series\ELF300\POWERTRAIN\4JJ1-TC Euro 5						S0099
Service\Engine Oil\ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 4						S0099
Service\Engine Oil\ELF Series\ELF400\POWERTRAIN\4HK1-TC Euro 5						S0099
Service\Engine Oil\ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 4						S0099
Service\Engine Oil\ELF Series\ELF500\POWERTRAIN\4HK1-TC Euro 5						S0099
Service\Engine Oil\ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 4						S0099
Service\Engine Oil\ELF Series\ELF600\POWERTRAIN\4HK1-TC Euro 5						S0099

Special Function Table	
S0001	Programming vin
S0002	Injector data
S0003	Read reset the fuel supply pump
S0004	programmed
S0005	Reset the fuel pump calibration
S0006	Clear learned supply pump data
S0007	Clear fuel injection leaning value
S0008	Clear gas oil ratio threshold
S0009	Clear throttle idle speed learning value
S0010	Clear closed-circuit throttle learning value
S0011	VIN
S0012	Motorized elevating work platform
S0013	ISS maintenance data erasure
S0014	ISS drive data erasure
S0015	Program vehicle type
S0016	PTO requested speed
S0017	Set the speedometer gear
S0018	Program tire size
S0019	Program tire compensation
S0020	Programming Final Gear Ratio
S0021	Program ABS installation
S0022	Programming Tire Radius
S0023	Upgrade vehicle ECU information
S0024	Upgraded gearbox models
S0025	Upgrade the final drive ratio
S0026	Upgrade the tyre rolling radius
S0027	Upgrade the AD input
S0028	ECM DTC data
S0029	DTC data except ECU
S0030	ECU Lock
S0031	MIMSMORI Clear all data
S0032	MIMSMORI Clear all DTC record
S0033	Engine DMU Clear all data
S0034	TCM DMU Clear all data
S0035	Forced engine DMU record
S0036	Forced TCM DMU record
S0037	Lateral acceleration parameter
S0038	Enter 0 degree offset
S0039	Enter the system date
S0040	Programming and resetting
S0041	Special Function
S0042	DPD Forced Regeneration
S0043	DPD Regeneration Data Reset
S0044	The number of engine starts flashing (when replacing ECU)
S0045	The number of engine starts flashing (when replacing engine)
S0046	Erase all transmission adaptation pressure units
S0047	Erase all garage transmission adaption pressure
S0048	Erase 1-2 transmission adaption pressure
S0049	Erase 2-1 transmission adaption pressure
S0050	Erase 2-3 transmission adaption pressure
S0051	Erase 3-2 transmission adaption pressure
S0052	Erase 3-4 transmission adaption pressure
S0053	Erase 4-3 transmission adaption pressure
S0054	Erase 4-5 transmission adaption pressure
S0055	Erase 5-4 transmission adaption pressure
S0056	Preset all transmission adaption pressure unit
S0057	Rail Oil pressure sensor exchange
S0058	Read Injector data
S0059	Writing Number of Engine Start Times
S0060	Pump adjustment learning reset
S0061	The number of engine starts flashing
S0062	ABS Write VIN
S0063	VIN Programming
S0064	Program engine type



S0065	Program transmission type
S0066	Program speed meter type
S0067	Program final gear ratio
S0068	Program tire size(BETA)
S0069	Program ABS install
S0070	Program elevating work platform
S0071	Program PTO request engine speed
S0072	Smoother-Ex Initial Learning
S0073	Manual Half-Clutch Learning
S0074	Transmission Gear Select / Shift Position Learning
S0075	Half-Clutch Position Adjust Function
S0076	Speed Meter Drive Gear Learning
S0077	Vehicle Type Programming
S0078	PTO Request Engine RPM
S0079	Speed Meter Gear Programming
S0080	Tire Size Programming
S0081	Tire Correction Ratio Program
S0082	Longitudinal Deceleration Rate Rewriting
S0083	ABS installation Status Programming
S0084	Program speedometer driven gear
S0085	PROGRAM VIN
S0086	Programming engine type
S0087	Update transmission type
S0088	PTO request engine speed
S0089	Programming final gear ratio
S0090	Programming tire radius
S0091	Reset the read value
S0092	CLU GSU position learning(manual)
S0093	Clutch learning
S0094	Gear learning
S0095	DPD Automatic regeneration
S0096	DPD normal regeneration control
S0097	DPD slow regeneration control
S0098	DPD status resetting
S0099	Engine oil exchange reset(Just for Euro5)
S0100	Injector ID code read
S0101	Injector programming
S0102	Supply pump initialization
S0103	Program VIN
S0104	Program injector ID
S0105	Upload injector ID
S0106	Diesel particulate diffuser(DPD) regeneration data reset
S0107	Engine oil exchange reset
S0108	Fuel supply pump learning resetting
S0109	Exhaust gas recirculation(EGR) valve zero position step counter 1
S0110	Function testing
S0111	Matching set
S0112	Oil cut test
S0113	Fuel injector buzzing test
S0114	High pressure test
S0115	IMV Buzzer test
S0116	Read and write VIN code
S0117	Read and write injector code
S0118	ECU Data and vehicle matching
S0119	Function test
S0120	Special function
S0121	MAF calibration data service mode
S0122	Adjust correction code
S0123	Adjust part number
S0124	Upload vehicle configuration data
S0125	Q-Correction Data Check
S0126	Q-Correction Data Read/Write (ECU change)
S0127	Injector ID Code history information
S0128	SCR Catalyst data reset
S0129	NOx sensor data reset
S0130	Exhaust gas temperature sensor reset
S0131	Urea water injection control module reset
S0132	Oxidation catalyst data reset
S0133	Urea return valve data reset
S0134	Urea injector data reset
S0135	MIMAMORI All Data Clear
S0136	Reset PIM
S0137	Link to ECM/Immobilizer to PIM (V6 Engine)
S0138	Link to PIM to ECM/Immobilizer(V6 engine)
S0139	Injector Flow 1
S0140	Injector Flow 2
S0141	Injector Flow 3
S0142	Injector Flow 4
S0143	Cruise Control
S0144	PTO Options
S0145	Exhaust Brake Delay
S0146	Vehicle Speed Limit
S0147	Engine Shutdown/Warning Protection
S0148	Exhaust Brake in Cruise
S0149	Exhaust Brake
S0150	Diesel Particulate Filter Regeneration in PTO
S0151	Park Brake PTO Enable
S0152	Base Engine Idle Speed
S0153	Engine Oil Life Options I/P
S0154	Module Setup

S0155	Manual DPF Regeneration in Mobile PTO
S0156	Stationary Preset PTO
S0157	Stationary Variable PTO
S0158	Mobile Variable PTO
S0159	Speedo Cal
S0160	Idle Shutdown
S0161	Idle Shutdown Enable w/Switch Input
S0162	Idle Shutdown Enable in Park/Neutral Only
S0163	Idle Shutdown Disable w/High Idle
S0164	Idle Shutdown Disable w/A/C Compressor Clutch Cut Relay On
S0165	DPF Options
S0166	PTO Shutdown Vehicle Speed
S0167	PTO Engine Shutdown Time Delay
S0168	Engine Protection Mode Enable
S0169	Manual DPF Regeneration In Mobile PTO
S0170	PTO Max Vehicle Speed
S0171	PTO Max Engine Speed with Vehicle Moving
S0172	GPCM STATUS
S0173	PTO Increase/Decrease RPM
S0174	PTO Accel RPM Rate
S0175	PTO Reduce RPM Rate
S0176	Remote PTO Throttle 0%
S0177	Remote PTO Throttle 100%
S0178	Remote PTO Throttle Engine Speed Range
S0179	Remote PTO Set Speed A
S0180	Remote PTO Set Speed B
S0181	PTO Shutdown with Circuit Input
S0182	PTO Brake/Clutch Override with Circuit Input
S0183	Remote PTO Throttle
S0184	Disable Cab Controls
S0185	Disable Cab Controls with Circuit Input
S0186	Remote PTO Set/Resume Switches
S0187	Remote PTO Set Speed AB Switches
S0188	Manual DPF Regeneration In Stationary PTO
S0189	Engine Protection Mode
S0190	PTO Standby Speed
S0191	PTO Max Engine Speed
S0192	PTO Engage Relay
S0193	PTO Feedback
S0194	PTO Engine Shutdown with Circuit Input
S0195	PTO Set Speed
S0196	PTO Resume Speed
S0197	Power Take-Off (PTO) Mode
S0198	PTO Max Engage Speed
S0199	PTO Standby Speed Limit
S0200	Program Engine Serial Number
S0201	Injector Flow 1
S0202	Injector Flow 2
S0203	Injector Flow 3
S0204	Injector Flow 4
S0205	Engine Shutdown/Protection
S0206	Engine Shutdown
S0207	Gear Down Protection
S0208	Engine Idle Speed
S0209	Exhaust Brake in Cruise ON Speed
S0210	Exhaust Brake in Cruise OFF Speed
S0211	Engine Oil
S0212	Engine Idle Shutdown
S0213	Injector Trim
S0214	Injector Flow 5
S0215	Injector Flow 6
S0216	Injector Trim
S0217	All Parameters(Not Editable)
S0218	Fuel supply pump learn resetting
S0219	DPD Forced Automatic Regeneration
S0220	Lateral Acceleration Parameter
S0221	Gear Shift,Select Stroke Learn
S0222	Free Clutch Torque Point Position Learn 1
S0223	Free Clutch Torque Point Position Learn 2
S0224	Start position Learn for new clutch disk
S0225	Programming Engine Type
S0226	Update Transmission Type
S0227	PTO Requested Engine Speed
S0228	Programming
S0229	EEPROM Error Clear
S0230	Clear Basic Learn Values
S0231	Reset All Accumulation Data
S0232	Programming PTO Setting
S0233	Programming Warning Alarm Option
S0234	Program VIN(Vehicle Identification Number)
S0235	Program Engine Type
S0236	Program Transmission Type
S0237	Program Speedometer Gear
S0238	Program Tire Size
S0239	Program Tire Compensation
S0240	Program Final Gear Ratio
S0241	Program ABS Install
S0242	Program PTO Setting
S0243	Fuel Supply Pump Learn Resetting
S0244	DPD Cooling Mode

S0245	Check DPD Differential Pressure
S0246	DPD Dry
S0247	EGR Valve Zero Position Step Counter
S0248	Reset Engine Control Module
S0249	Programming Vehicle Type
S0250	Small fuel injection quantity clear
S0251	Read injector data
S0252	Clear Learning Value
S0253	Learning for Steering Central Position
S0254	Learning for G-Sensor Central Position
S0255	Initial Controller Setting
S0256	Clear Learning Value and Diag Information
S0257	DPD Slow Regeneration
S0258	DPD Automatic Regeneration
S0259	Injector Programming
S0260	Fuel Supply Pump Learn Resetting
S0261	Ash Information Data Reset
S0262	DPD Exhaust Differential Pressure Learning
S0263	Reset DPD Regeneration Data
S0264	DPD Regeneration
S0265	Injector Flow 5
S0266	Injector Flow 6
S0267	Programming Rear Tire Radius
S0268	Injector ID Code
S0269	Engine Oil Exchange Reset
S0270	Accelerator Pedal Position(Full)Learn Value Reset
S0271	Initialization Steering Central Position
S0272	Forced Learning Steering Central Position
S0273	PM Sensor Regen Data Reset
S0274	MAF Learning
S0275	Tire Diameter Programming
S0276	DPD Dilution Data Reset
S0277	Remote Control
S0278	Program Vehicle Type Code
S0279	Rolling Warning Control Setup
S0280	CAN Communication
S0281	Chassis Weight
S0282	Clutch Learned Value Clear
S0283	Clear Learned Value(Quantity Cylinder Balancing)
S0284	Clear Learned Value(Fuel Injection)
S0285	DPD Dilution Trip Data Reset
S0286	Fuel Supply Pump Learn Resetting
S0287	PTO Throttle 0% Voltage
S0288	PTO Throttle 100% Voltage
S0289	MIMAMORI ALL Data Clear
S0290	Idle Learn
S0291	Fuel Trim Learn
S0292	Fuel Trim Reset
S0293	HO2S Heater Learn
S0294	DPD Slowly Forced Regeneration
S0295	Erasing the Learned Supply Pump
S0296	Match/set
S0297	VIN code brush writing
S0298	VDS brush writing
S0299	EGR zero trigger learning function
S0300	Clear ZFC learning value function
S0301	Engine test
S0302	Initial capacity
S0303	Limit capacity
S0304	Idle speed
S0305	Exhaust gas recirculation
S0306	Reset fuel pump calibration
S0307	Read QR codes
S0308	Write QR codes
S0309	Engine oil distance resetting
S0310	Transmission oil distance resetting
S0311	Fuel consumption data resetting
S0312	Accumulated engine runtime resetting
S0313	ENG log data force recording
S0314	T/M log data force recording
S0315	Accumulated ENG log data clearing
S0316	Accumulated T/M log data clearing
S0317	Recording DTC data clearing
S0318	All accumulation data clearing
S0319	DMU function
S0320	Clear MIMAMORI data
S0321	Clean driving record data
S0322	Immobilizer installation(EURO 2/3)
S0323	Immobilizer installation(EURO 4/5)
S0324	DPD Regeneration Data Reset 1
S0325	DPD Forced Automatic Regeneration 1
S0326	DPD Regeneration Data Reset 2
S0327	DPD Forced Automatic Regeneration 2
S0328	EOL Data Setting/Change
S0329	DRM Function
S0330	EDR Function
S0331	Preventive Maintenance Data
S0332	Diagnostic Trouble Codes for Each System
S0333	ECU Change
S0334	Other Functions

S0335	Vehicle Speed Correction Data
S0336	Lambda Sensor Learned Value Clear
S0337	Fuel Mass Observer Learned Value Clear
S0338	Reset Oil Dilution
S0339	Exhaust Differential Pressure Sensor Learning
S0340	Baro Press Zero Learning
S0341	Baro Press Zero Learning Data Reset
S0342	Reset Aging Factor of DOC for NO2 Produce
S0343	LNT Data Reset
S0344	PM Sensor Regeneration Count Reset
S0345	G Sensor 0 Point Learning
S0346	Vehicle Configuration Data
S0347	ecostop Correction
S0348	Learning Camera Direction
S0349	Program VIN (Vehicle Identification Number)
S0350	Learning Radar Direction
S0351	Reset AEBS Counter
S0352	Basic Vehicle Configuration Data
S0353	Vehicle Configuration Data Individual Programming
S0354	Ecstop Correction
S0355	Steering Angle Sensor Learn
S0356	Program VIN (Vehicle Identification Number) (Type 95)
S0357	ECU Lock (Type 319)
S0358	Injector ID Code (Type 29)
S0359	Clear Data (Type 183)
S0360	DPD Slow regeneration
S0361	Vehicle speed correction data(Tire size)
S0362	Clear DPD data(Exchange DPD filter)
S0363	Clear learned value(Dew point)
S0364	Clear learned value(Fuel injection)
S0365	Clear learned value(Fuel rail pressure regulator)
S0366	Clear learned value(Fuel Lambda sensor)
S0367	Clear learned value(Fuel mass observer)
S0368	Clear learned value(Wheel learning)
S0369	Clear learned value(Intake throttle)
S0370	Clear learned value(Lambda sensor adaptation)
S0371	Reset oil dilution
S0372	Exhaust differential pressure sensor learning
S0373	ISS Maintenance Data Clear
S0374	Forced DRM Data Record
S0375	Clear DRM Data
S0376	Clear EDR Data
S0377	Clear Mimamori Data (Engine Replacement)
S0378	Clear Mimamori Data (Used MIMAMORI Replacement)
S0379	Clear Mimamori DTC Data
S0380	Clear All Mimamori Data
S0381	NOx Learning Reset
S0382	Lambda Learning Value Reset
S0383	Service Management Data Reset
S0384	Exhaust Differential Pressure Zero Learning
S0385	EDU Flag Check
S0386	EDU Learning
S0387	Accelerator Pedal Position (Full) Learn Value Reset
S0388	Programming - Reset DPD Regeneration (Type 55)
S0389	Vehicle Configuration Data (Type 214)
S0390	Reset Remote Control Key
S0391	Program Remote Control Key
S0392	EPB Pad Exchange Mode
S0393	Auto Light Function Setting
S0394	VIN programming
S0395	Initial Learning
S0396	Program EIN (Engine Identification Number)

### Active Test Table

A0001	Lamp test function
A0002	3rd start lamp test
A0003	AT oil temperature signal test
A0004	Transmission check light
A0005	Synchronous brake solenoid
A0006	2-4 brake solenoid test
A0007	High clutch solenoid tests
A0008	Low clutch solenoid tests
A0009	line pressure solenoid valve test
A0010	Locking load solenoid valve test
A0011	Engine control
A0012	Installation check
A0013	A/C Relay
A0014	Fuel cut off solenoid
A0015	Fuel cut off solenoid 2
A0016	Warning lights
A0017	Electronically controlled throttle run
A0018	Fuel injection valve operation
A0019	Injection spark timing changes
A0020	Exhaust brake lights
A0021	Exhaust brake VSV
A0022	Desired idle speed changes
A0023	Engine indicator light (check light) test
A0024	EGR solenoid valve test

A0025	Preheating time relay test
A0026	Preheating time signal device testing
A0027	Speed Control
A0028	ABS relay test
A0029	dump pump relay test
A0030	front left solenoid valve test
A0031	front right solenoid valve test
A0032	rear left solenoid valve test
A0033	rear right solenoid valve test
A0034	ABS warning lamp test
A0035	Exhaust brake cut off testing
A0036	Exhaust cut off relay test
A0037	ASR lamp test
A0038	ASR valve test
A0039	Left front control valve test
A0040	Right front control valve test
A0041	Left rear control valve test
A0042	Right after the control valve test
A0043	Idle speed control test
A0044	Front ASR valve test
A0045	Solenoid valve
A0046	Light
A0047	Buzzer
A0048	Air conditioning and buzzer test
A0049	Malfunction Indicator Lamp
A0050	Glow Plug Relay
A0051	Rail Pressure Control
A0052	Injection timing
A0053	Pre Injection Stop
A0054	Variable Swirl Solenoid
A0055	Intake Throttle Control
A0056	EGR Control
A0057	Idle Speed Control Test
A0058	Feedback solenoid valve
A0059	Fuel cut off solenoid valve
A0060	Ignition spark timing test
A0061	Fuel rail pressure
A0062	Stop nozzle
A0063	pre-injection stop
A0064	Force start injector
A0065	Exhaust brake
A0066	EGR
A0067	Fuel rail pressure control
A0068	1-cylinder injector trim
A0069	2-cylinder injector trim
A0070	3-cylinder injector trim
A0071	4-cylinder injector trim
A0072	5-cylinder injector trim
A0073	6-cylinder injector trim
A0074	EGR Control - Test sequence 1
A0075	EGR Control - Test sequence 2
A0076	EGR Control - Test sequence 3
A0077	EGR Control - Test sequence 4
A0078	Exhaust brake relay
A0079	Reducer relay
A0080	Relays
A0081	Purge Solenoid
A0082	IAC System
A0083	Fuel Trim Reset
A0084	EGR Pulse Ratio Test
A0085	Engine Speed(RPM) Control
A0086	Spill Valve Relay Test
A0087	Adjust Start of Injection
A0088	Fuel Delivery Rate Calibration
A0089	Fuel cut off solenoid valve 1
A0090	Fuel cut off solenoid valve 2
A0091	Glow time lamp
A0092	Exhaust pressure control valve 1
A0093	Exhaust pressure control valve 2
A0094	Throttle position motor control
A0095	EGR switching valve
A0096	EGR Regulating valve
A0097	Rail oil pressure control valve
A0098	Injector Balance test
A0099	Injector Control
A0100	Lamps
A0101	EVAP
A0102	Fuel System
A0103	Cylinder fuel cut test
A0104	Injection timing test
A0105	Advanced injection stop control test
A0106	Powered nozzle
A0107	Glow plug relay test
A0108	Rail pressure
A0109	Fuel injector cut-off
A0110	Pre injection shutdown
A0111	Injector forced drive
A0112	Glow plug relay
A0113	Common rail pressure control test
A0114	Injector balance test (first cylinder)

A0115	Injector balance test (second cylinder)
A0116	Injector balance test (third cylinder)
A0117	Injector balance test (fourth cylinder)
A0118	Intake Throttle Test
A0119	EGR control test
A0120	Right rear control valve test
A0121	ABS Warning Lamp
A0122	Brake Warning Lamp
A0123	LF Hold Valve
A0124	RF Hold Valve
A0125	LR Hold Valve
A0126	RR Hold Valve
A0127	lamp
A0128	Relay
A0129	Buzzer test
A0130	Neutral signal output test
A0131	Clutch signal output test
A0132	Buzzer signal
A0133	Main power supply relay
A0134	Solenoid power supply relay
A0135	PTO Relay
A0136	Trailer relay
A0137	Splitter valve(M/V G Hi)
A0138	Splitter valve(M/V G Lo)
A0139	Ranger valve(MV J Hi)
A0140	Ranger valve(MV J Lo)
A0141	HSA M/V
A0142	Clutch air on/off valve 1
A0143	Clutch air on/off valve 2
A0144	Emergency clutch valve
A0145	CSB Valve
A0146	GSU M/V power supply
A0147	Exhaust brake cut
A0148	Fuel pressure control
A0149	Pre injection control
A0150	Injection timing control
A0151	Injector 1 forced drive
A0152	Injector 2 forced drive
A0153	Injector 3 forced drive
A0154	Injector 4 forced drive
A0155	Cylinder 1 balance test
A0156	Cylinder 2 balance test
A0157	Cylinder 3 balance test
A0158	Cylinder 4 balance test
A0159	Intake throttle solenoid control
A0160	EGR solenoid control
A0161	Turbocharger solenoid control
A0162	Glow Relay Control
A0163	Exhaust brake control
A0164	Exhaust throttle control
A0165	Fuel rail pressure(FRP)
A0166	Injecor cutoff
A0167	Main injection timing
A0168	Pre-injection stop
A0169	Glow relay
A0170	Intake throttle
A0171	Exhaust gas recirculation(EGR)
A0172	Turbocharger
A0173	Diesel particulate diffuser(DPD)regeneration
A0174	Front Left Solenoid Valve Test
A0175	Front Right Solenoid Valve Test
A0176	Rear Solenoid Valve Test
A0177	Return Pump Relay Test
A0178	ABS signal device test
A0179	Air Conditioning Compressor Test
A0180	Power-on time correction is prohibited
A0181	Preheat indicator light test
A0182	Preheat plug control test
A0183	OBd Light Test
A0184	Fuel Metering Unit Test
A0185	System lamp test
A0186	Rail pressure target value Test
A0187	Shutdown Test
A0188	Exhaust brake valve test
A0189	Fuel filter heating test
A0190	MeUn test off
A0191	Low voltage control preheating plug test
A0192	SCR System injection valve test
A0193	SCR system pressure tube heating test
A0194	SCR system urea tank heating test
A0195	SCR system urea pump test
A0196	SCR system back suction pump test
A0197	SCR system return conduit heating test
A0198	SCR system urea supply pump test
A0199	SCR system induction pipe heating test
A0200	SCR system heating relay test
A0201	SCR system urea liquid level light test
A0202	SCR system relay test
A0203	DPF Regeneration indicator lamp test
A0204	DPF Forced regeneration

A0205	Air conditioning compressor clutch test
A0206	Booster VGT actuation test
A0207	EGR Valve actuation test
A0208	Preheating indicator lamp test
A0209	Glow plug control test
A0210	Fault indicator lamp test
A0211	Oil metering unit test
A0212	Throttle actuation test
A0213	Rail pressure test
A0214	Cruise control indicator lamp test
A0215	A/C compressor clutch actuation test
A0216	Supercharger VGT actuation test
A0217	EGR valve actuation test
A0218	Pre-heating indicator test
A0219	Fault indicator test
A0220	Fuel metering unit test
A0221	Cruise control indicator test
A0222	DPF regeneration indicator test
A0223	DPF forced regeneration
A0224	Exhaust throttle
A0225	Injector cut off
A0226	Pre-injection shut down
A0227	Preheat relay
A0228	Exhaust gate
A0229	Retarder
A0230	Exhaust gas recirculation (EGR)
A0231	Fuel rail pressure (FRP)
A0232	Injector cutoff
A0233	Injector balancing-Cylinder 1
A0234	Injector balancing-Cylinder 2
A0235	Injector balancing-Cylinder 3
A0236	Injector balancing-Cylinder 4
A0237	Turbo charger control
A0238	Exhaust Brake Relay
A0239	Retarder Relay
A0240	Urea water injector
A0241	Cooling control valve
A0242	Fuel Economy Meter Reset
A0243	Hour Meter Reset
A0244	Recorded ECM/TCM/DEFCM DTC Data Clear
A0245	Engine Log Data Force Recording
A0246	A/T Data Force Recording
A0247	SCR System Data Force Recording
A0248	Engine Log Data Clear
A0249	A/T Log Data Clear
A0250	SCR System Log Data Clear
A0251	A/T Event Data Clear
A0252	All Accumulation Data Clear
A0253	Outer buzzer
A0254	Meter indicator
A0255	Antena control - Driver door
A0256	Antena control - Assist door
A0257	Antena control - Center
A0258	Antena control - Floor rear
A0259	Antena control - Tail gate
A0260	Service Vehicle Soon Lamp
A0261	Glow Plug Lamp
A0262	Cruise Main Lamp
A0263	Cruise Set Lamp
A0264	ECT Gauge
A0265	RPM Control
A0266	Intake Air Flow Valve
A0267	EGR Solenoid
A0268	Turbocharger Vane
A0269	Fuel Rail Pressure
A0270	Cylinder Power Balance
A0271	Exhaust Brake
A0272	DPF Slow Regeneration
A0273	Glow Plugs
A0274	DPF Normal Regeneration
A0275	Exhaust Differential Pressure Sensor Learn
A0276	Supply Pump Learn Reset
A0277	Clear DPF Data
A0278	Clear MAF Learned Data
A0279	Idle Shutdown Extension
A0280	DEF Heater Valve Relay
A0281	DEF Injector Data Reset
A0282	DPF Injector Data Reset
A0283	EGT Sensor 3 Data Reset
A0284	NOx Sensor 1 Data Reset
A0285	NOx Sensor 2 Data Reset
A0286	DEF Control Module Data Reset
A0287	SCR Catalyst Data Reset
A0288	DEF Injector Control
A0289	DEF Supply Pump
A0290	DEF Reverting Valve
A0291	Oxidation Catalyst Data Reset
A0292	Nox Sensor Pre-Heating
A0293	Check Transmission Lamp
A0294	Transmission Fluid Over temp Lamp

A0295	Shift Solenoid 1
A0296	Shift Solenoid 2
A0297	Shift Solenoid 3
A0298	Shift Solenoid 4
A0299	Linear Solenoid 1
A0300	Linear Solenoid 2
A0301	Linear Solenoid 3
A0302	Linear Solenoid 4
A0303	Overdrive (OD) Off Lamp
A0304	Tachometer
A0305	Turbocharger Boost Control
A0306	EGR Cooler Bypass Solenoid VSV
A0307	Fuel Injector Pulse
A0308	Clear ECM Learned Data
A0309	A/C Compressor Clutch Relay
A0310	CMP Actuator
A0311	CMP Actuator Solenoid
A0312	Engine Speed
A0313	Throttle Position
A0314	Throttle Sweep
A0315	Engine Controls Ignition Relay
A0316	EVAP Purge Solenoid Valve
A0317	EVAP Purge/Seal
A0318	TBD-EVAP Service Bay Test
A0319	EVAP Vent Solenoid Valve
A0320	Fuel Control Loop Status
A0321	Fuel Injector Balance
A0322	Fuel Pump Enable
A0323	Fuel Trim Enable
A0324	Generator L-Terminal
A0325	Malfunction Indicator Lamp (MIL)
A0326	H02S Heater Bank 1 Sensor 1
A0327	H02S Heater Bank 1 Sensor 2
A0328	H02S Heater Bank 2 Sensor 1
A0329	H02S Heater Bank 2 Sensor 2
A0330	Starter Relay
A0331	Brake Pedal Position Sensor Learn
A0332	Crankshaft Position Variation Learn
A0333	H02S Heater Learn
A0334	Throttle Body Idle Air Flow Compensation Reset
A0335	TCC Control Solenoid
A0336	PC Solenoid 2
A0337	PC Solenoid 3
A0338	PC Solenoid 4
A0339	PC Solenoid 5
A0340	Shift Transmission
A0341	Line PC Solenoid
A0342	High Side Driver 1
A0343	Reset Transmission Adapts
A0344	TCC Control Solenoid w/DT-47825
A0345	PC Solenoid 2 w/DT-47825
A0346	PC Solenoid 3 w/DT-47825
A0347	PC Solenoid 4 w/DT-47825
A0348	PC Solenoid 5 w/DT-47825
A0349	Shift Solenoid 1 w/DT-47825
A0350	Shift Solenoid 2 w/DT-47825
A0351	Line PC Solenoid w/DT-47825
A0352	EC Ignition Relay
A0353	EVAP Purge Solenoid
A0354	EVAP Vent Solenoid
A0355	Fuel Pump Relay
A0356	GEN L-Terminal
A0357	H02S Bank 1 Sensor 1 Heater
A0358	H02S Bank 1 Sensor 2 Heater
A0359	H02S Bank 2 Sensor 1 Heater
A0360	H02S Bank 2 Sensor 2 Heater
A0361	Loop Status
A0362	Idle Spark
A0363	Spark Retard
A0364	Engine Speed Control
A0365	EVAP Service Bay Test
A0366	CKP Variation Learn
A0367	TB Idle Air Flow Comp
A0368	ABS Relay
A0369	ABS Motor
A0370	LF Release Valve
A0371	RF Release Valve
A0372	LR Release Valve
A0373	RR Release Valve
A0374	Temp Gauge
A0375	Fuel Gauge
A0376	SVS Lamp
A0377	Oil Pressure Lamp Command
A0378	Reduced Power Lamp
A0379	Charge Lamp
A0380	Tach Gauge
A0381	Speedo
A0382	Exhaust Brake Cut Relay
A0383	Coolant Temperature Gauge
A0384	Intake Airflow Valve



A0385	Exhaust Throttle
A0386	Intake Airflow (IAF) Valve
A0387	Turbocharger Vane Control
A0388	DPF Normal Regen
A0389	DPF Slow Regen
A0390	Sol. G Modulated Pressure
A0391	Clear All TAP Cells
A0392	Clear All Garage Shift TAP
A0393	Clear 1-2 TAP
A0394	Clear 2-1 TAP
A0395	Clear 2-3 TAP
A0396	Clear 3-2 TAP
A0397	Clear 3-4 TAP
A0398	Clear 4-3 TAP
A0399	Clear 4-5 TAP
A0400	Clear 5-4 TAP
A0401	Clear 5-6 TAP
A0402	Clear 6-5 TAP
A0403	Preset All TAP Cells
A0404	Exhaust Brake Control
A0405	Service Brake Soon Lamp
A0406	Low Traction Lamp
A0407	Traction Off Lamp
A0408	Left Front Isolation Valve
A0409	Left Front Dump Valve
A0410	Right Front Isolation Valve
A0411	Right Front Dump Valve
A0412	Left Rear Isolation Valve
A0413	Left Rear Dump Valve
A0414	Right Rear Isolation Valve
A0415	Right Rear Dump Valve
A0416	Lamp Test
A0417	Gauges Test
A0418	Chime Test
A0419	Idle Learn Reset
A0420	1-2 Solenoid
A0421	2-3 Solenoid
A0422	PC Solenoid
A0423	Wait To Start Lamp
A0424	Pilot Injection Stop
A0425	Shift Timing Solenoid
A0426	Exhaust Brake Cut
A0427	Fuel Pump
A0428	O2S Heater Control
A0429	Shift Solenoid C
A0430	Shift Solenoid D
A0431	Shift Solenoid E
A0432	Pressure Control Solenoid A
A0433	Check Transmission Light
A0434	Engine Overrun Warning
A0435	Lockup Duty Solenoid
A0436	Line Pressure Duty Solenoid
A0437	Solenoid ST
A0438	PTO Solenoid
A0439	Warming Cut
A0440	Crankshaft Position (CKP) Variation Learn
A0441	EVAP Purge Solenoid (PWM)
A0442	Pressure Control Solenoid B
A0443	Crankshaft Variation Learn
A0444	IAC Reset
A0445	Malfunction indicator lamp
A0446	Cruise main lamp
A0447	Cruise set lamp
A0448	Wait to start lamp
A0449	Coolant temperature gauge
A0450	RPM control
A0451	Cylinder power balance 1
A0452	Cylinder power balance 2
A0453	Cylinder power balance 3
A0454	Cylinder power balance 4
A0455	Pre injection stop
A0456	DPD Regeneration
A0457	Exhaust break cut relay
A0458	ASR Information lamp
A0459	ASR Valve
A0460	ABS Warning lamp
A0461	LF Control valve -Hold
A0462	LF Control valve -Exhaust
A0463	FR Control valve -Hold
A0464	FR Control valve -Exhaust
A0465	LR Control valve test -Hold
A0466	LR Control valve test -Exhaust
A0467	RR Control valve test -Hold
A0468	RR Control valve test -Exhaust
A0469	Front ASR valve
A0470	Idle speed control
A0471	Brake Bleed
A0472	Front Left Hold Valve Test
A0473	Front Left Release Valve Test
A0474	Front Right Hold Valve Test

A0475	Front Right Release Valve Test
A0476	Rear Hold Valve Test
A0477	Rear Release Valve Test
A0478	Engine Controls
A0479	Device Controls
A0480	AT Warning Light
A0481	Injector Cutoff
A0482	Main Injection Timing
A0483	Injector Forced Drive
A0484	Glow Relay
A0485	Intake Throttle
A0486	Cylinder Balance Test
A0487	VGS Control
A0488	Retarder Brake Control
A0489	Neutral Start
A0490	Reverse Warning Status
A0491	AT Warning Light
A0492	TCC Solenoid
A0493	Main Module Solenoid
A0494	Pressure Control Solenoid 1
A0495	Pressure Control Solenoid 2
A0496	Pressure Control Solenoid 3
A0497	Pressure Control Solenoid 4
A0498	EGR solenoid
A0499	Thermostat heater
A0500	Variable Swirl Valve
A0501	Injector cutoff - Cylinder 1
A0502	Injector cutoff - Cylinder 2
A0503	Injector cutoff - Cylinder 3
A0504	Injector cutoff - Cylinder 4
A0505	Multi injection stop
A0506	Fuel injection timing - Advance
A0507	Fuel injection timing - Retard
A0508	Cylinder Balance
A0509	Injection Timing
A0510	Pre Injection
A0511	Intake Throttle Valve
A0512	EGR Valve
A0513	Turbocharger Solenoid
A0514	Swirl Control Solenoid
A0515	Malfunction Indicator Lamp (MIL)
A0516	Service Vehicle Soon (SVS) Lamp
A0517	Fuel Supply Pump Learn Resetting
A0518	Reset Oil Dilution Estimate Quantity
A0519	Reset Small Fuel Injection Quantity Learning
A0520	Check Trans Warning Light
A0521	Torque Converter Clutch Pressure Control Solenoid (SLU) Control
A0522	Pressure Control Solenoid E (SLT) Control
A0523	Pressure Control Solenoid A (SL1) Control
A0524	Pressure Control Solenoid B (SL2) Control
A0525	Pressure Control Solenoid B (SL3) Control
A0526	Pressure Control Solenoid B (SL4) Control
A0527	Shift Solenoid A (SL) Control
A0528	Electro Magnetic Oil Pump
A0529	Transfer Motor Forward Direction
A0530	Transfer Motor Reverse Direction
A0531	Axle Motor Forward Direction
A0532	Axle Motor Reverse Direction
A0533	Check 4WD indicator
A0534	4WD indicator (2Hz)
A0535	4WD indicator (4Hz)
A0536	4L indicator (2Hz)
A0537	4L indicator (4Hz)
A0538	ABS/ESC Actuator Test
A0539	Outer Buzzer
A0540	Meter Indicator
A0541	Solenoid Output
A0542	Activate Control
A0543	Pressure Control Solenoid C (SLT) Control
A0544	Shift Solenoid C (SR) Control
A0545	Shift Solenoid A (S1) Control
A0546	Shift Solenoid B (S2) Control
A0547	Injector forced drive - Injector 1
A0548	Injector forced drive - Injector 2
A0549	Injector forced drive - Injector 3
A0550	Injector forced drive - Injector 4
A0551	Injector cut off - Injector 1
A0552	Injector cut off - Injector 2
A0553	Injector cut off - Injector 3
A0554	Injector cut off - Injector 4
A0555	Retarder Brake
A0556	Fuel Pressure control
A0557	Intake Throttle solenoid control
A0558	Glow Relay control
A0559	Exhaust Throttle Control
A0560	Turbocharger control
A0561	Magnetic Valves
A0562	Enforced Run Test
A0563	Service vehicle soon lamp
A0564	Glow plug lamp

A0565	EGR Cooler bypass solenoid VSV
A0566	Zero fuel correction off
A0567	Glow plug control
A0568	Injector cutoff - Cylinder 1
A0569	Injector cutoff - Cylinder 2
A0570	Injector cutoff - Cylinder 3
A0571	Injector cutoff - Cylinder 4
A0572	Fuel balancing control off
A0573	Retarder brake
A0574	Glow Plugs Control
A0575	Malfunction Indicator Lamp Test
A0576	Service Vehicle Soon Lamp Test
A0577	Glow Plug Lamp Test
A0578	Glow Plug Test
A0579	Pre Injection Control
A0580	Fuel Rail Pressure Control Test
A0581	EGR Valve Control Test
A0582	Throttle Position Motor Control
A0583	Tachometer Control Test
A0584	Check Engine Lamp Test
A0585	Turbo EVRV
A0586	Turbocharger Control
A0587	Glow Relay Command
A0588	Exhaust Brake Command
A0589	Retarder Command
A0590	DPF Injector Shut-Off Valve - With DPF Injector Tester
A0591	DPF Injector Shut-Off Valve - Without DPF Injector Tester
A0592	Linear Solenoid 5
A0593	Linear Solenoid 6
A0594	Linear Solenoid 7
A0595	Brake System Log Data Clear
A0596	Mimamori Data Clear
A0597	Main Relay (PowerTrain Relay)
A0598	A/C Compressor Relay
A0599	Block Learn Multiplier (BLM) Learn
A0600	Fuel Open Loop
A0601	Block Learn Multiplier (BLM) Reset
A0602	Idle Target
A0603	Throttle Position Sensor (TPS) Minimum Learn Algorithm Reset
A0604	VCPS (CAM Phaser) Exhaust Duty Cycle
A0605	VCPS (CAM Phaser) Exhaust Desired Position
A0606	Purge Solenoid Valve Opening Additive Correction
A0607	Crank Target Wheel Error Learn (TEC Learn)
A0608	Camshaft Position Actuator Solenoid Valve
A0609	Engine Oil Pressure Control Solenoid Valve
A0610	Fuel Pressure - Low Side
A0611	Fuel Pressure Regulator
A0612	H02S Service Bay Test
A0613	Ambient Air Temperature Calculation Reset
A0614	H02S Heater Resistance Learned Values Reset
A0615	H02S Learned Values Reset
A0616	Urea Fluid Tank Heater Coolant Control Valve
A0617	Urea Fluid Injector
A0618	Urea Fluid Reverting Valve
A0619	Ignition Timing Retard
A0620	Desired Throttle Position
A0621	Engine Speed Command
A0622	EVAP Purge Solenoid Valve Command
A0623	Fuel Pump Relay Command
A0624	H02S 1 Heater Command
A0625	H02S 2 Heater Command
A0626	A/C Compressor Clutch Relay Command
A0627	Cooling Fan Relay 1
A0628	Cooling Fan Relay 2 Command
A0629	Engine Controls Ignition Relay Command
A0630	Injector 5 forced drive
A0631	Injector 6 forced drive
A0632	Cylinder 5 balance test
A0633	Cylinder 6 balance test
A0634	Brake deceleration
A0635	ASR activated lights test
A0636	ASR warning light test
A0637	Exhaust pump relay test
A0638	Exhaust brake cut off test
A0639	ABS warning light test
A0640	EBD warning lamp test
A0641	ASR start lamp test
A0642	ASR warning lamp test
A0643	Common Rail Pressure Control Test
A0644	Injector Balance Test
A0645	EGR Control Test
A0646	Air conditioning compressor test
A0647	Boost pressure actuator
A0648	EGR solenoid valve
A0649	Preheat indicator
A0650	Preheating time control
A0651	Fault indicator light
A0652	Fuel filter heater
A0653	Fuel consumption display test
A0654	Function test

A0655	Time calibration revised unchain
A0656	Time calibration revised
A0657	Speed Testing of Engine
A0658	Illumination lights signal testing
A0659	Illumination lights control test
A0660	Odometer lamp test
A0661	Front supply pump test
A0662	Pressure waveform amendments unchain
A0663	External detector test
A0664	Common rail pressure test
A0665	Close the test cylinder
A0666	EGR cooler output test
A0667	Exhaust valve lamp test
A0668	Engine signal device (check lights) test
A0669	EGR valve testing
A0670	Treheat Time Relay Test
A0671	Treheat Time Relay Indicator Test
A0672	Exhaust gas recirculation valve testing
A0673	Engine Control
A0674	Installation Inspection
A0675	Engine brake exhaust throttle valve
A0676	Trouble lamp
A0677	Cold start lamp
A0678	Check lamp test
A0679	Shift solenoid valve 1
A0680	Shift solenoid valve 2
A0681	Shift solenoid valve 3
A0682	Gear shift solenoid valve 4
A0683	Linear pressure solenoid valve 1
A0684	Linear pressure solenoid valve 2
A0685	Linear pressure solenoid valve 3
A0686	Linear pressure valve 4
A0687	Exhaust brake (AT) cut-off request
A0688	Actuator Test (Type 0)
A0689	Actuator Tests / Data Reset (Type 26)
A0690	Actuator Test (Type 24)
A0691	Pre-Injection Stop
A0692	Actuator Test for Tank and Pressure Line Heater
A0693	Blind Spot Information (BSI)
A0694	VVT
A0695	DPD Regeneration 4J
A0696	Turn Signal Lamp
A0697	Brake Lamp
A0698	A/C Fan Relay
A0699	Wiper
A0700	Rear Fog Light Test
A0701	Head Light Test
A0702	Tail Light Test
A0703	Daytime Running Lights Test
A0704	Injector Forced Drive R2
A0705	Injector Cutoff R2
A0706	SCR Purge