



TATA Function List

Note:

✓	Functions marked with ✓ is fully supported.						
	System	ECU Info	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Func
	PRIMA\IC	✓	✓	✓	✓		
	PRIMA\BCM	✓	✓	✓	✓	A0001, A0002, A0003, A0004, A0005, A0006, A0007, A0008, A0009, A0010, A0011, A0012, A0013, A0014, A0015, A0016, A0017, A0018, A0019, A0020, A0021,	S0001
	PRIMA\ABS	✓	✓	✓	✓		S0002, S0003
	PRIMA\ABS (PassThru)	✓	✓	✓	✓		
	LCV_407\EMS	✓	✓	✓	✓		
	LCV_407\ABS	✓	✓	✓	✓		S0002, S0003
	M&HCV_3LTR\VOITH	✓	✓	✓			
	M&HCV_3LTR\ABS	✓	✓	✓	✓		S0002, S0003
	ULTRA_SGI\EMS	✓	✓	✓	✓		
	ULTRA_SGI\ABS	✓	✓	✓	✓		S0002, S0003
	ULTRA_VP37\EMS	✓	✓	✓	✓		
	ULTRA_VP37\ABS	✓	✓	✓	✓		S0002, S0003

Special Function Table

S0001	Key Teach
S0002	VIN
S0003	Repair Shop Code OR Tester Serial NO

Active Test Table

A0001	Ignition Switch
A0002	Key In Switch
A0003	Roof Lamp Dash Switch
A0004	Steering Adjust Switch
A0005	Co-Driver Door Ajar Switch
A0006	Driver Door Ajar Switch
A0007	Hazard Warning Switch
A0008	Lift Axle Switch
A0009	Parking Light Switch
A0010	Head Lamp Low Beam Switch
A0011	Rear Fog Lamp Switch
A0012	Front Fog Lamp Switch
A0013	Pintle Hook Switch
A0014	Spare Input 1
A0015	Diffrence FR Switch
A0016	Diffrence LR Switch
A0017	Diffrence FR Pressure Switch
A0018	Diffrence LR Pressure Switch
A0019	Spare Input 2
A0020	Cab Tilt Enable Switch
A0021	Reverse Gear Switch
A0022	Tamper Switch
A0023	Brake Retarder
A0024	Cab Tilt Motor Feedback
A0025	Driver Door Unlock Switch
A0026	Driver door lock switch
A0027	HRVM Switch
A0028	Roof Lamp Bunk Switch
A0029	Low Wash Level Switch
A0030	Head Lamp Switch
A0031	Wiper Park Feedback
A0032	Head Lamp High Beam Switch
A0033	Wiper On Switch
A0034	Wiper Intermittent Switch
A0035	Spare Input 3
A0036	Key Cylinder Unlock Driver
A0037	Wash On Switch
A0038	Turn Left Switch
A0039	Turn Right Switch
A0040	Driver Window Switch up
A0041	Driver Window Switch Down
A0042	Co-Driver window switch Up
A0043	Co-Driver window switch Down

A0044	Auto Lights Switch
A0045	Seat Belt Switch
A0046	Crank
A0047	Brake Switch
A0048	Range Select Switch
A0049	Front Fog Lamp
A0050	Rear Fog Lamp
A0051	Stop Lamps
A0052	Reverse Lamps
A0053	Left Head Lamp Low Beam
A0054	Right Head Lamp Low Beam
A0055	Left Head Lamp High Beam
A0056	Right Head Lamp High Beam
A0057	Parking LH Marker Lamps
A0058	Parking RH Marker Lamps
A0059	Left Indicator Lamp
A0060	Right Indicator Lamp
A0061	Left Indicator Lamp Trailer
A0062	Right Indicator Lamp Trailer
A0063	Roof Light
A0064	Driver Power Window Control
A0065	Co-Driver Power Window Control
A0066	All Doors Control
A0067	PTO Solenoid
A0068	Different LR Solenoid
A0069	Different FR Solenoid
A0070	Lift Axle Solenoid
A0071	Pintle Hook Solenoid
A0072	Steering Wheel Adjust Solenoid
A0073	Wiper On Relay
A0074	HRVM Relay
A0075	Cab Tilt Relay
A0076	Tipper Horn Relay
A0077	Hooter Relay
A0078	Spare Output HSD 1
A0079	Spare Output HSD 2
A0080	Spare Output HSD 3
A0081	Spare Output HSD 4
A0082	Spare Output LSD 1
A0083	Range Select Relay